

DH023



PARTS LIST

- | | | |
|-----|---|-------------|
| 1. | 1 | BASE |
| 2. | 1 | BACK WALL |
| 4. | 1 | LH END WALL |
| 5. | 1 | RH END WALL |
| 7. | 1 | FIRST FLOOR |
| 8. | 1 | TOP FLOOR |
| 9. | 1 | ROOF |
| 10. | 1 | ROOF FRONT |
| | 2 | LANDING |

DORMERS

- | | |
|-----|-----------------|
| 1 | DORMER FRONT |
| 2 | DORMER SIDES |
| 1 | DORMER ROOF |
| 1 | BARGE BOARD |
| 2 | SASHES |
| 1pr | HINGES & SCREWS |

DH023

SINGLE UNIT

BEFORE GLUING - ASSEMBLE THE HOUSE TOGETHER WITHOUT GLUE TO FAMILIARISE YOURSELF WITH ALL THE COMPONENTS AND HOW THEY GO TOGETHER







- Picture 1** Fit the side walls into base, locate the back into the grooves in base ensuring the back is in the grooves on the side walls.
Fit inner floors (remember the top floor has retaining lugs which fit around the side walls)
- Picture 2** Fit landings into their respective grooves.
- Picture 3** Fit the hinges to the underside of the roof with the screws provided.
- Picture 4** Fit the roof onto the carcass making sure that the grooves fit snugly over the side walls and back
- Picture 5** House/Shop front Fit the window sashes (top sash first)
Place door into recess
Glue on inner door surround (Do not allow glue to touch door lugs)
Allow to dry for approx. 1 hour before opening
- Picture 6** House Bay Fit bay retainers into the top and bottom grooves on inside of bay front and bays sides (tape will these in position while glue is drying)
Shop Bay Fit Bay front and sides into the grooves on the window board Fit bay base into grooves on the underside of the window board
- Picture 7** Fit all window sashes as per picture 5
Fit bay to house/shop front
Glue on the bay roof. Fit gallows brackets either side of the door-under bay roof (house only)
Glue cills in place
Glue on the brick lintels
Glue shop sign board on
- Picture 8** Fit hinges to the inner side of the front (with screws provided) and attach to side wall
- Picture 9** Dormers. Fit the sashes as per picture 6
Put a line of glue along the long edge. Use tape to hold the two halves of the dormer roof together while the glue sets (this can be removed later)
Glue dormer front into the grooves in the underside of dormer roof
Glue dormer sides into rebate both sides of dormer front
- Picture 10** Stairs Treat each set of steps separately
1st flight on each floor. Glue stair railings to the side of steps (this goes on the opposite side to the one that will be to the inner wall)
Slide handrail over railings. Trim handrail after gluing
Glue newels to both ends - The bottom newel fits flush with the bottom of the bottom tread. The top newel fits flush to the top of the top tread.
2nd flight on each floor. As above but only fit newel to the top
- Picture 11** Fit stairs into house
- Picture 12** Glue on dormers and chimney

PAINTING DO NOT PAINT INTO GROOVES OR COMPONENTS THAT FIT INTO GROOVES

WARNING ALWAYS WEAR A MASK WHEN SANDING MDF

THIS PRODUCT MUST BE ASSEMBLED BY AN ADULT
NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS

DH023

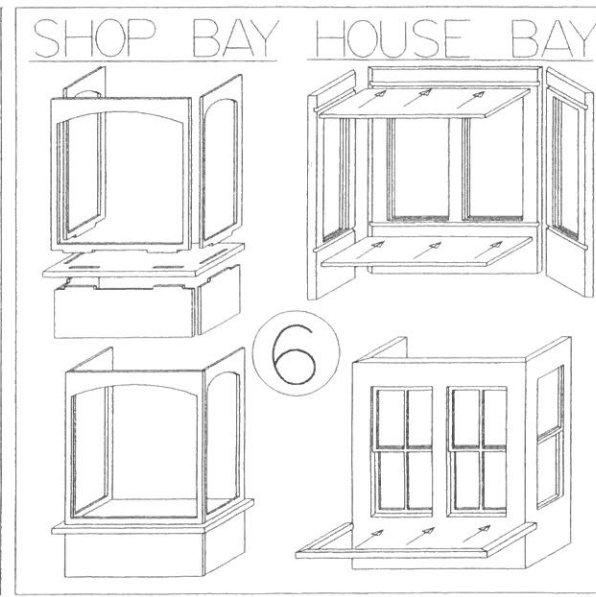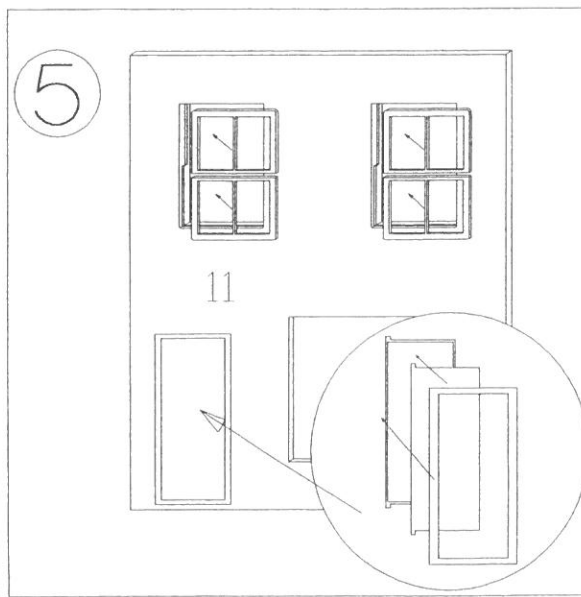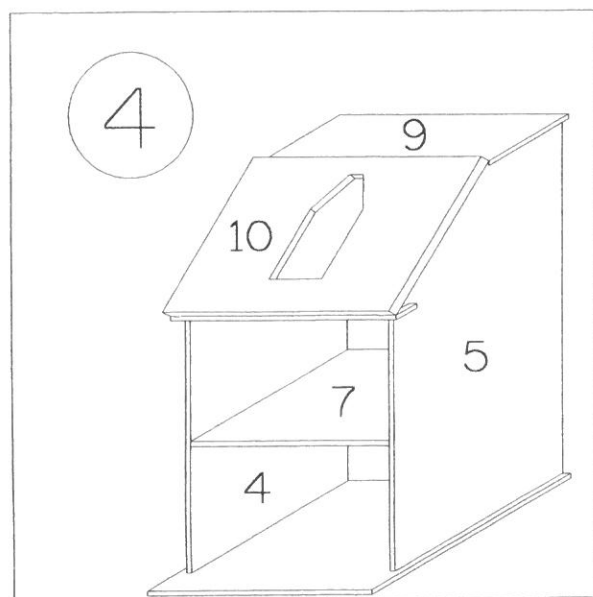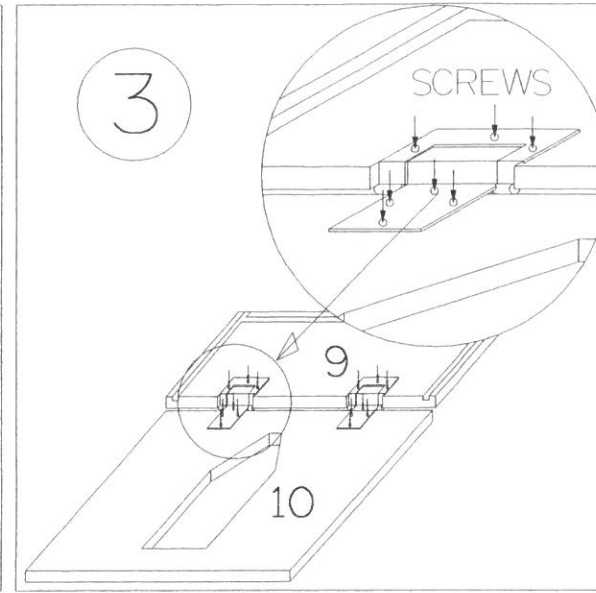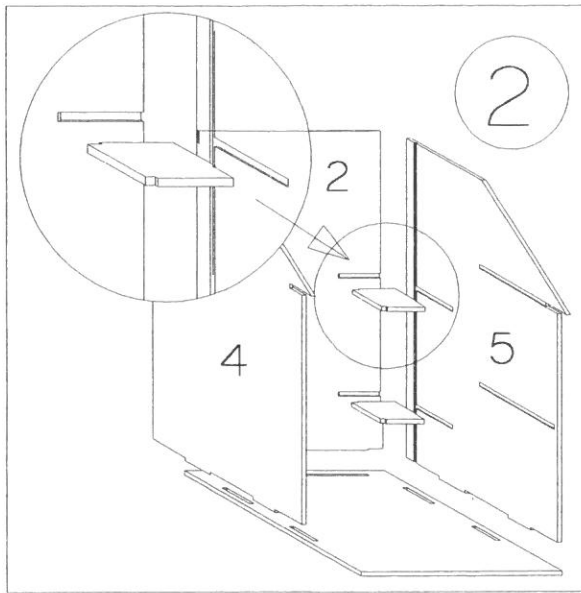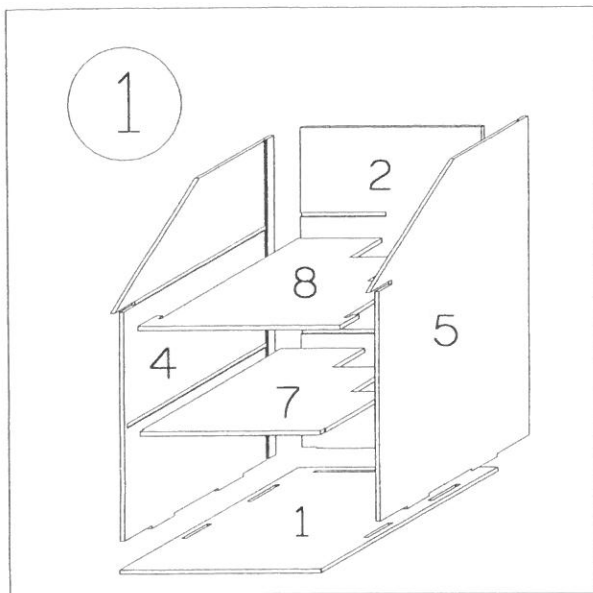

DH023

