



PARTS LIST

When requesting missing or damaged parts please prefix with 1269

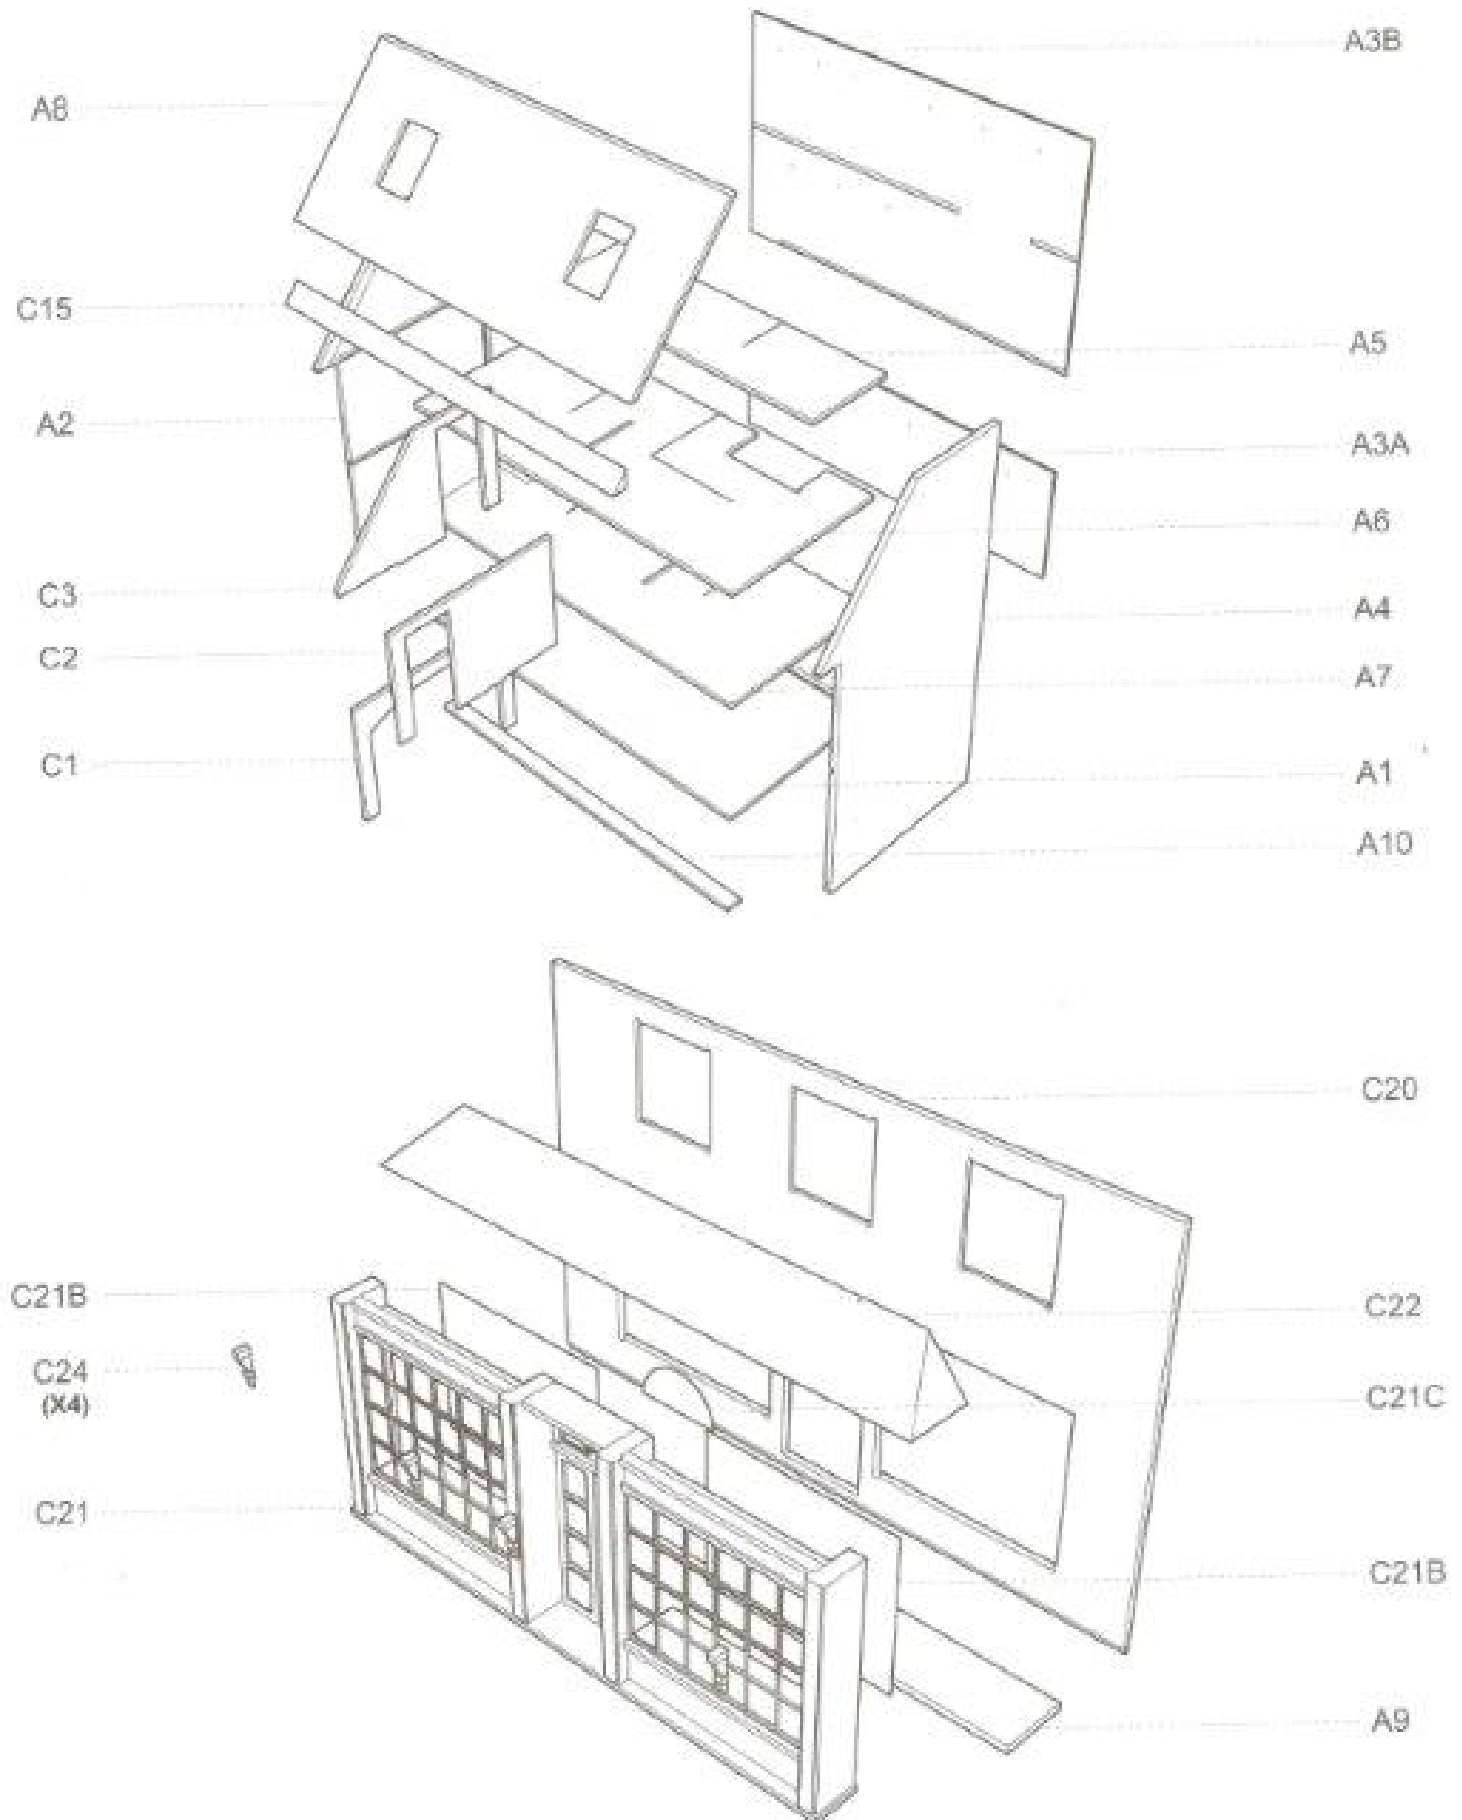

PARTS LIST

When requesting missing or damaged parts please prefix with 1269

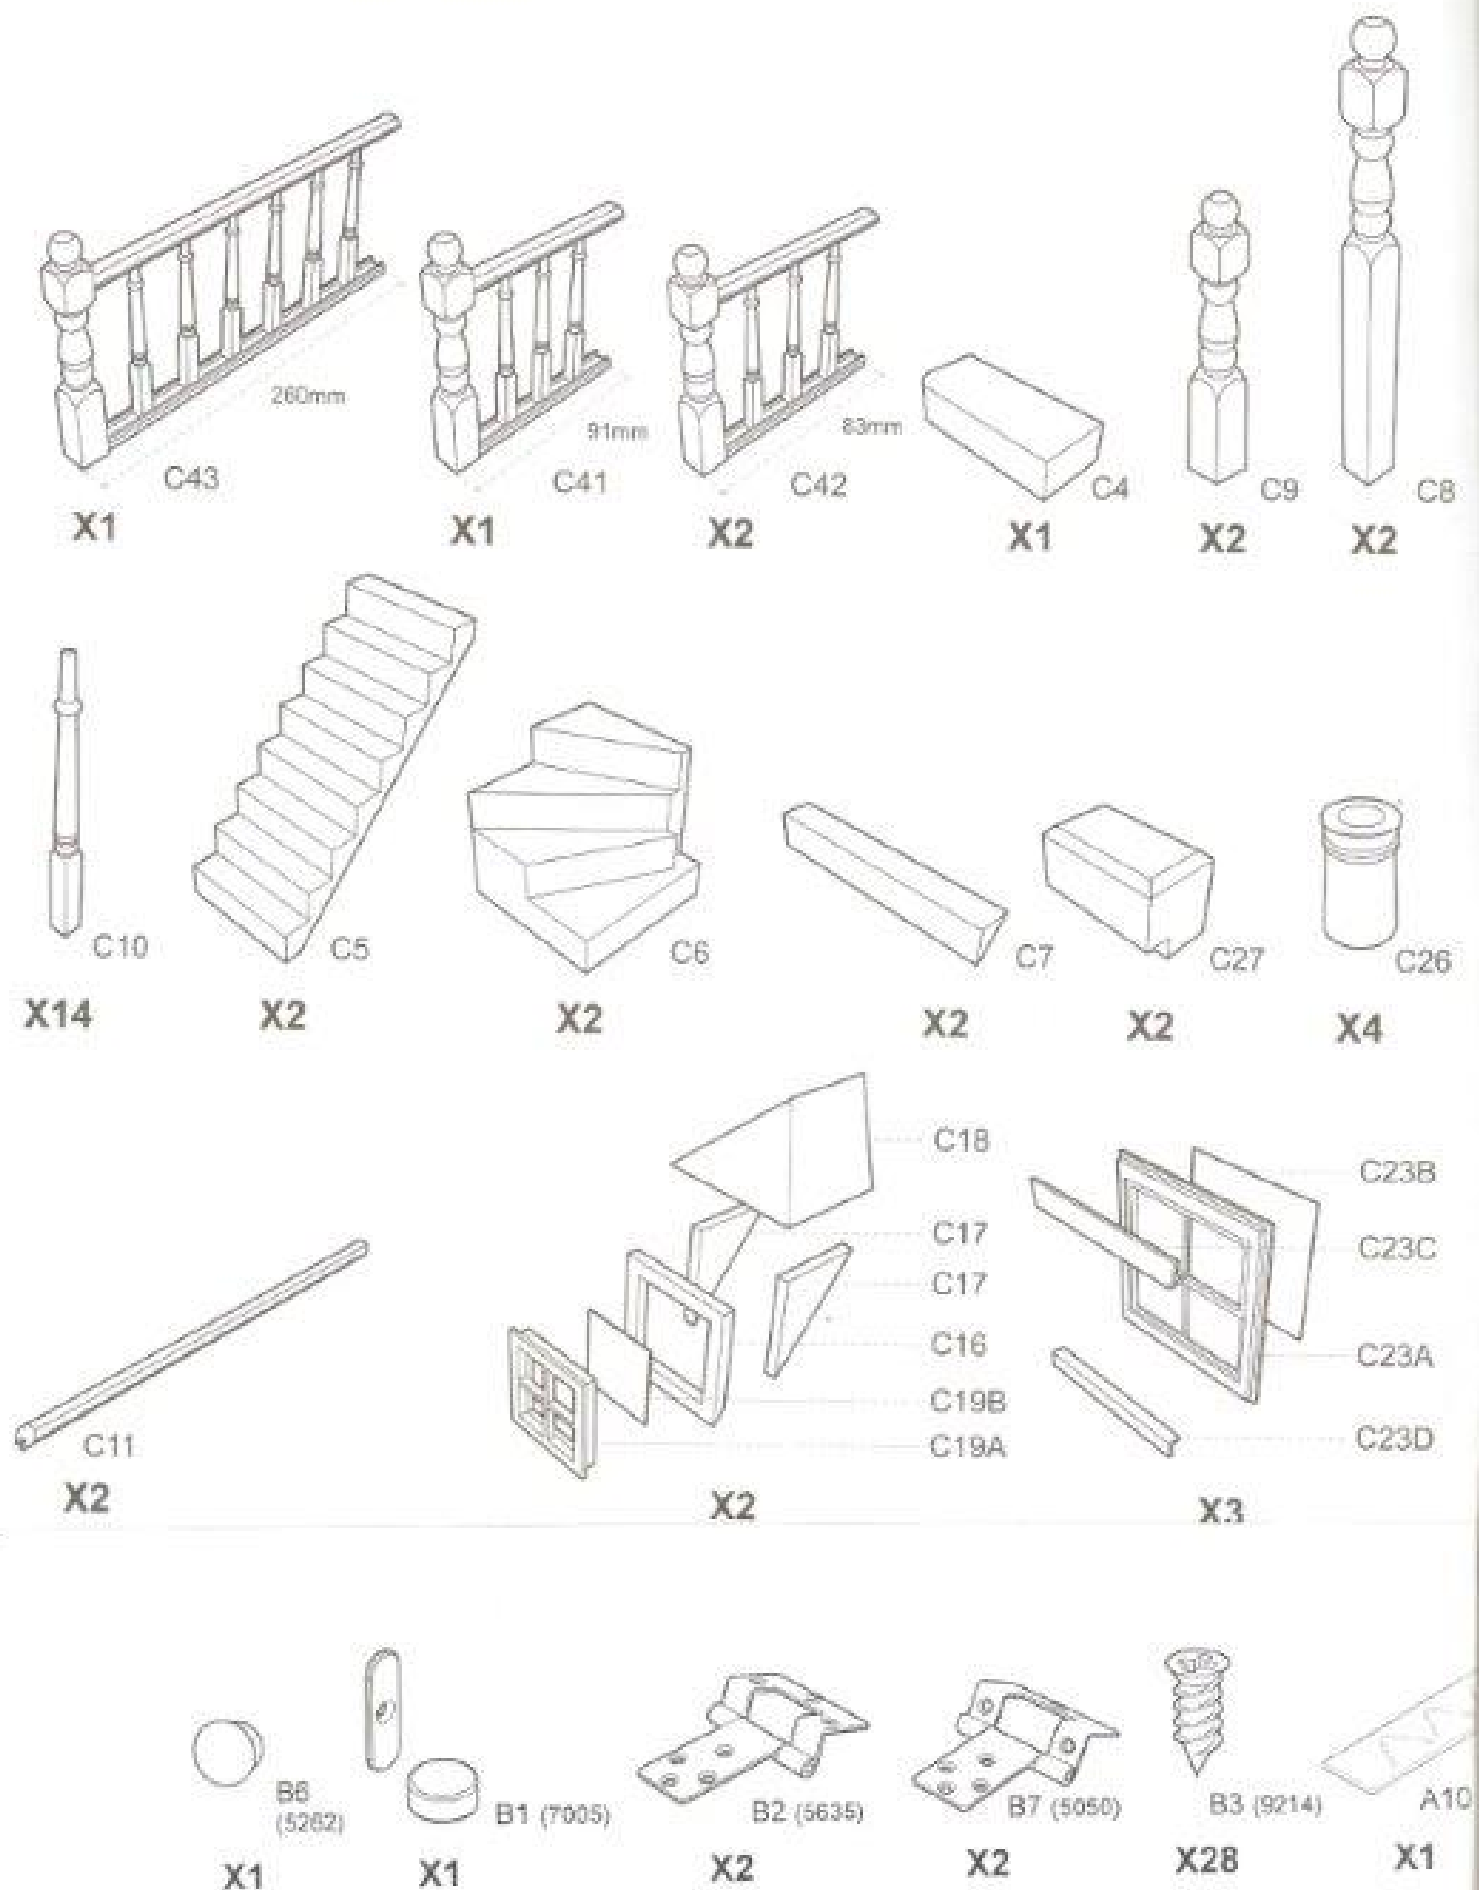


BUILD INSTRUCTIONS

When requesting missing or damaged parts please prefix with 1269


1

Masking tape panels together for support when gluing

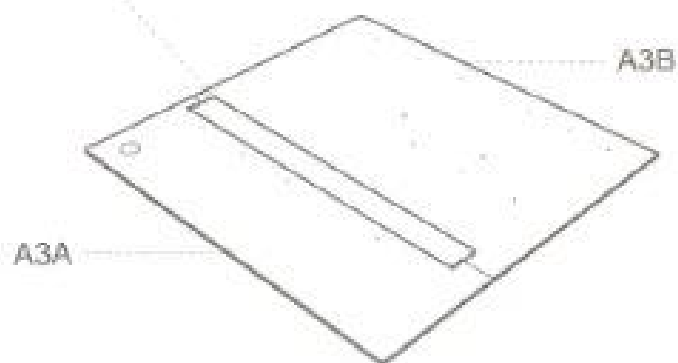


2


Allow to dry on a flat surface

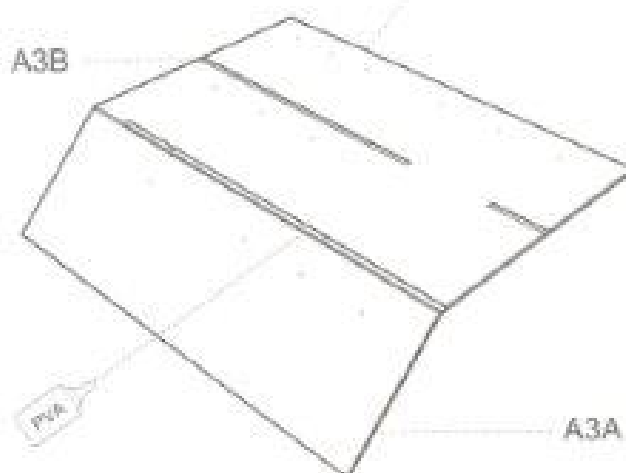


3

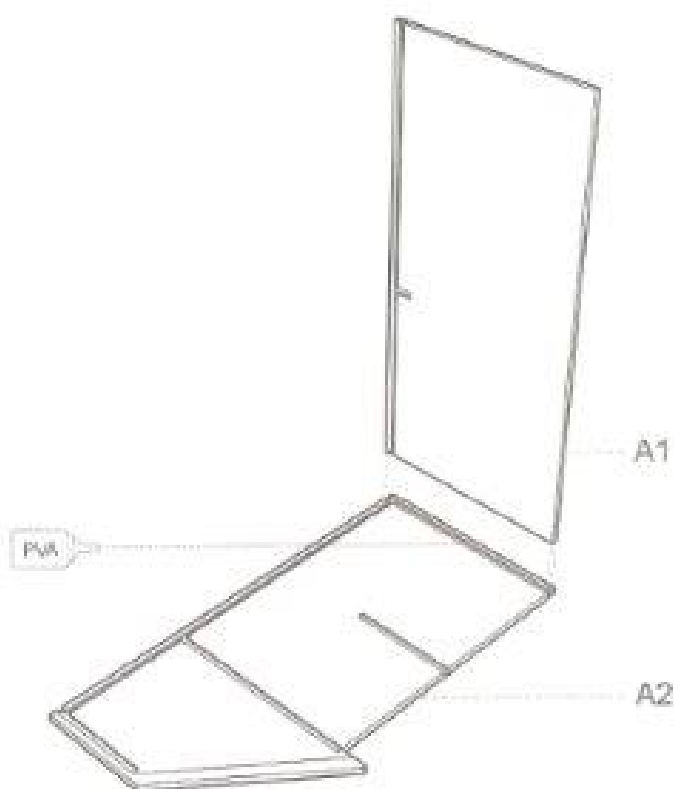


4

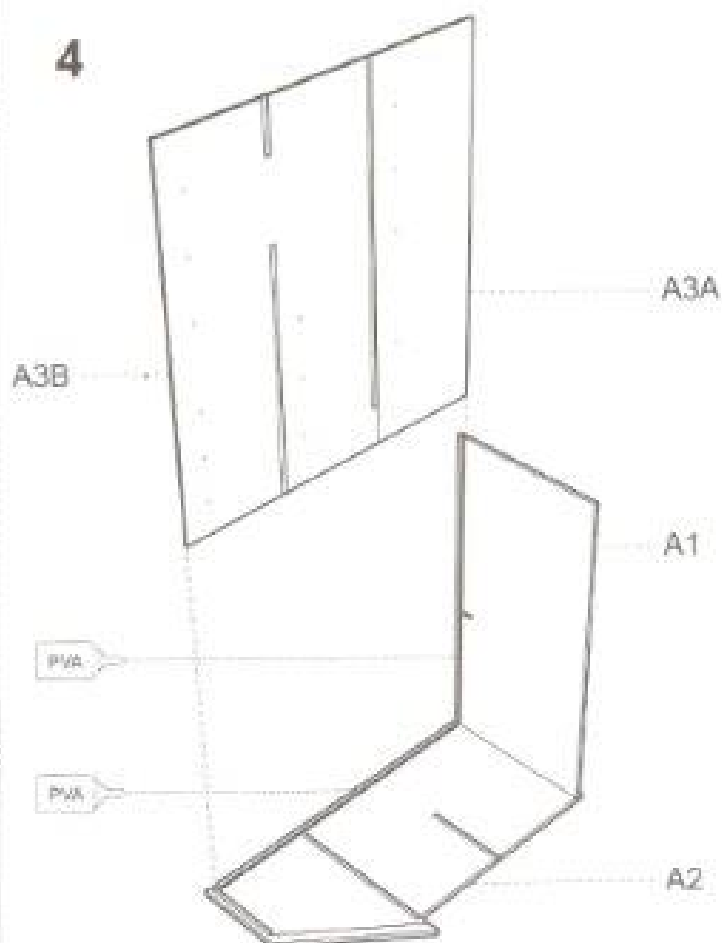


5

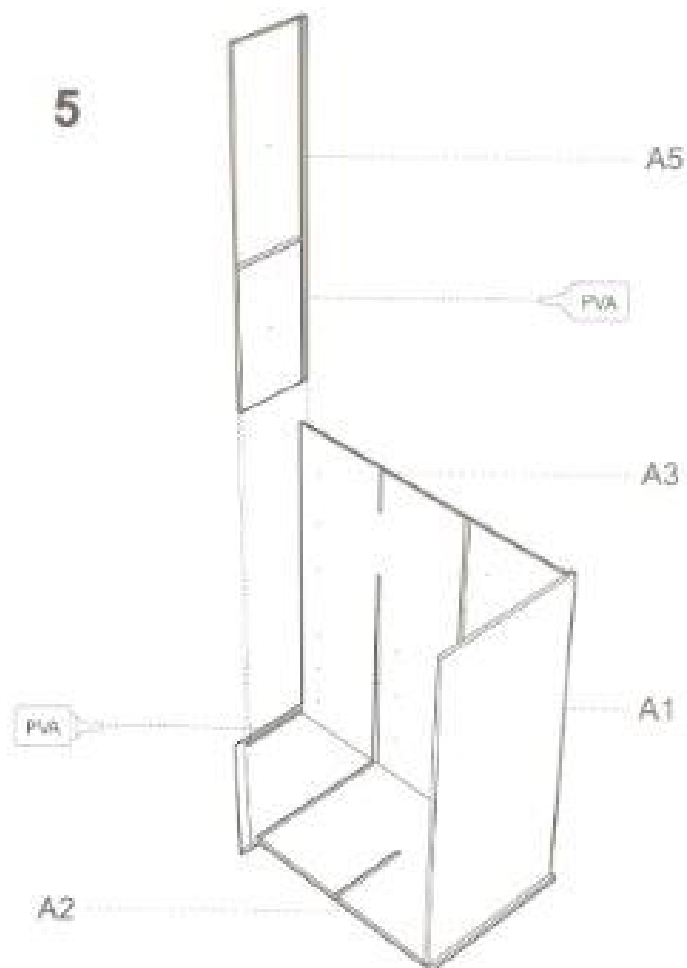


6

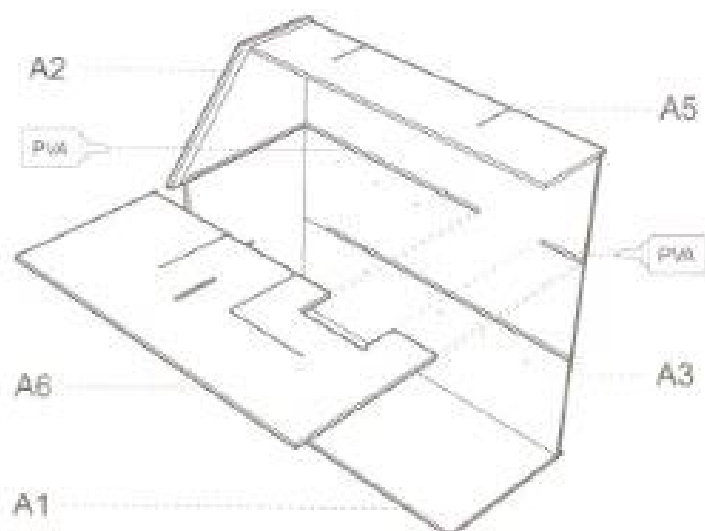


7

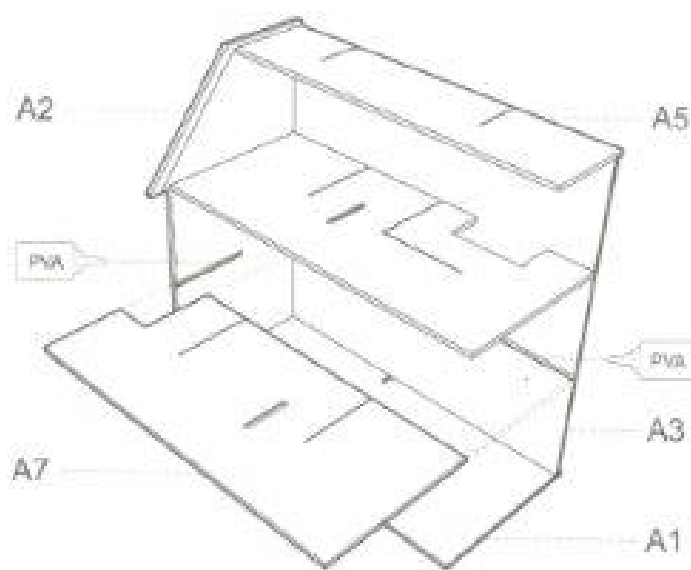

8

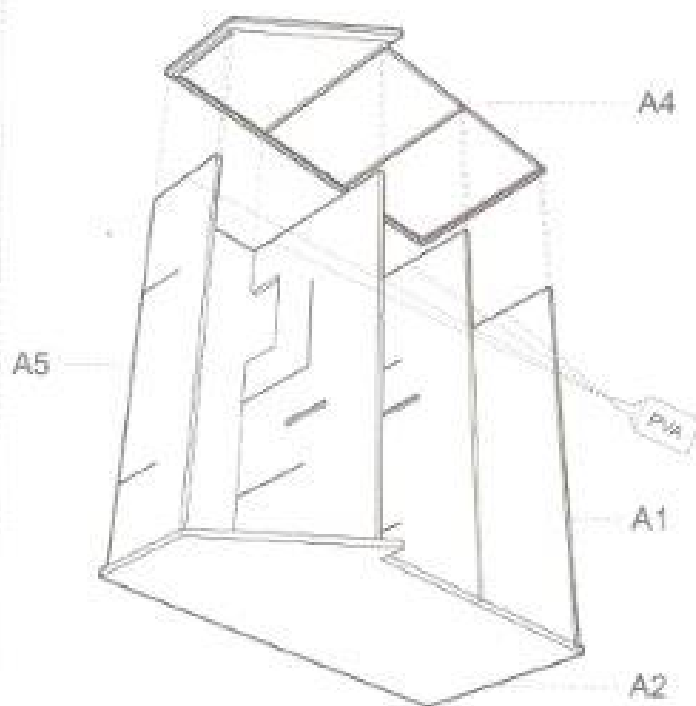


9

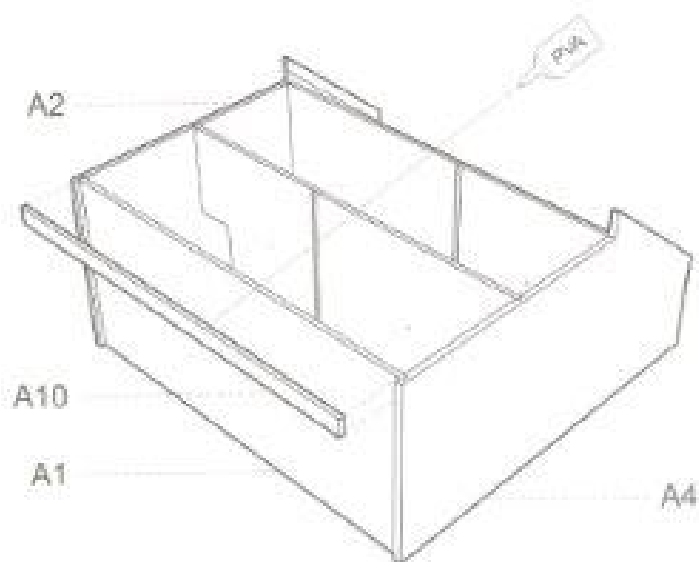

10




11

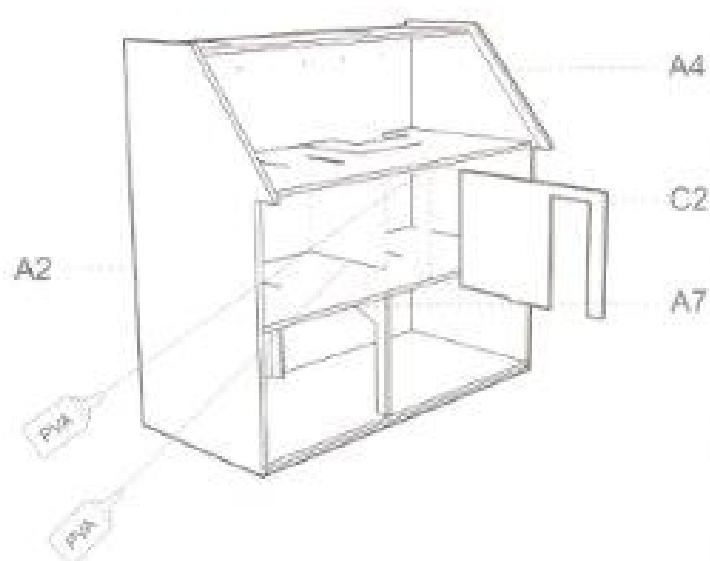


12




13

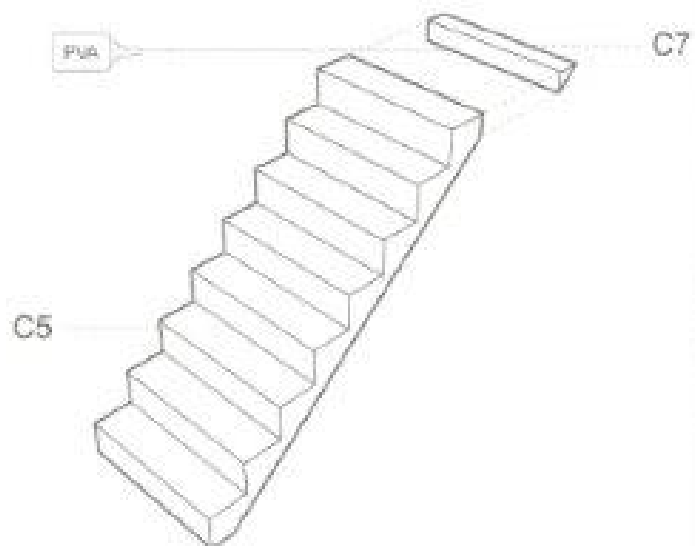


14

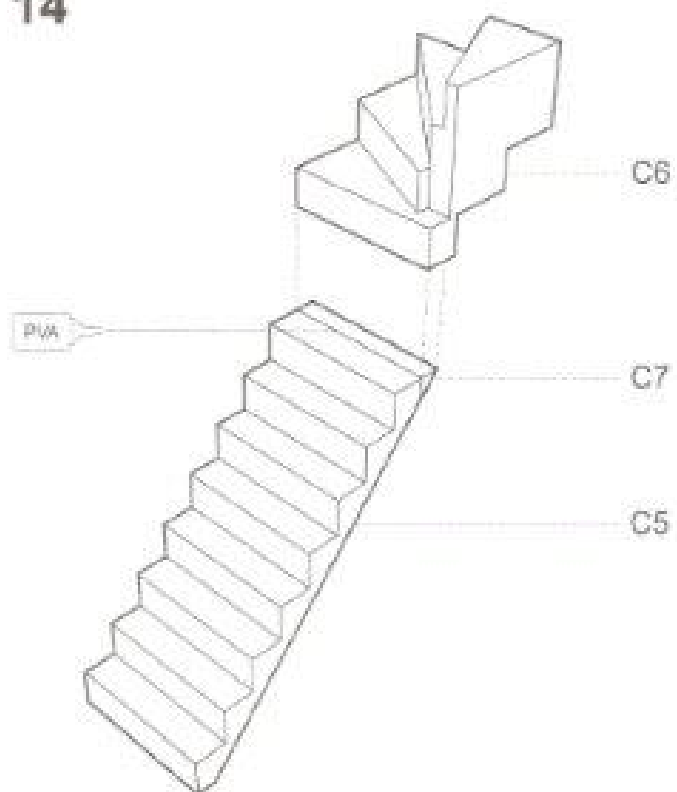


15

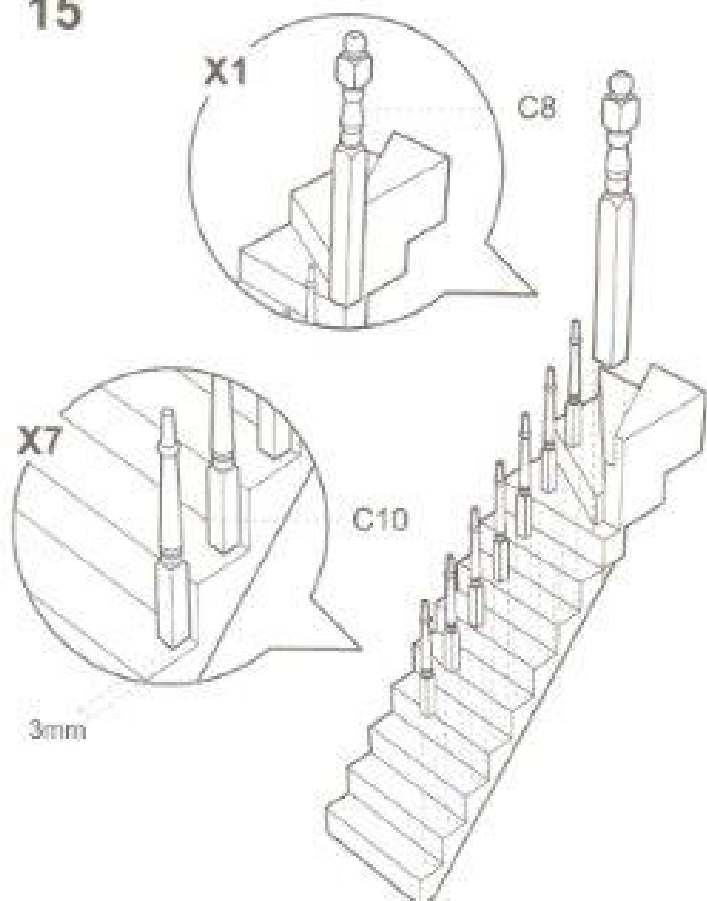


16

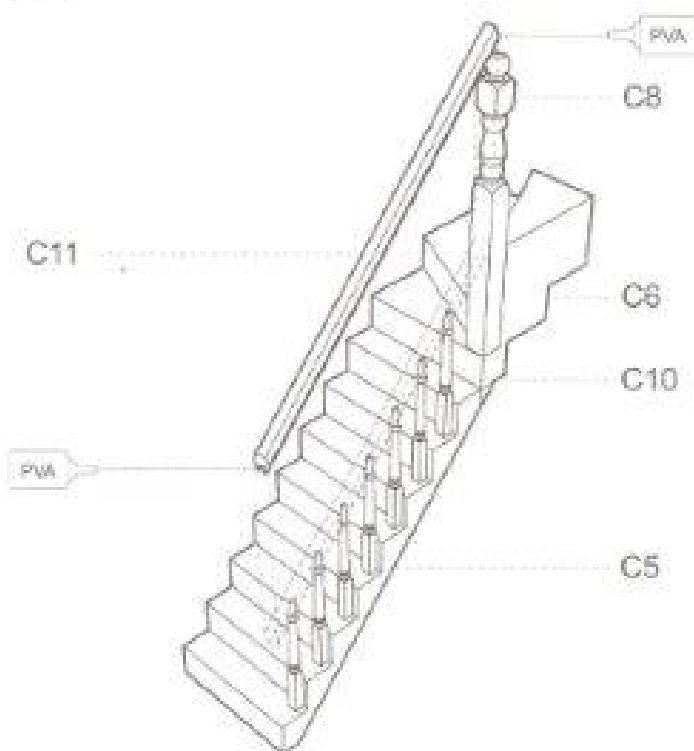


17

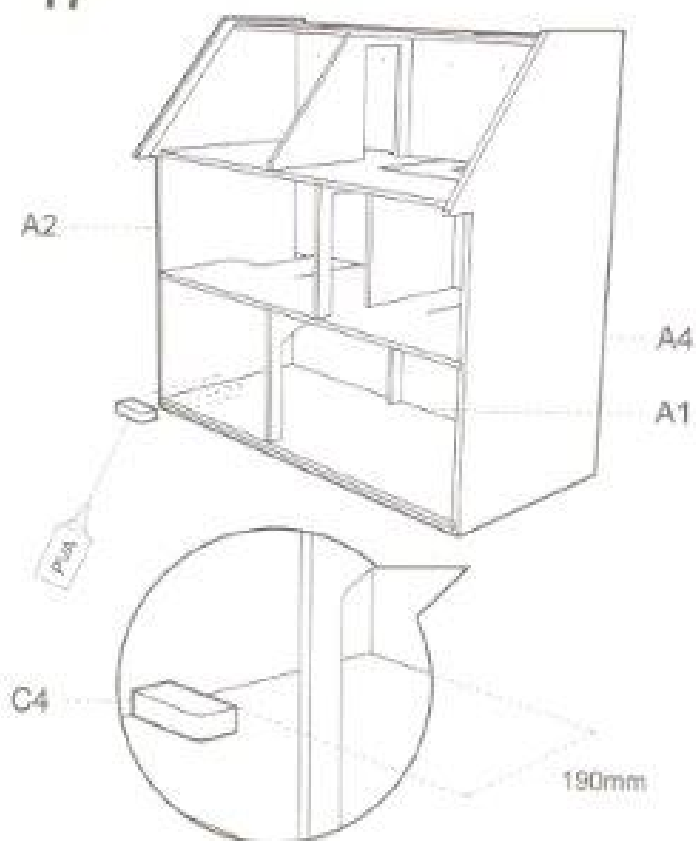


18

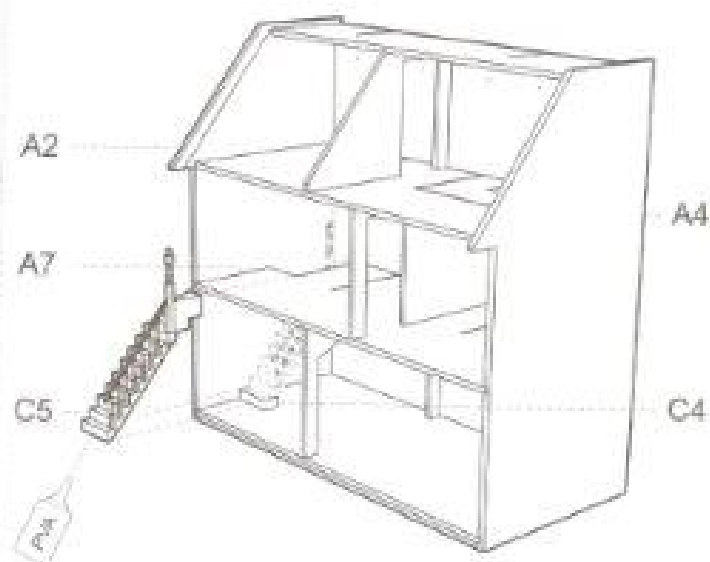


19

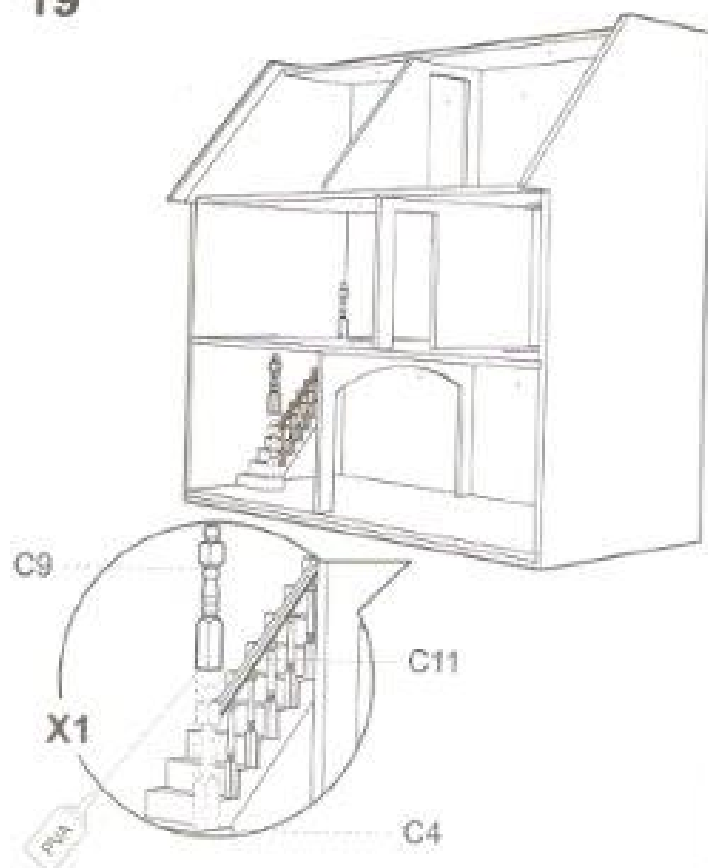


20

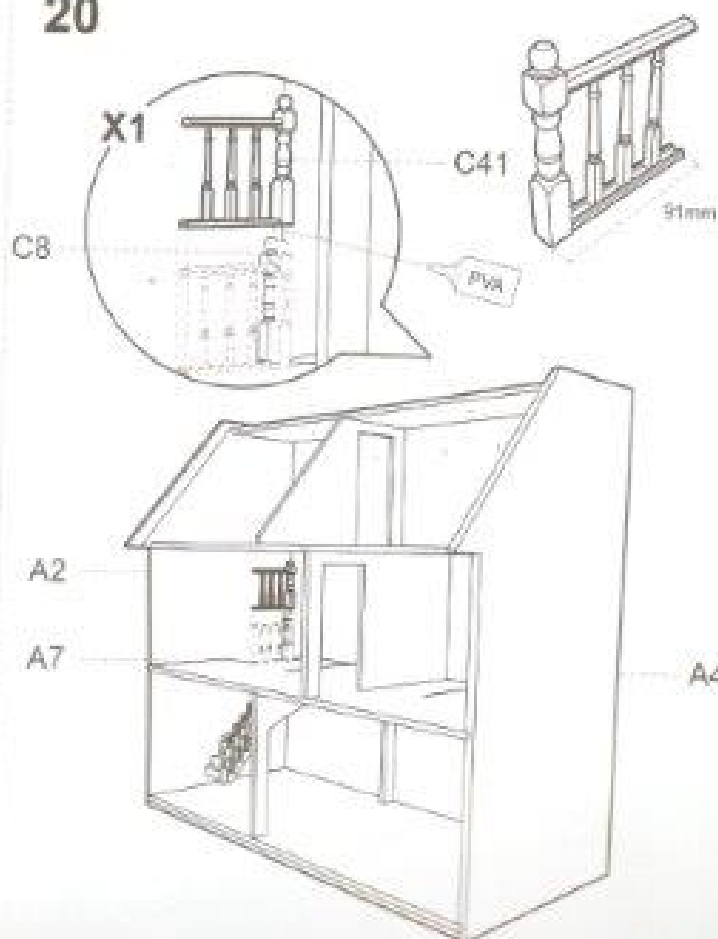


21

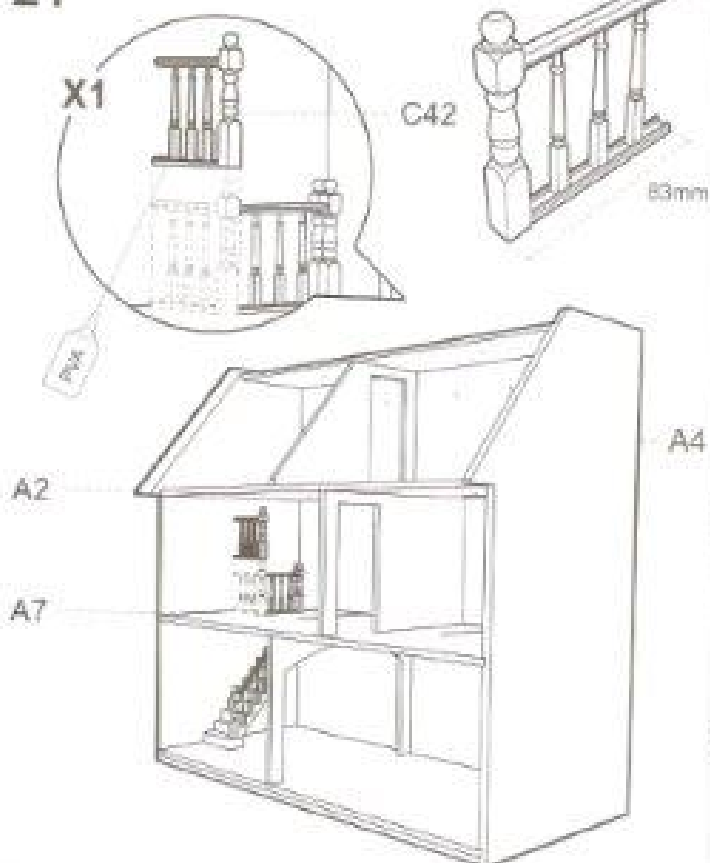


22

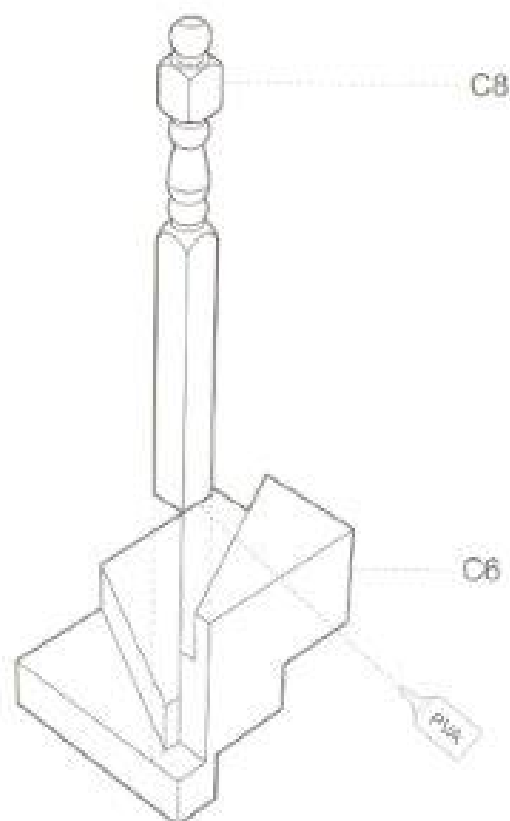


23

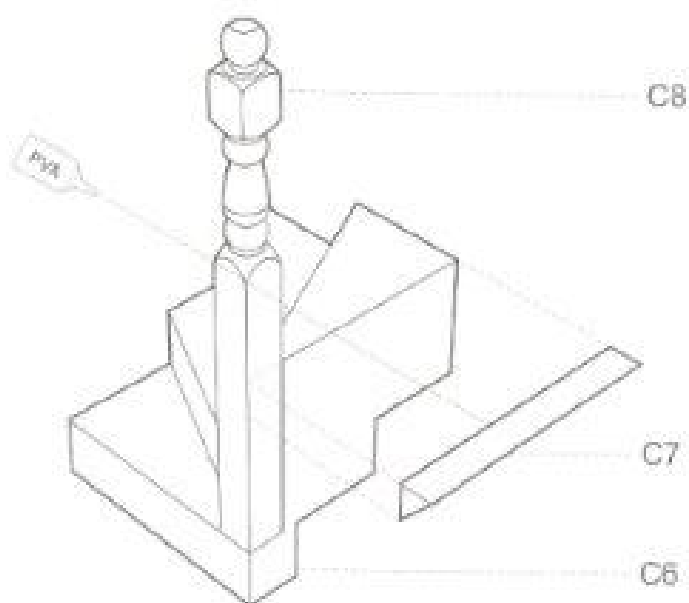


24

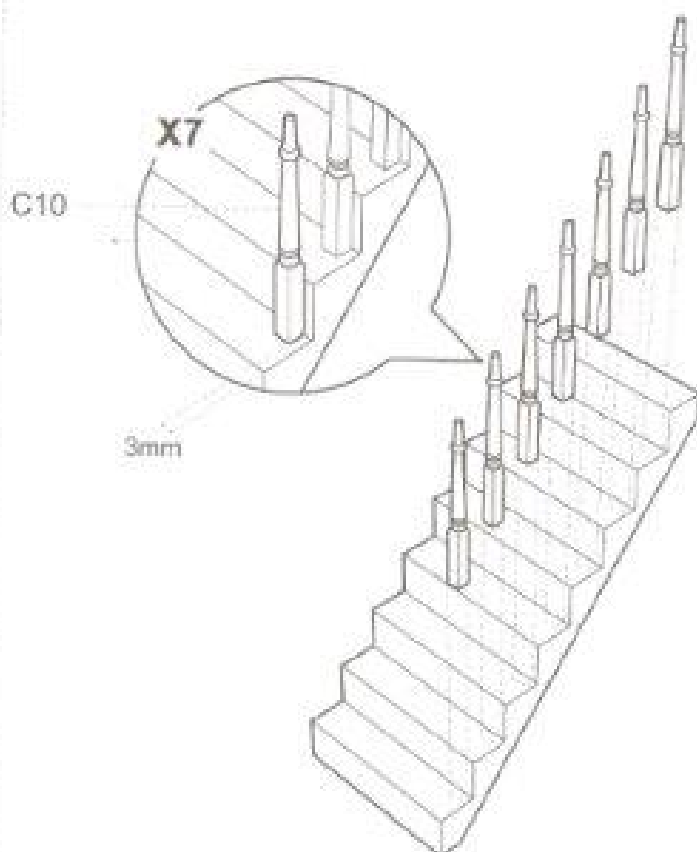


25

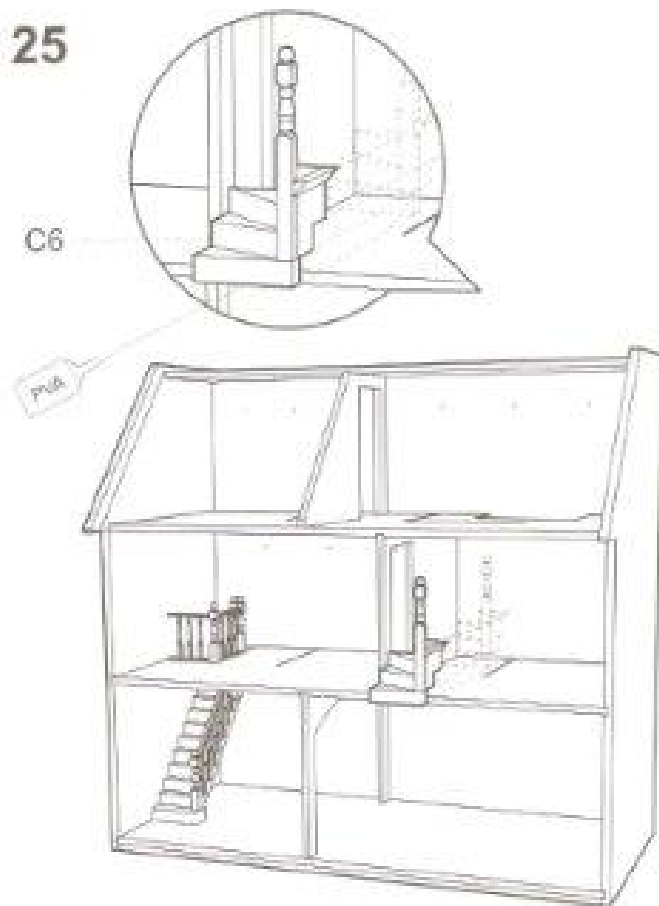


26

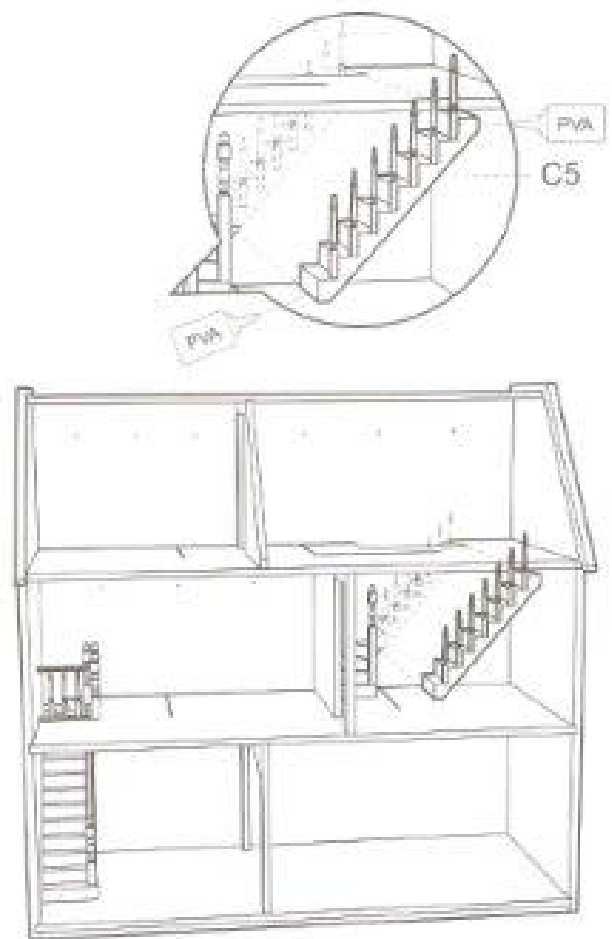


27

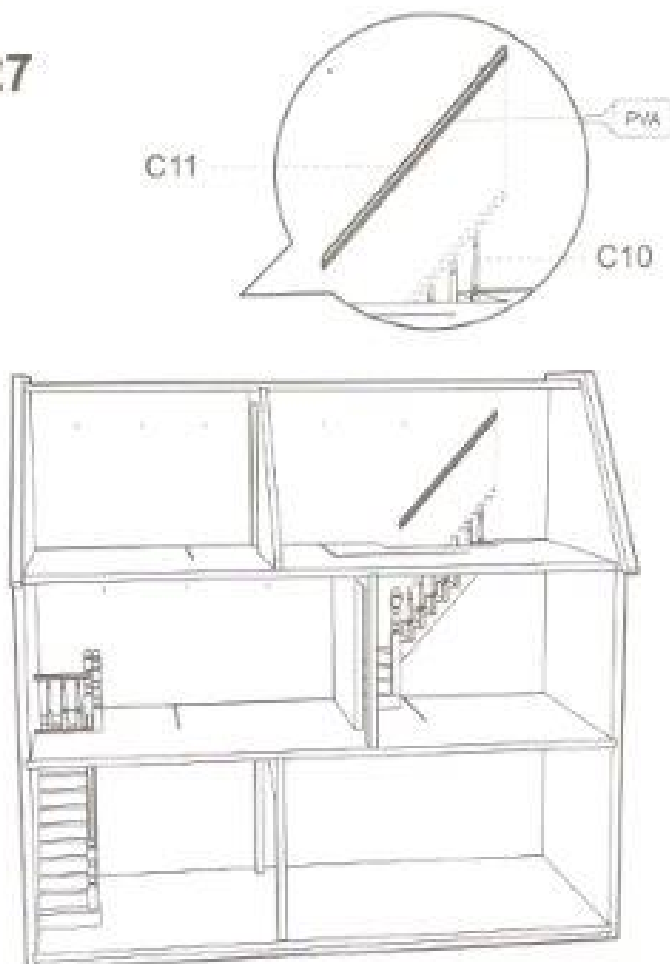


28

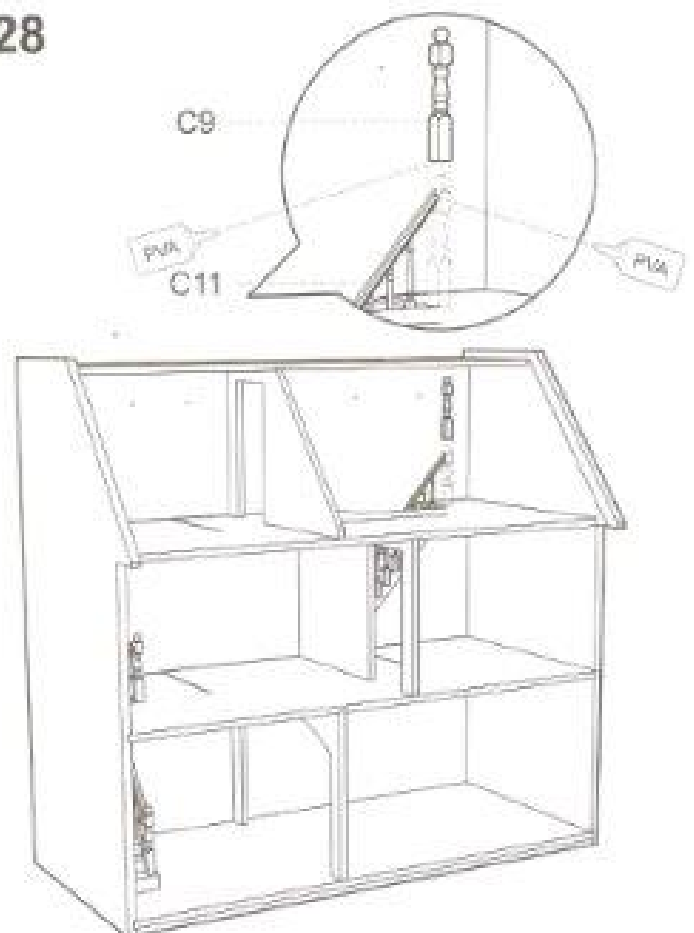



29

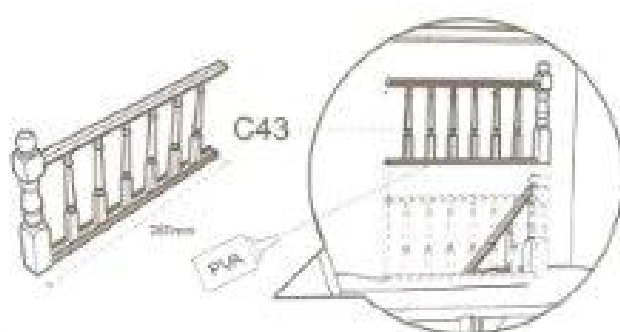

30

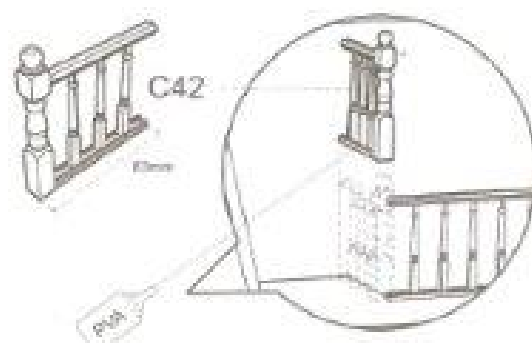

31

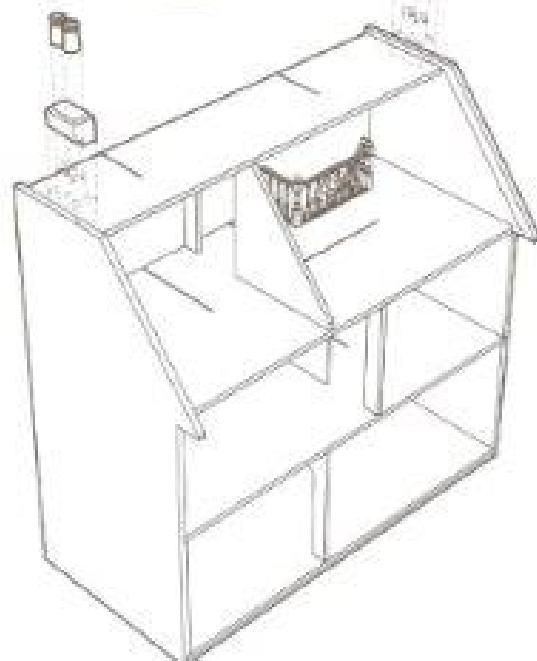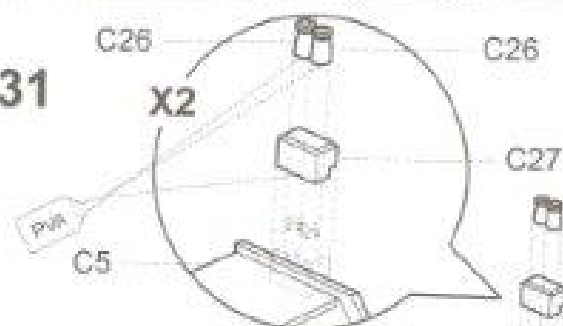

32

