




The Dolls House Emporium
 Distributed by Streets Ahead Dollshouse.
 PL7 4JH, United Kingdom.
website: www.dollshouse.com
e-mail: products@dollshouse.com

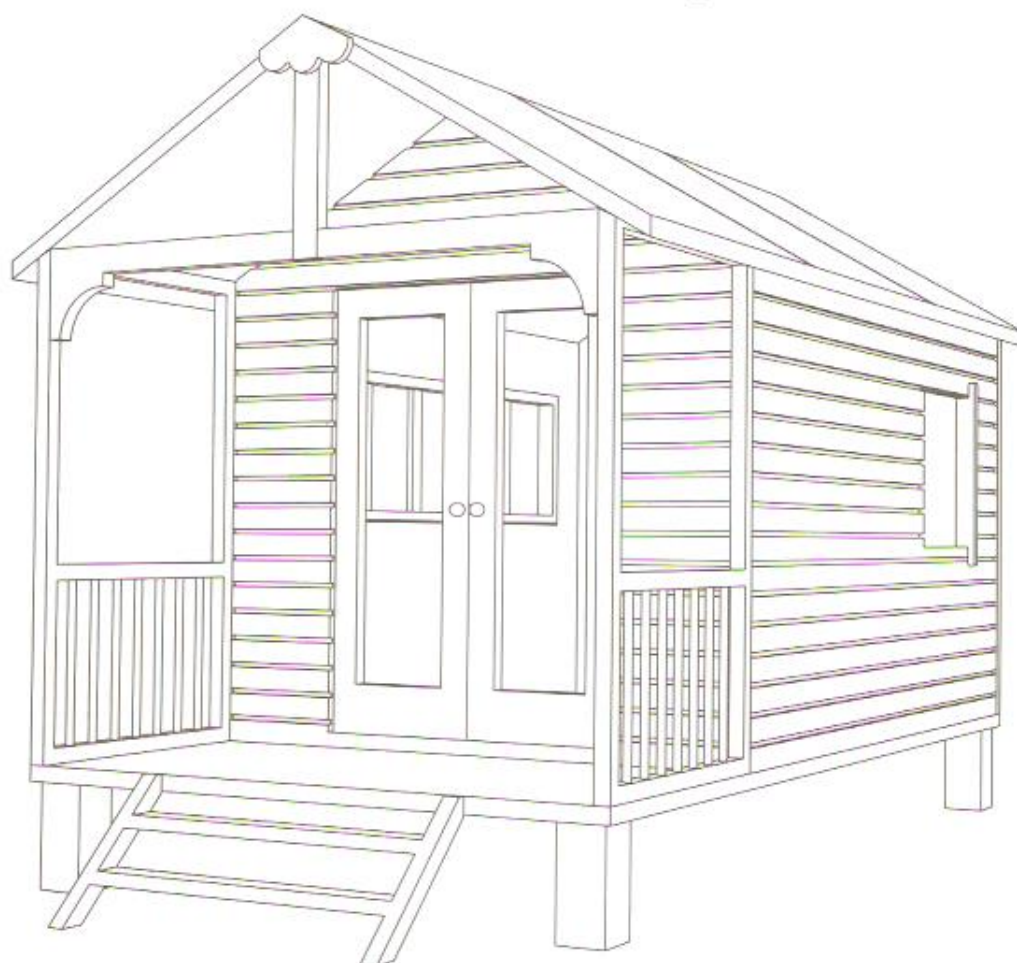

THE SUMMER HOUSE KIT INSTRUCTIONS

Unpack your kit and study the contents carefully, relating the parts to the contents list and drawings. In the unlikely event of there being a missing or broken part then please ring 0845 434 9202 and our staff will ensure that the problem is dealt with promptly.

We recommend that all Dolls House Emporium kits are dry built first. Please read through all the instructions carefully before commencing. If, at any stage you would like any advice or assistance, please ring us on 0845 434 9202 and we will be pleased to answer any queries.

It is not recommended to keep your dolls' house in a conservatory - due to the extremes of temperature.

Version 2

THE SUMMER HOUSE KIT PARTS (not to scale)


When requesting a missing or damaged part please prefix part number with 1300



A1 Base



A2 Front

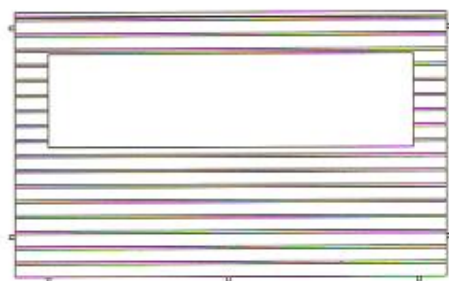

A4 LH Wall




A6 LH Railing



A3 Back



A5 RH Wall

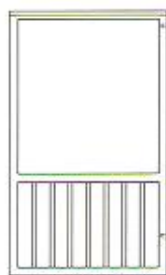

A7 RH Railing



A8 Window



A9 LH Roof



A10 RH Roof



A11 Steps



A12 Decoration (x2)



A14 Stilt (x4)



A13 Frame



A15 Frame Support

CONSTRUCTION

1



Dry build your kit now using masking tape and mark up correct orientation of stairs

NB: Whilst you dry build the kit, it is an ideal time to mark the panels and parts (lightly with pencil) that you wish to paint or treat before construction (e.g. ceiling, windows, doors etc). This is also a good time to decide how you would like to access the house. The construction method shown here allows the roof to lift off completely, but you may wish to add hinges to the roof, or keep a side panel loose for side access. Simply use your imagination!

Also we suggest that you work out the best time to decorate the various other parts in the kit. We recommend you do this during a dry build: a good idea is to create a list of what to do and when for, tasks such as papering rooms before putting the floors/ceilings in, fitting doors, installing lights, carpeting floors etc. When you have done this, run through the steps during another dry build to check your order will work.


This will give you more chance to become accustomed to the kit and can save a great deal of time and mistakes in the long run.

Happy building !

4




Apply glue to dowel holes in **A1** and **A4**. Locate **A4** as shown.

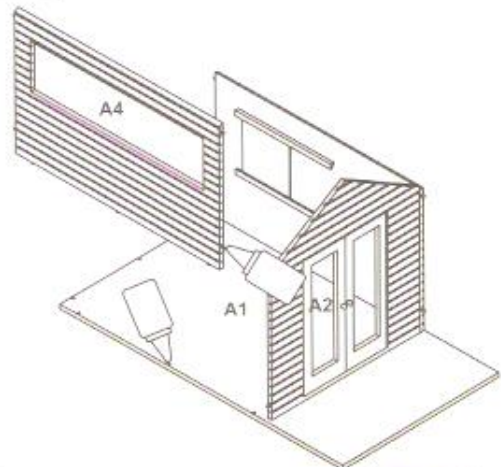

2




Apply glue to dowel holes in **A1** and locate **A2** as shown.

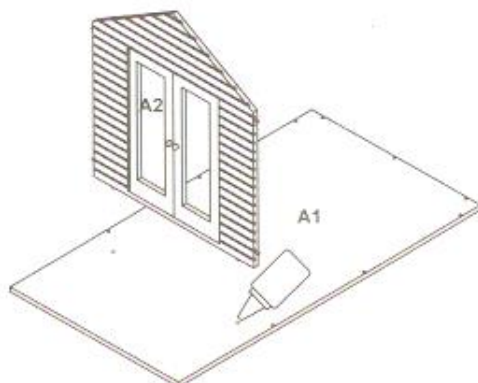

5




Apply glue to **A8** and locate as shown.

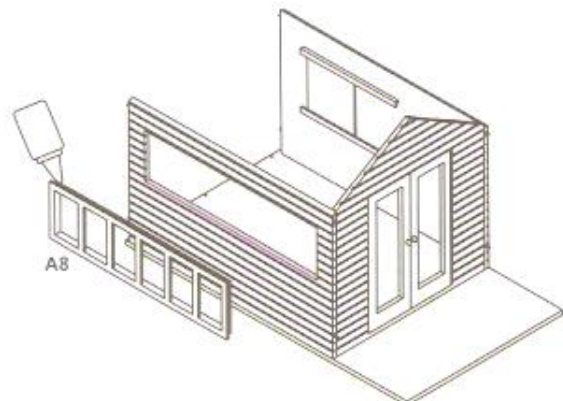

3




Apply glue to dowel holes in **A1** and **A5**. Locate **A5** as shown.

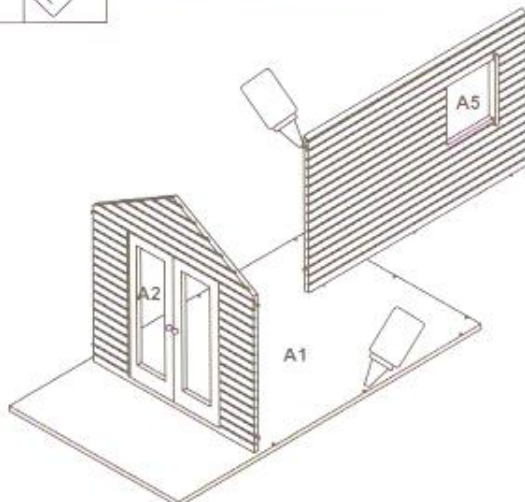

6




Apply glue to **A1**, **A4** and **A5** dowel holes. Locate **A3** as shown.

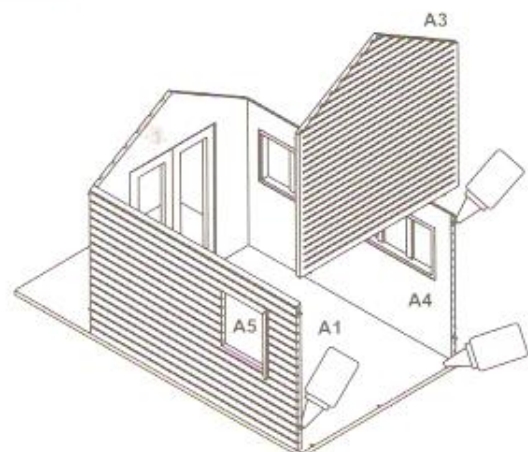

7




Apply glue to dowel holes in **A6** and **A7**. Locate **A6** and **A7** as shown.

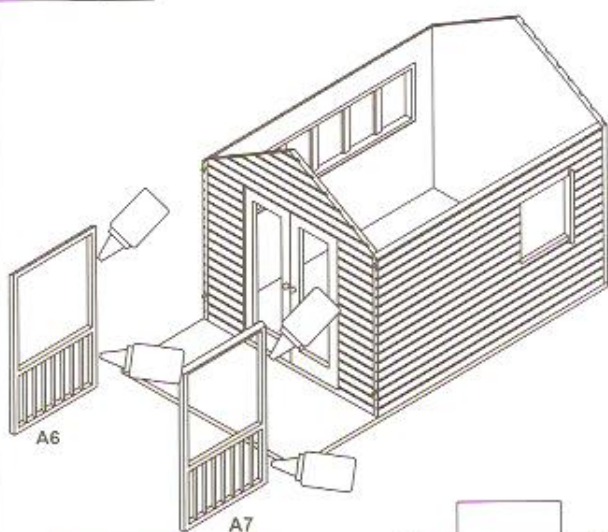

8




Apply glue to edges of **A13** and locate as shown.

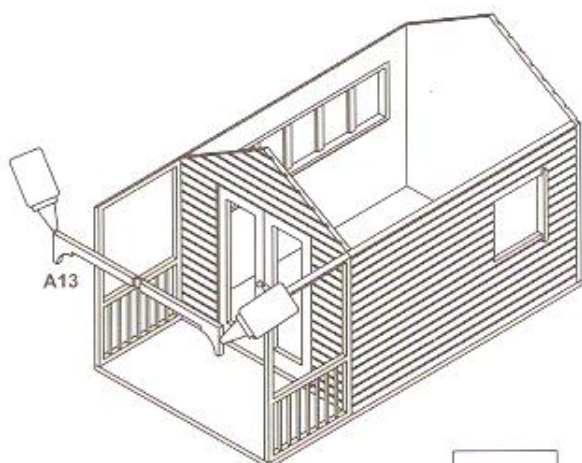

9




Apply glue to slot in **A13** and locate **A15** as shown.

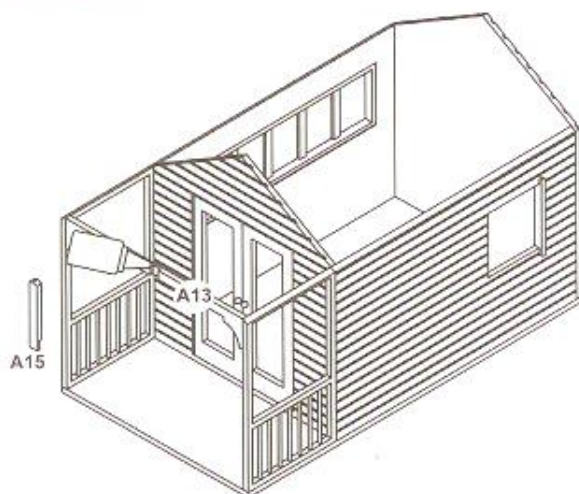

10




We recommend that you leave your house to dry for at least an hour before continuing. Apply glue to **A14** (x4) and locate as shown.

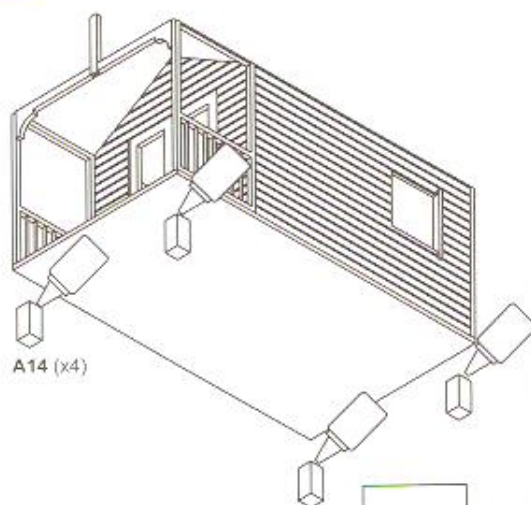

11




Next set the house aside and build the roof. Using masking tape, tape **A9** and **A10** roof panels together as shown.

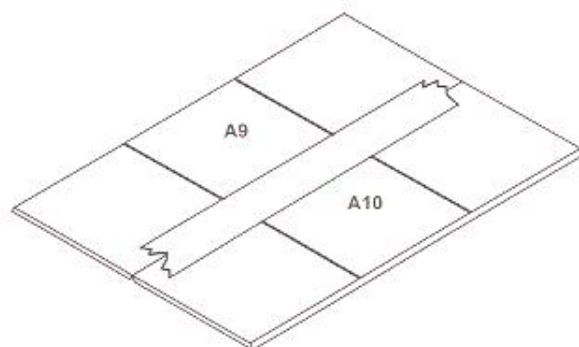

12



Apply glue to **A9** and **A10** as shown and press together. Leave on a flat surface to dry.

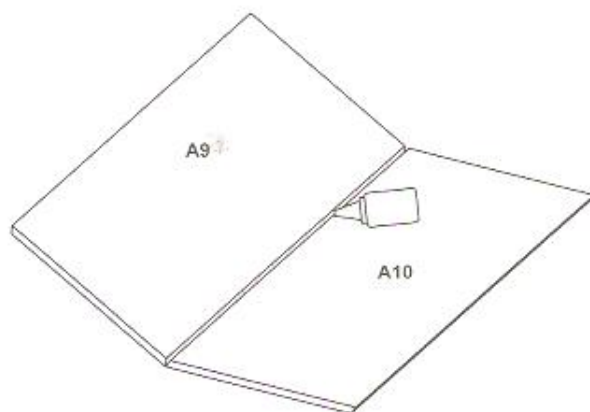


A16 Roof support (12 1/8" L) can be used in step 12. This is glued in the apex of the roof panels for support.

13




Apply glue to **A12** (x2) and locate at the end points of the roof as shown.

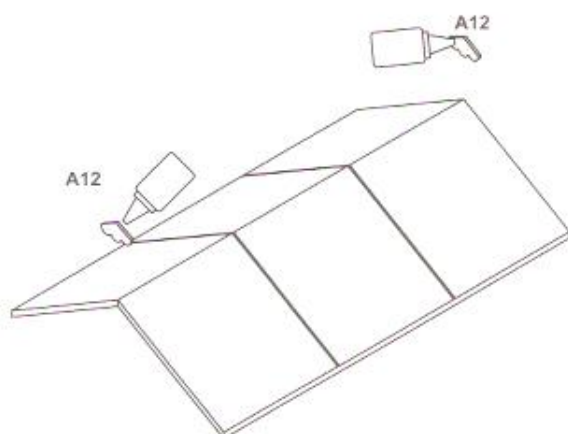


14



Carefully place the roof on top of the house as shown. Finally apply glue to **A11** and locate as shown.

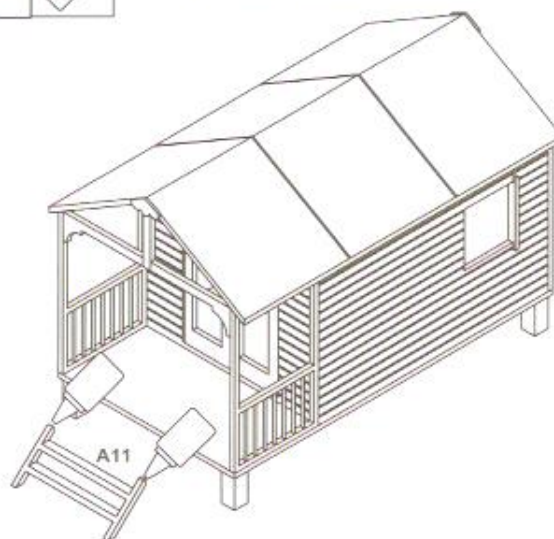

YOU HAVE NOW COMPLETED YOUR SUMMER HOUSE

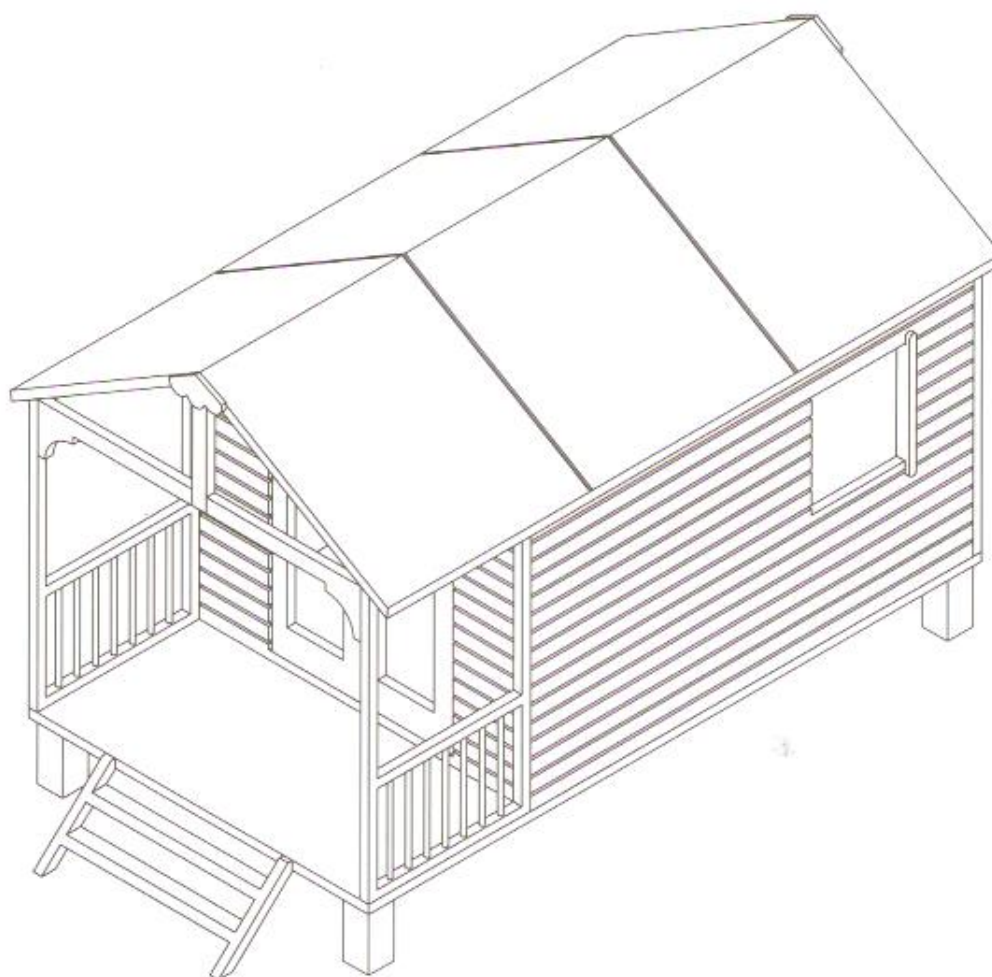

WE HOPE YOU ARE PLEASED WITH THE RESULT