



PARTS LIST


When requesting missing or damaged parts please prefix with 1800.

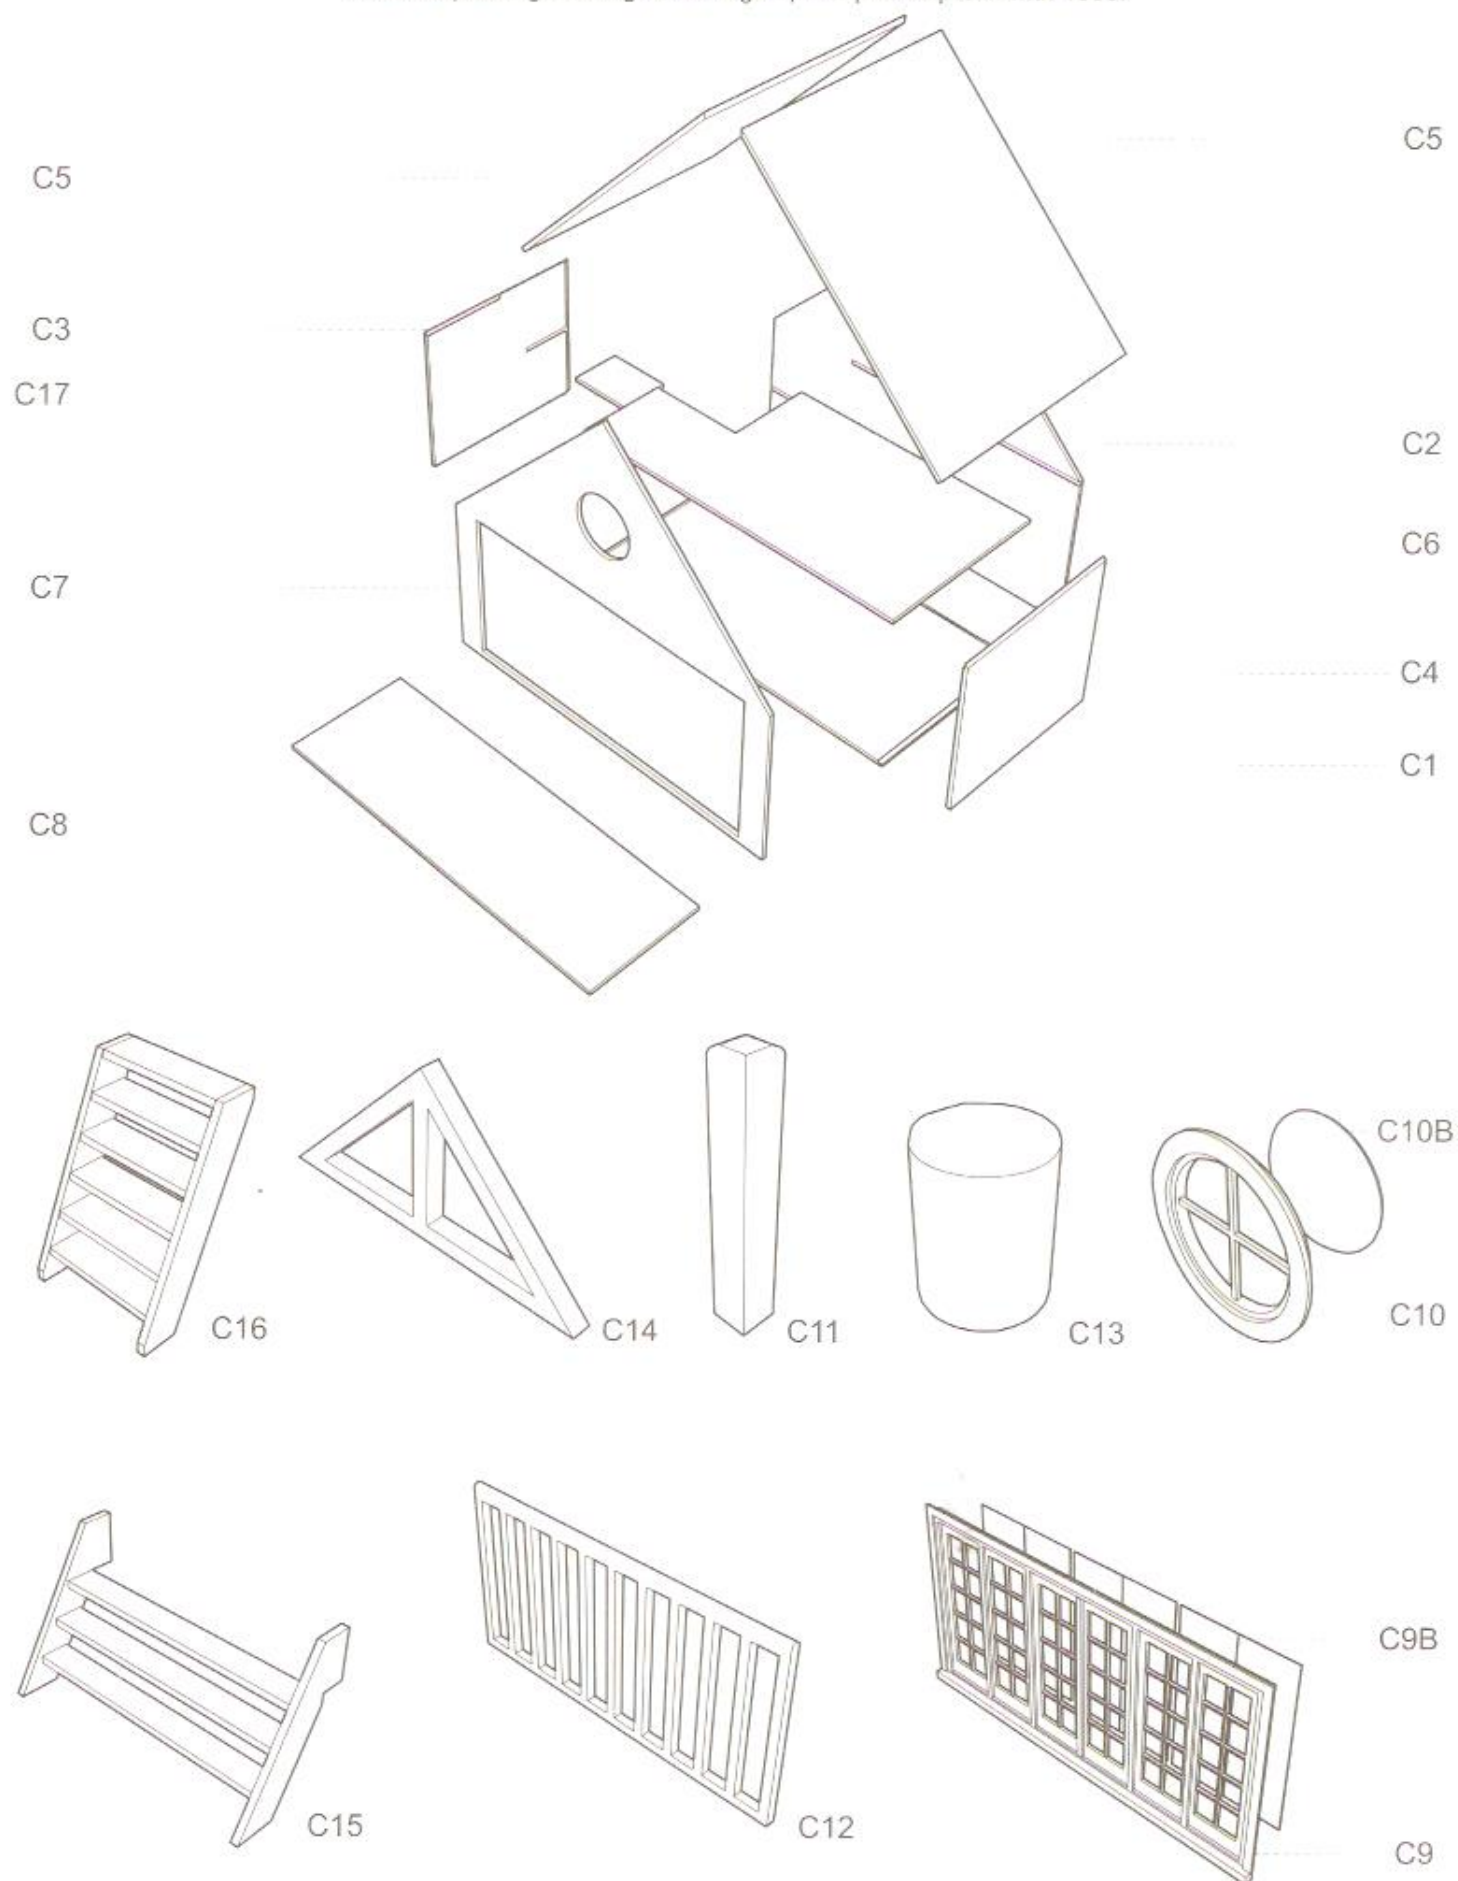


1

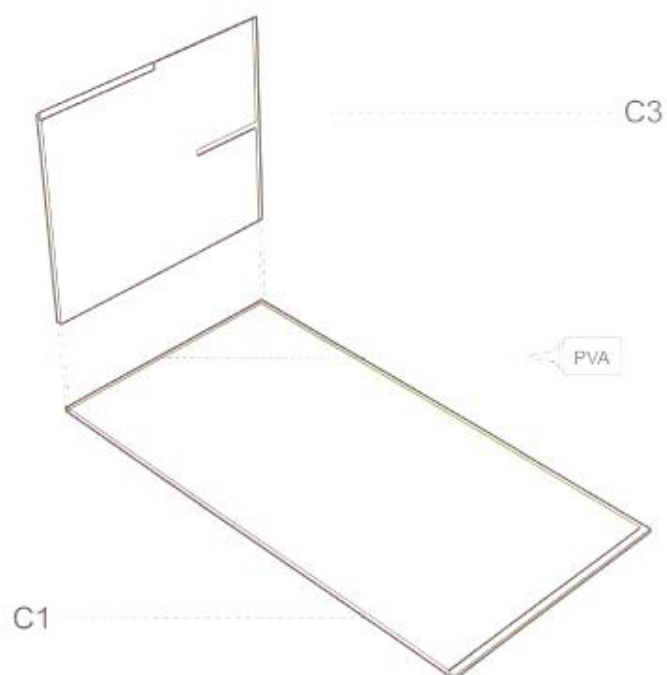


2

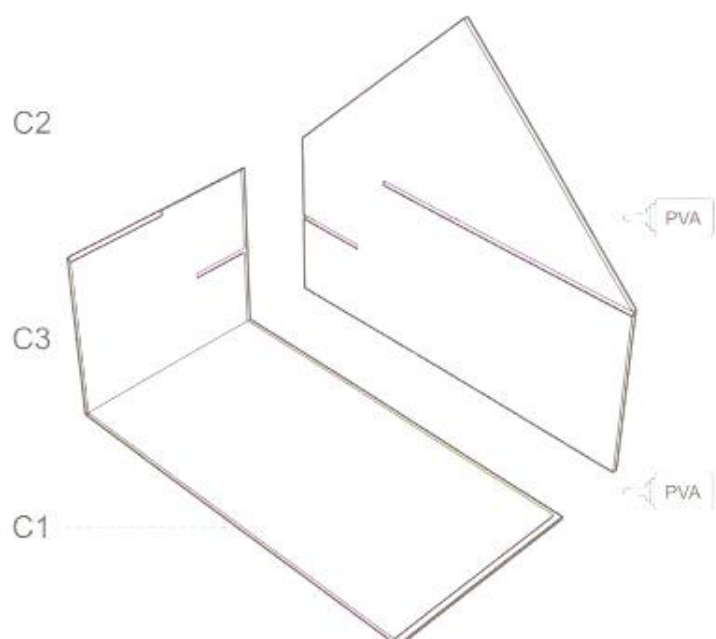


3

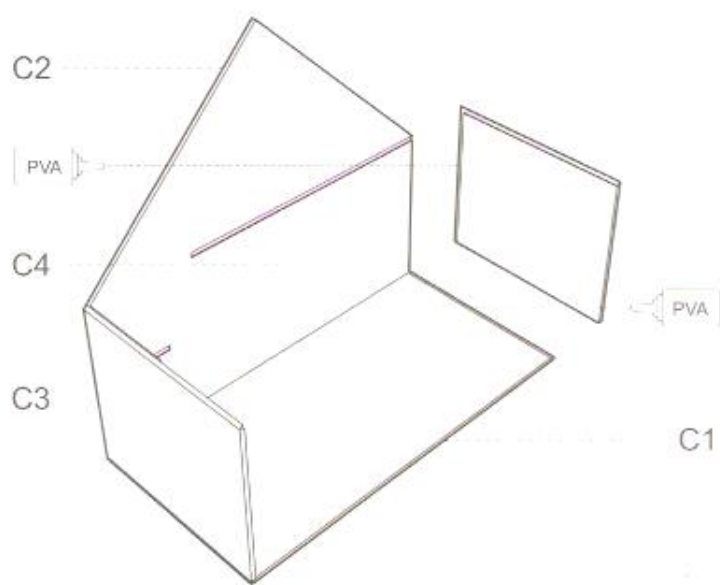

4

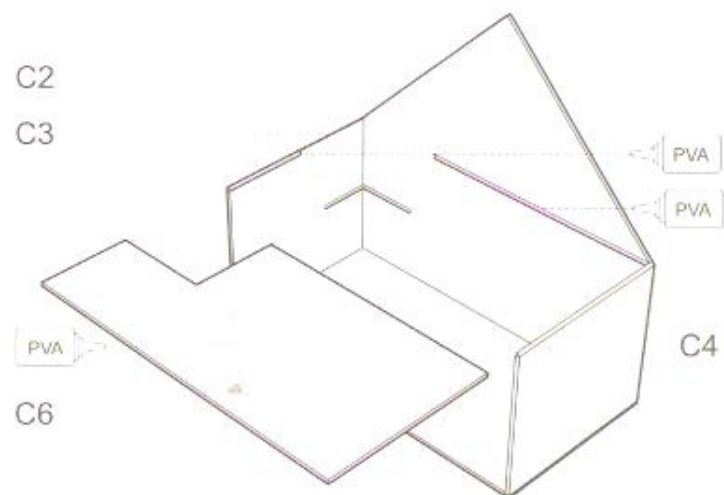


5

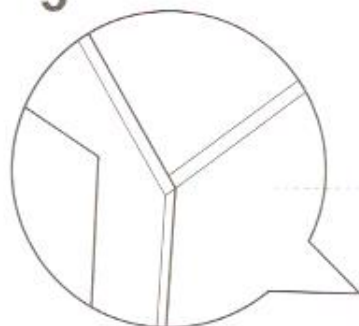


Ensure C7 is aligned with side walls

C7

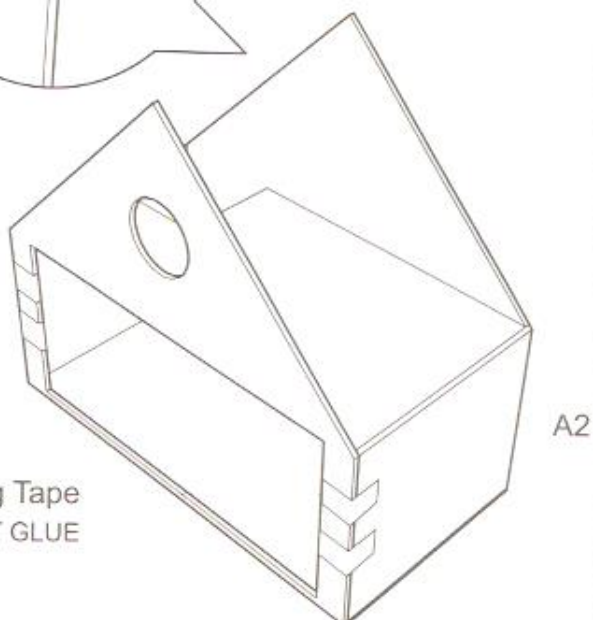

Masking Tape
DO NOT GLUE

6

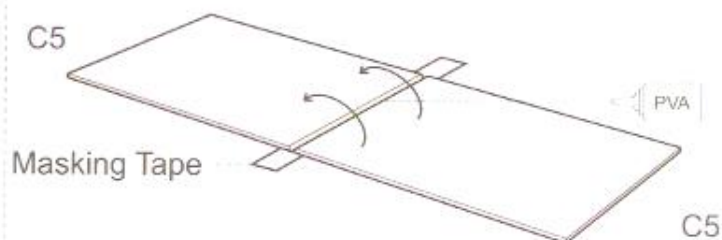

C5


Masking Tape

PVA


C5

7

Allow 8 hrs to dry
Remove C7 once dry

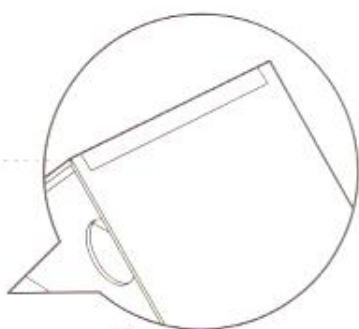

C5

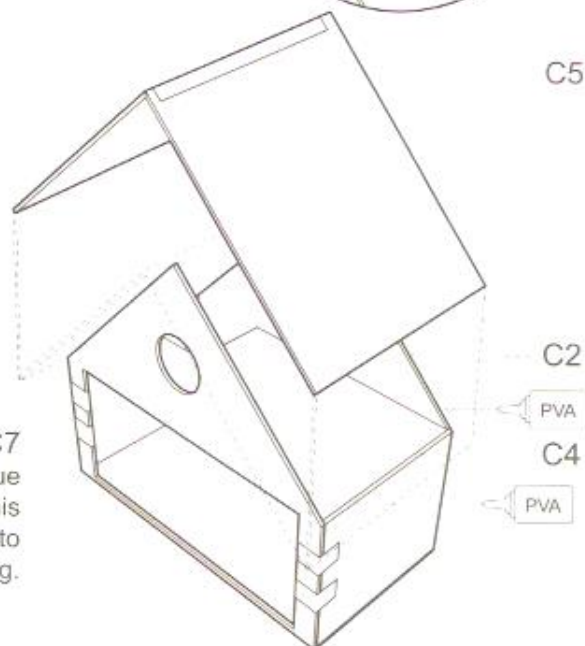

C5

C2

PVA


C4

PVA

C7

Ensure glue is not on this panel prior to positioning.

8

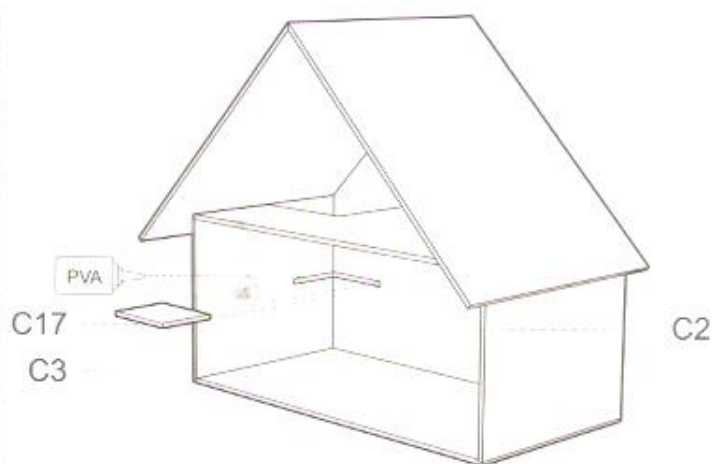


PVA

C17


C3

C2


9

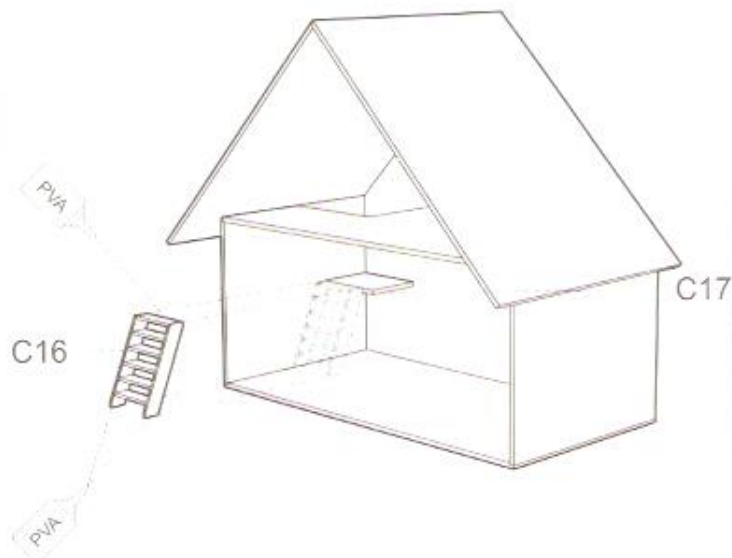


10

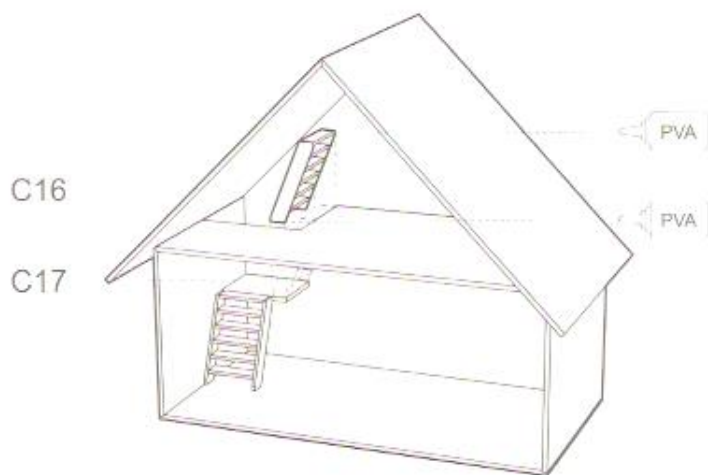


11

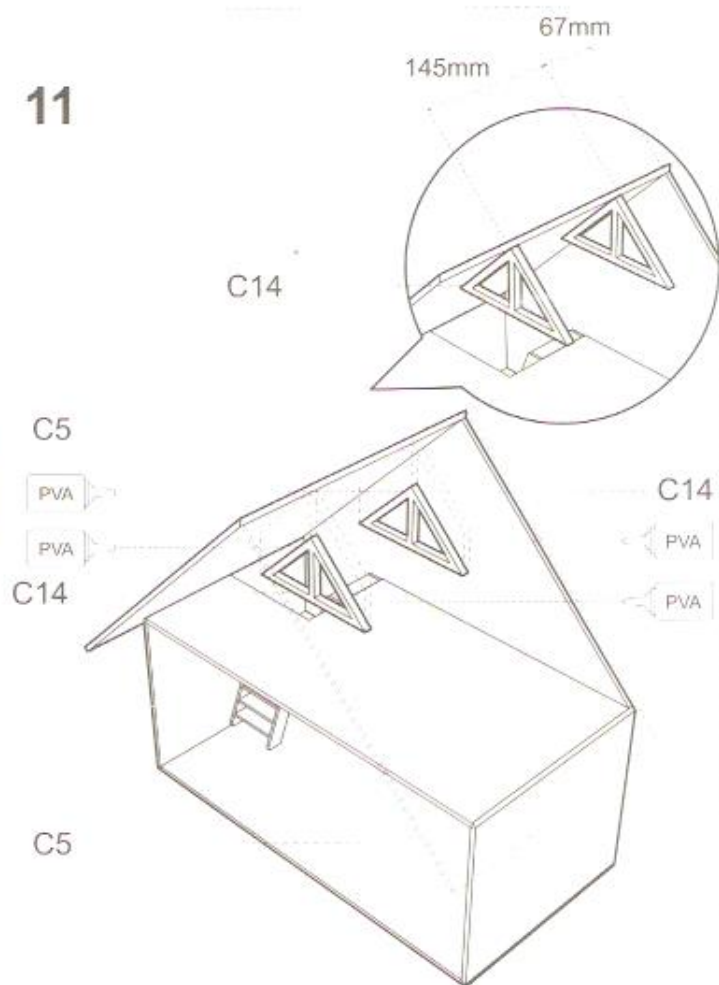


12

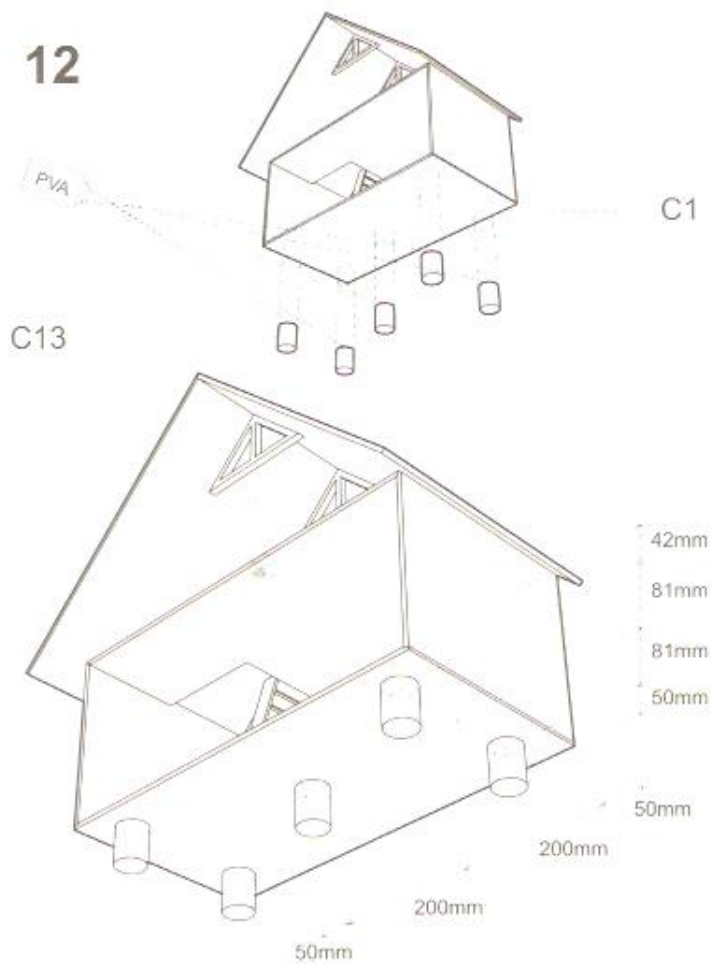


13

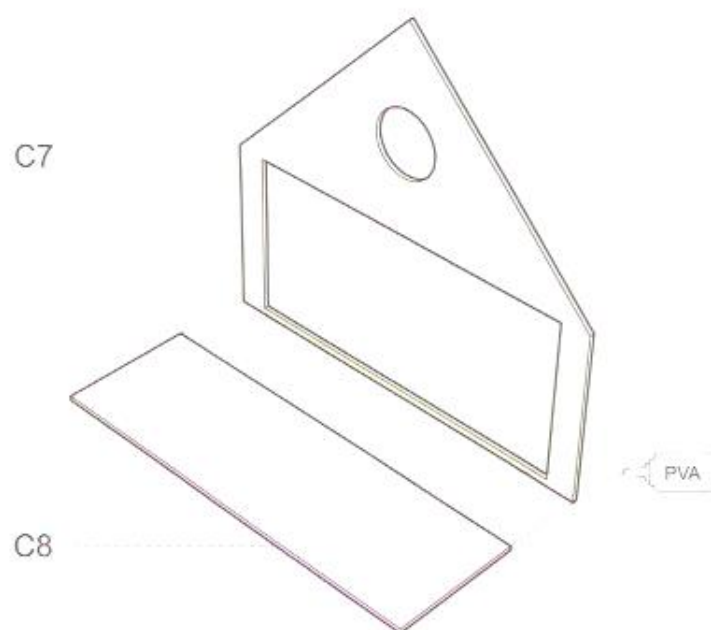


14

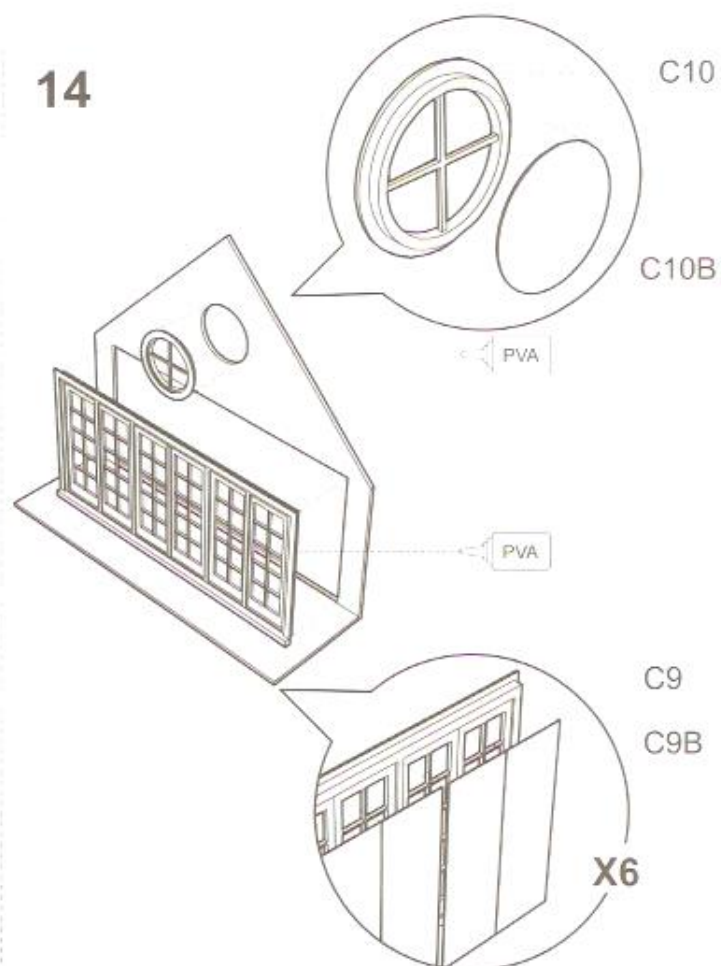


15

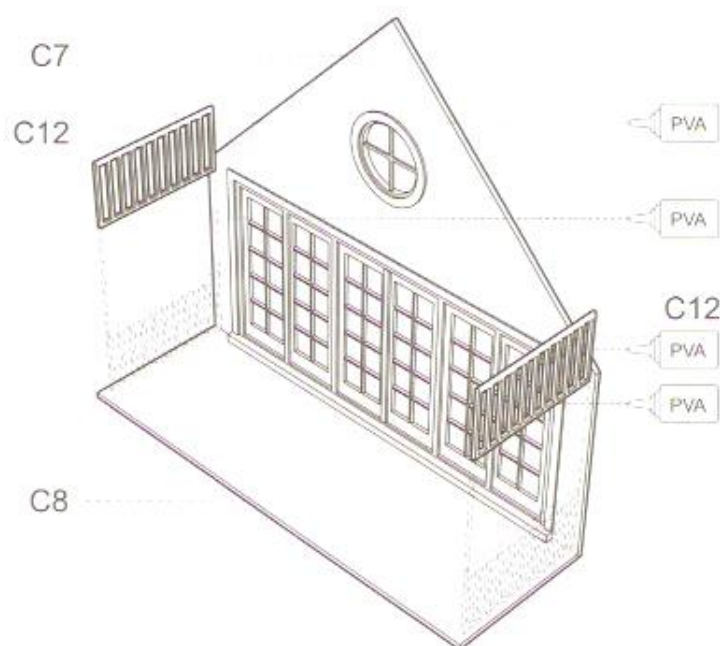


16

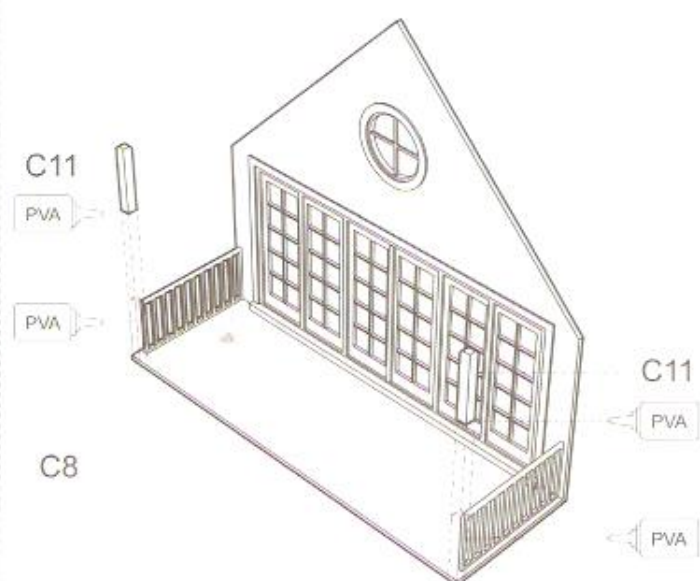


17

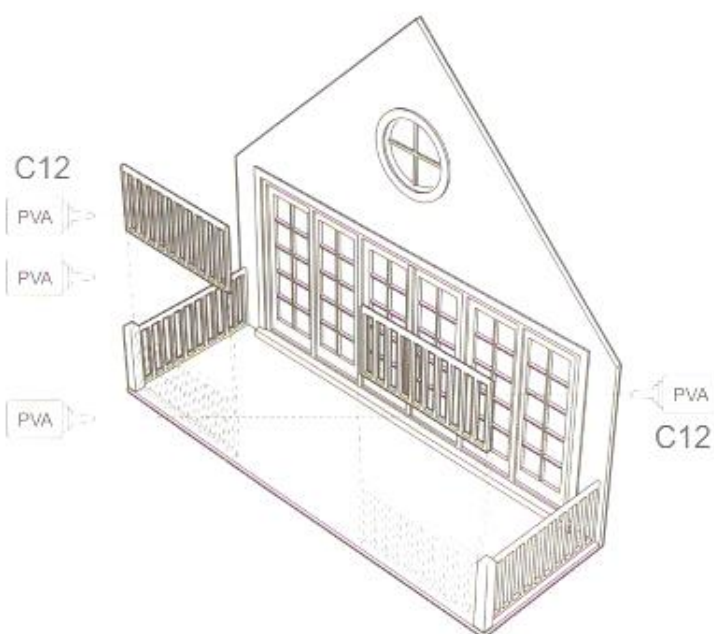

18

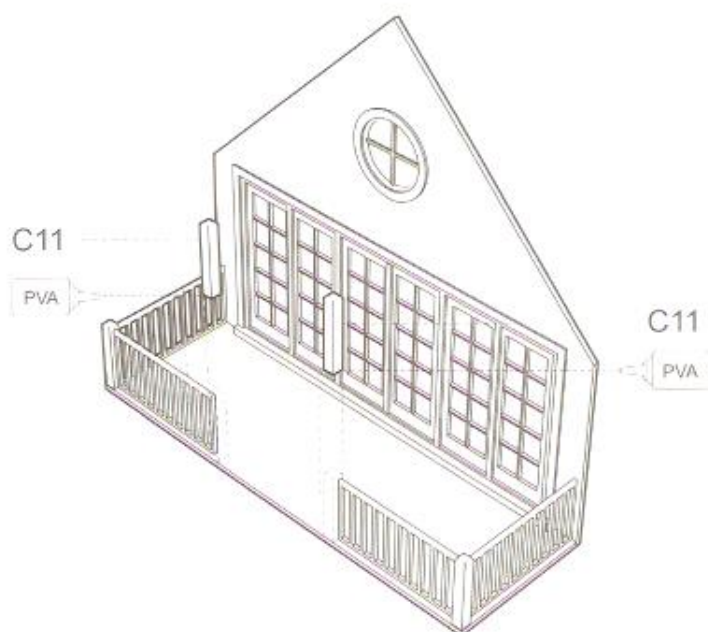

19

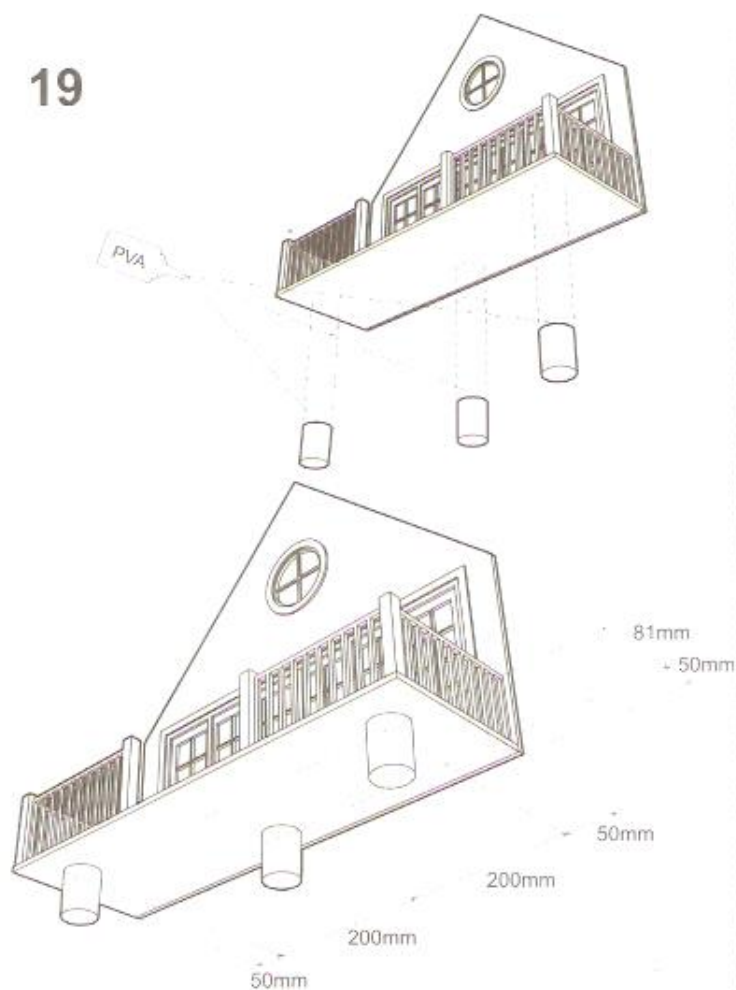

20

