


PERGOLA KIT PARTS (not to scale)

When requesting a missing or damaged part please prefix part number with 6037.



A1 Post (x8)



A2 Roof bar (x2)



A3 Crossbar (x7)

CONSTRUCTION


1



Dry build your kit now using masking tape.

NB: Whilst you dry build the kit, it is an ideal time to mark the panels and parts (lightly with pencil) that you wish to paint or treat before construction.



Happy building !

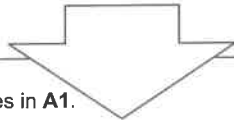

2





Apply glue to the grooves in **A1**.
Locate **A2** as shown.

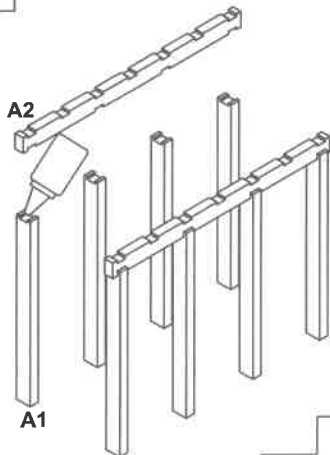

3



Apply glue to the grooves in **A2**.
Locate **A3** as shown.

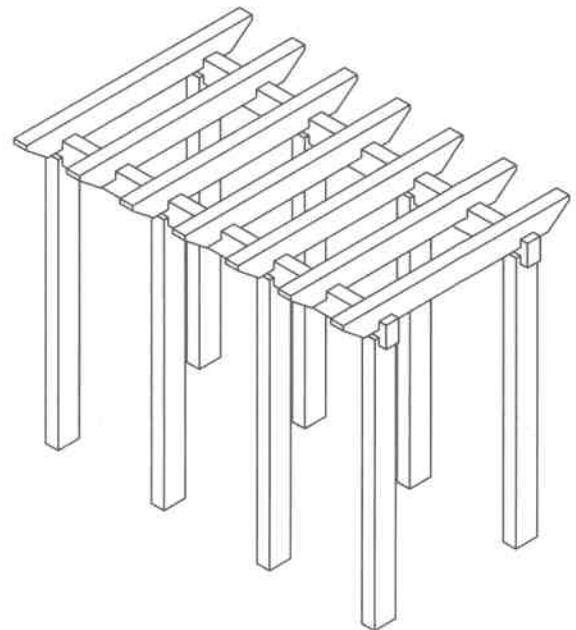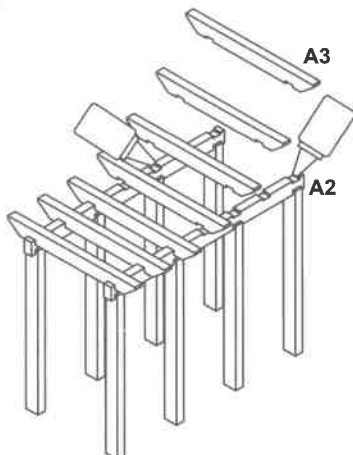

**CONGRATULATIONS! YOU HAVE NOW
COMPLETED YOUR PERGOLA.
WE HOPE YOU ARE
PLEASED WITH THE RESULT.**

