


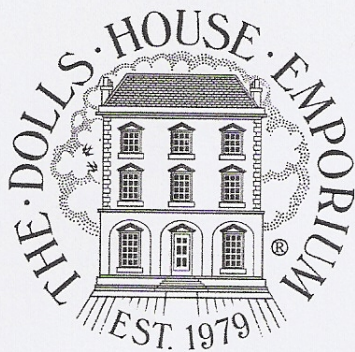


The Dolls House Emporium

Distributed by Streets Ahead Dollshouse.

PL7 4JH, United Kingdom.

website: www.dollshouse.com

e-mail: products@dollshouse.com

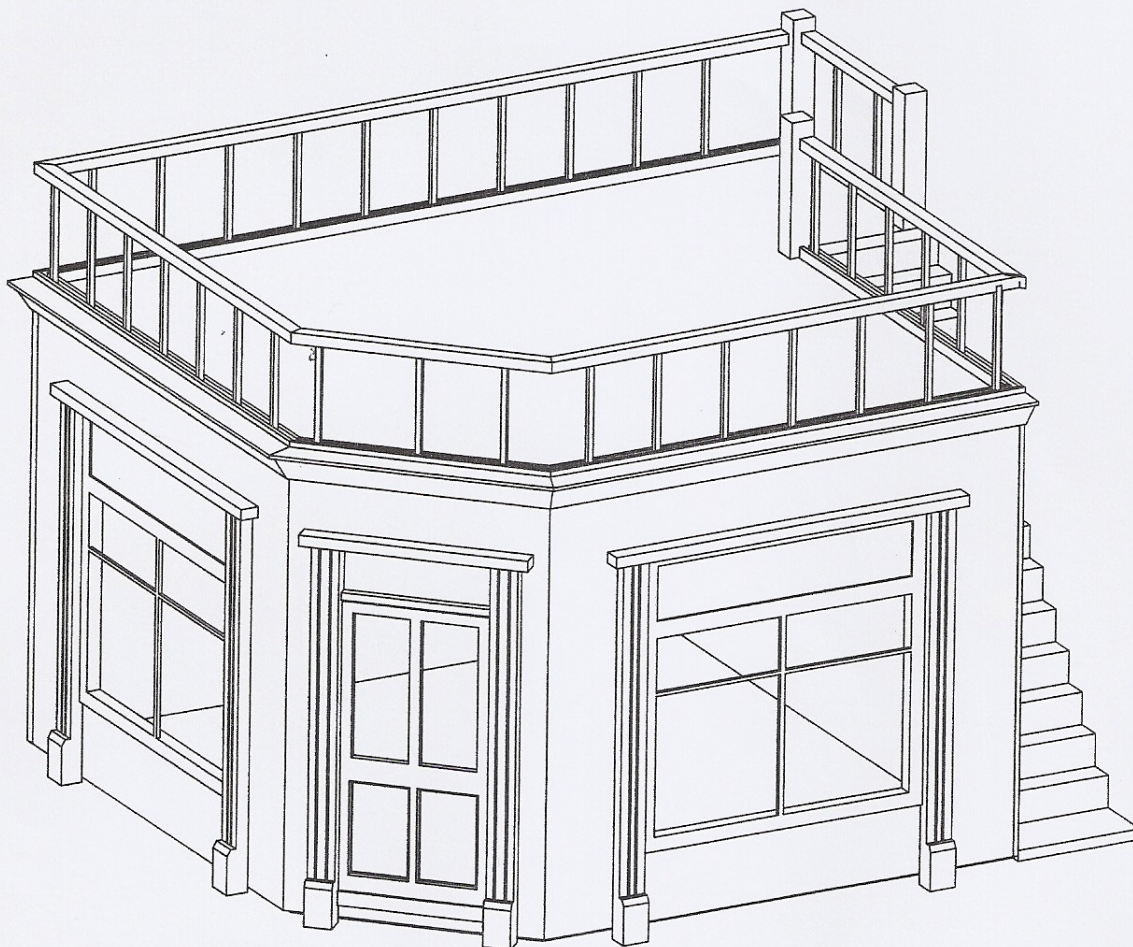

6255 THE CORNER SHOP PART 1 KIT INSTRUCTIONS

Please check the contents of your dolls' house on delivery

Unpack your kit and study the contents carefully, relating the parts to the contents list and drawings. In the unlikely event of there being a missing or broken part then please ring 0845 434 9202 and our staff will ensure that the problem is dealt with promptly.

We recommend that all Dolls House Emporium kits are dry built first. Please read through all the instructions carefully before commencing. If, at any stage you would like any advice or assistance, please ring us on 0845 434 9202 and we will be pleased to answer any queries.

It is not recommended to keep your dolls' house in a conservatory - due to the extremes of temperature.

Version 1

CONSTRUCTION

1



Dry build your kit now using masking tape.

NB: Whilst you dry build the kit, it is an ideal time to mark the panels and parts (lightly with pencil) that you wish to paint or treat before construction (e.g. ceiling, windows, doors etc). This is also a good time to decide how you would like to access the house. The construction method shown here allows the roof to lift off completely, but you may wish to add hinges to the roof, or keep a side panel loose for side access. Simply use your imagination! Also we suggest that you work out the best time to decorate the various other parts in the kit. We recommend you do this during a dry build; a good idea is to create a list of what to do and when for, tasks such as papering rooms before putting the floors/ceilings in, fitting doors, installing lights, carpeting floors etc. When you have done this, run through the steps during another dry build to check your order will work.


This will give you more chance to become accustomed to the kit and can save a great deal of time and mistakes in the long run.

Happy building !

2




Apply glue to groove in A1 and locate A2 as shown.

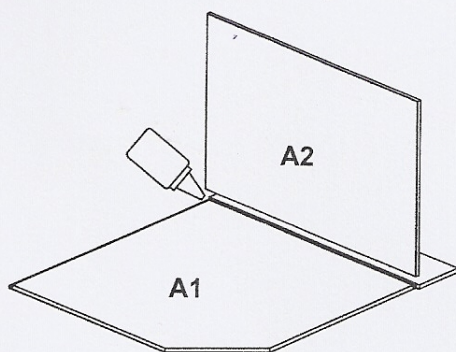

3




Apply glue to groove on A2 and A1 and locate A3 as shown.

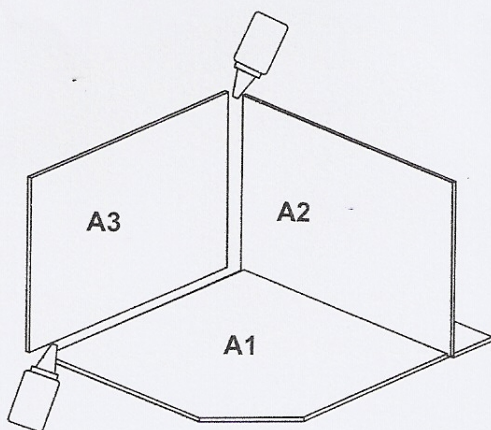

4




Apply glue to top edges of A2 and A3, locate A7 as shown.

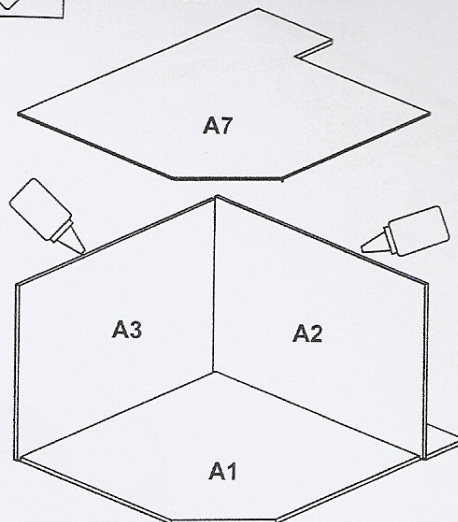

5




Apply glue to 3 edges on A8 and locate in place as shown.

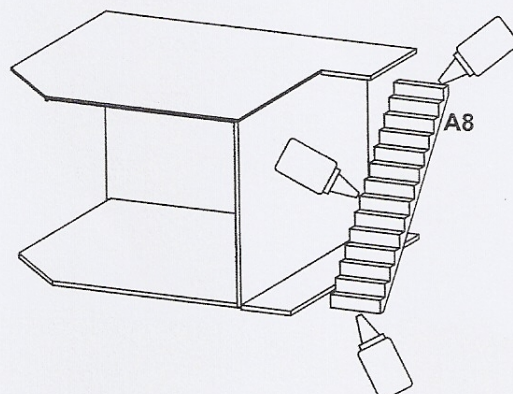

6




Apply glue top and bottom face of A28 and locate on corner of A1

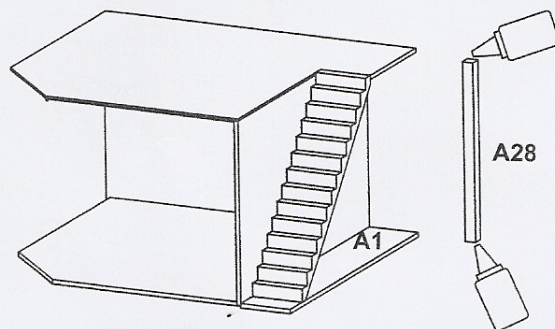

7




Apply glue to the bottom face of parts **A12 -A16** and position on **A7**.

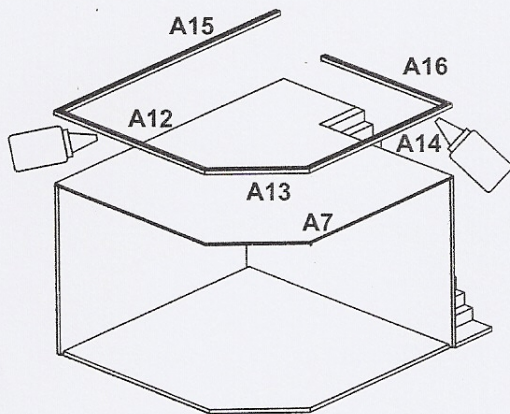

10




Apply glue to groove in the railing bases and position **A24** bannisters approximately 2cm apart and set aside to dry.

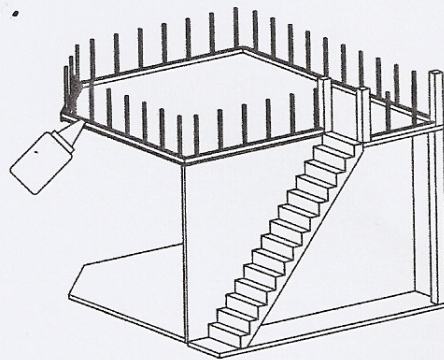

8




Apply to base of **A27** and locate on **A7** as shown

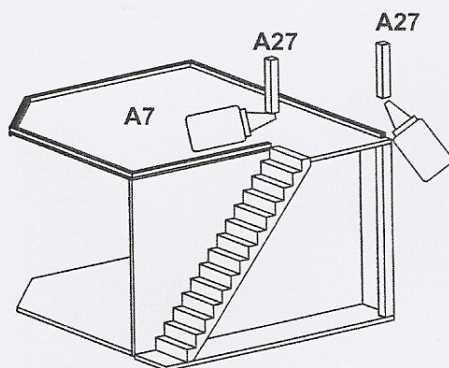

11




Apply glue groove and all mitred edges of **A18-A23** and locate onto bannisters

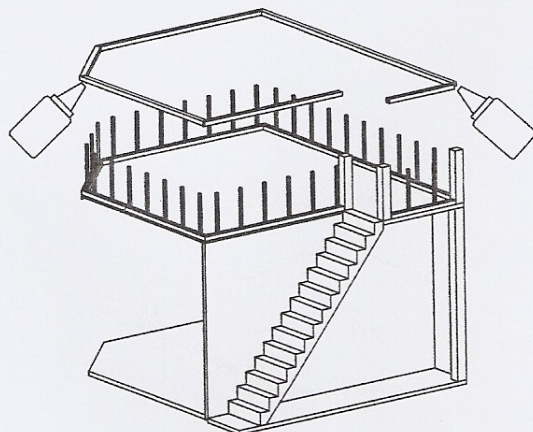

9




Apply glue to base of **A17** and **A27** and place as shown.

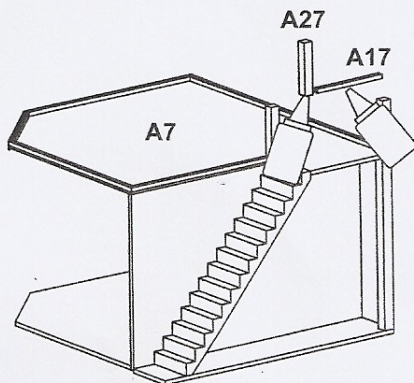

12




The assembled railings should now look like this

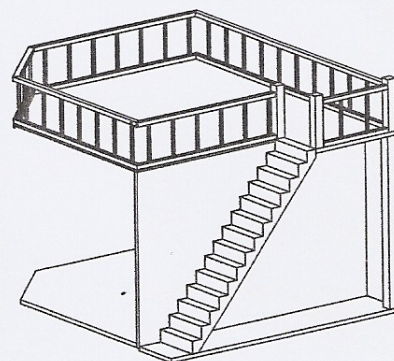

13




Apply glue to A25 panels and locate on A4. Apply glue to A9 trim & position bottom edge 8mm from edge of A4. Repeat this step for the matching front panel.

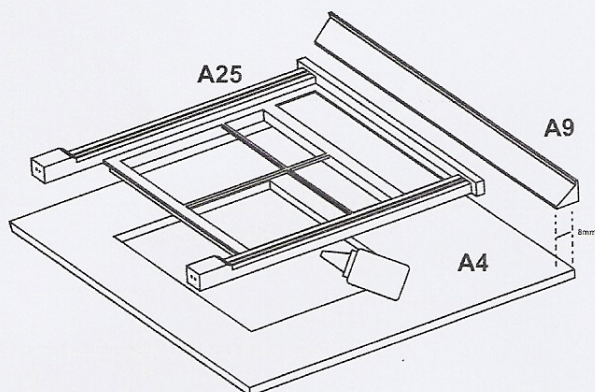

14




Apply glue to A26 and locate as shown.

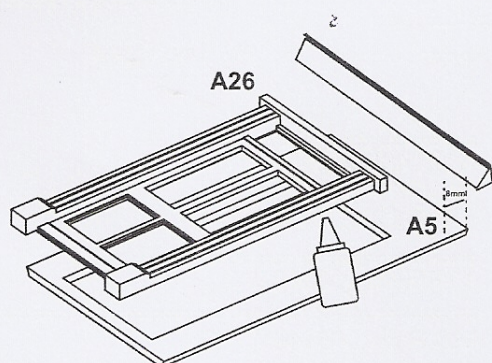

15




Apply glue edge of A5 use masking tape to support joint to A4. Remove Tape when glue is dry.

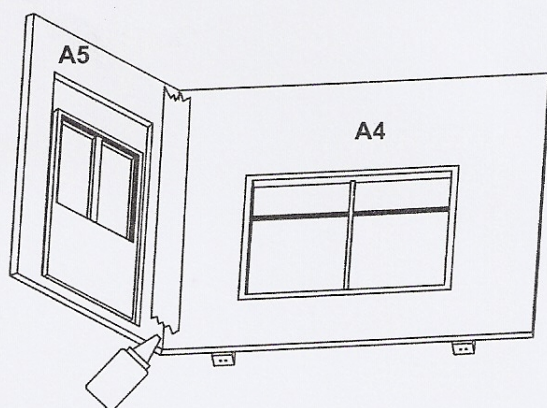

16




Apply glue to edges of assembled A6 panel and locate as shown

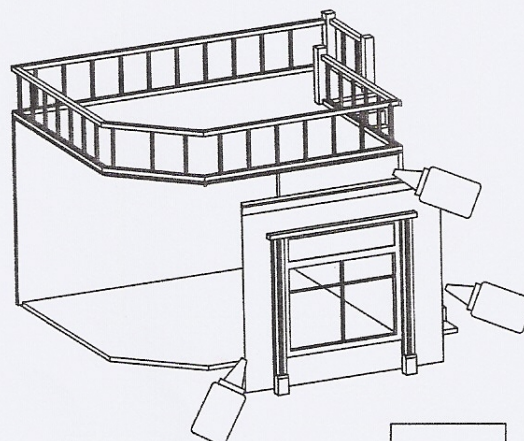

17



The assembled A4 and A5 panels are not glued to carcase. This allows for access to build.

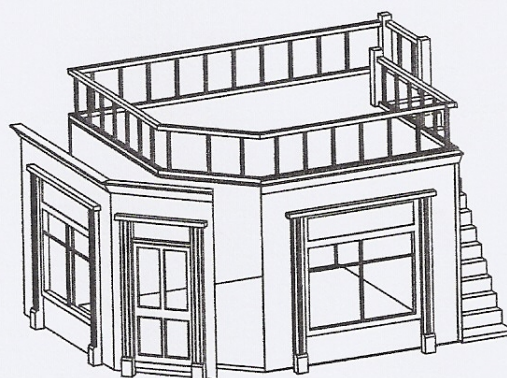

CONGRATULATIONS! YOU HAVE NOW COMPLETED YOUR CORNER SHOP


WE HOPE YOU ARE PLEASED WITH THE RESULT.

To add The Corner Shop Part 2 - First Floor & Roof (6260)


simply leave the railings off the terrace and build the Part 2 building on top, with the door opening onto the stair landing.

THE CORNER SHOP KIT PARTS (not to scale)

When requesting a missing or damaged part please prefix part number with 6255

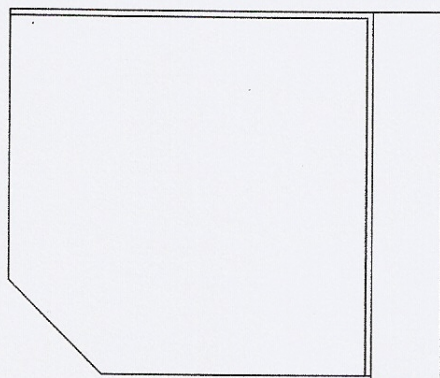


A1 Base Panel

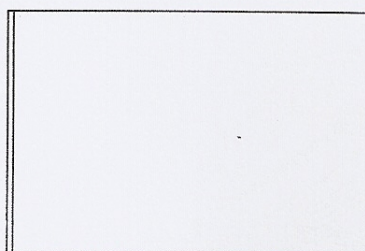


A2 Side Panel




A3 Back Panel

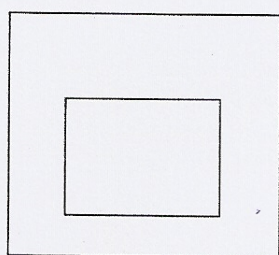


A4 Left Panel




A5 Middle Panel

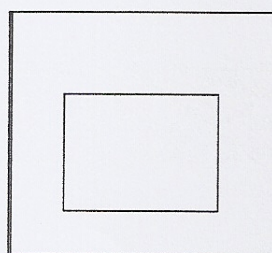


A6 Right Panel

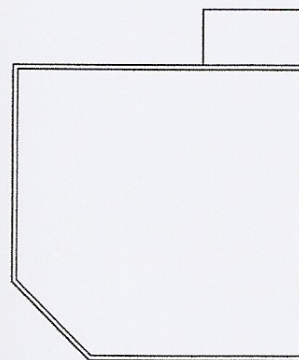

A7 Top Panel

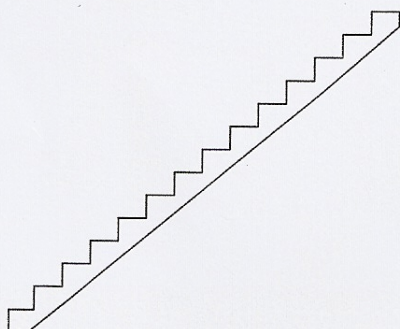


A8 Stairs




A9 Trim 1




A10 Trim 2




A11 Trim 3




A12 Railing Base 1




A13 Railing Base 2




A14 Railing Base 3




A15 Railing Base 4




A16 Railing Base 5




A17 Railing Base 6



A18 Railing Top 1




A19 Railing Top 2




A20 Railing Top 3



A21 Railing Top 4



A22 Railing Top 5



A23 Railing Top 6




A24 Railing Bannister x50




A27 Post x3



A28 Pillar

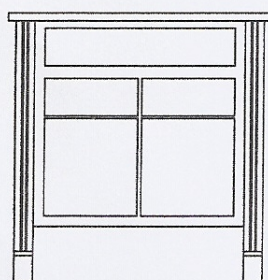

A25 Window x2

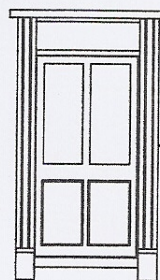

A26 Door and frame