
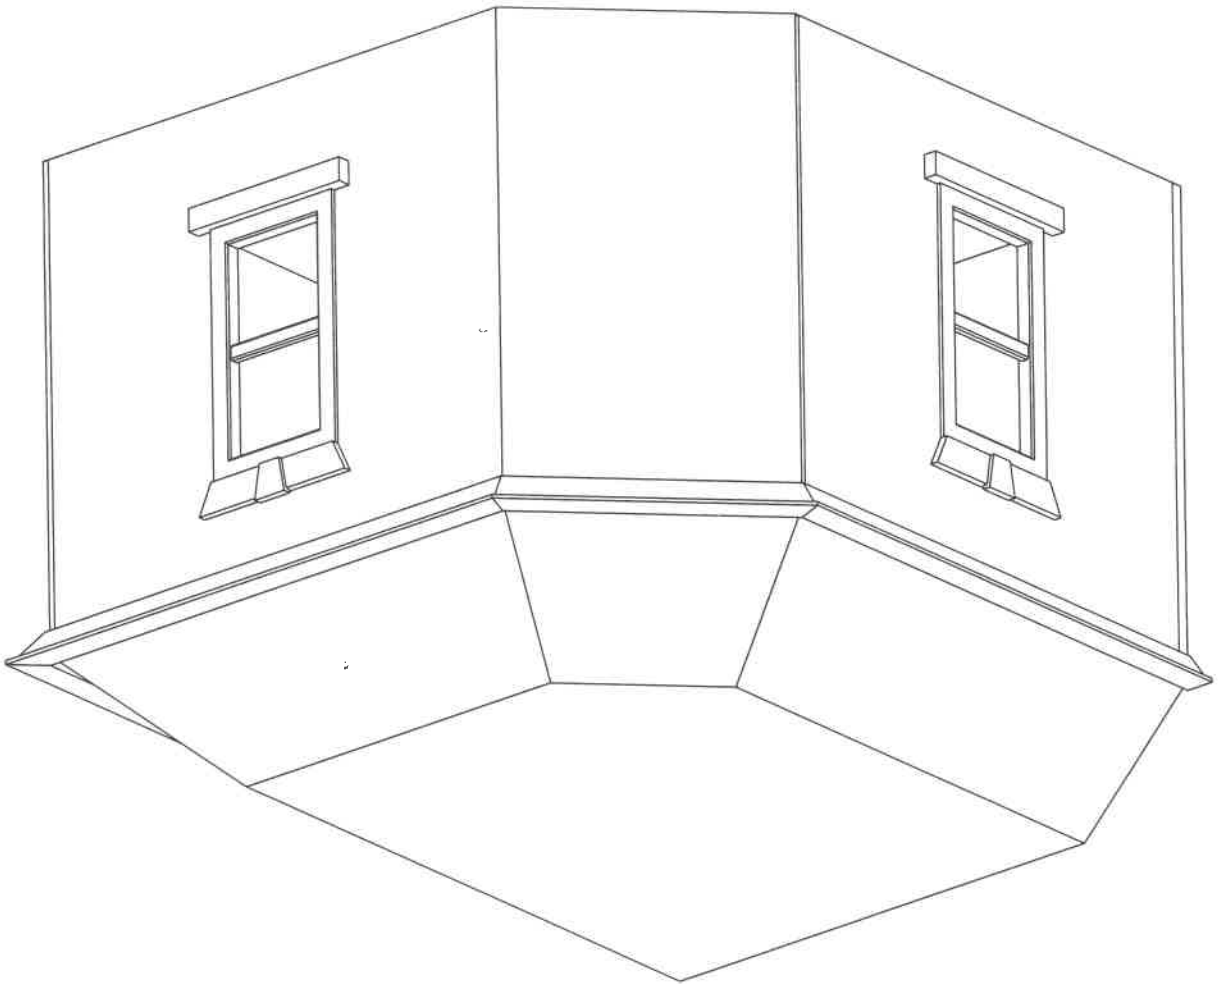


The Dolls House Emporium

Distributed by Streets Ahead Dolls House.
PL7 4JH, United Kingdom.

website: www.dollshouse.com

e-mail: products@dollshouse.com

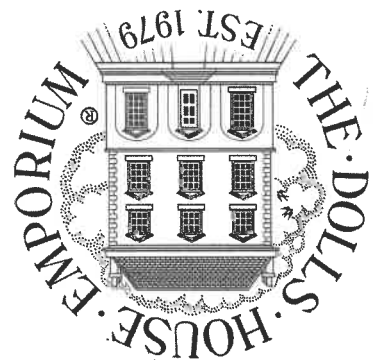

6260 THE CORNER SHOP PART 2 KIT INSTRUCTIONS

Please check the contents of your dolls' house on delivery


Unpack your kit and study the contents carefully, relating the parts to the contents list and drawings. In the unlikely event of there being a missing or broken part then please ring 0845 434 9202 and our staff will ensure that the problem is dealt with promptly.

We recommend that all Dolls House Emporium kits are dry built first. Please read through all the instructions carefully before commencing. If, at any stage you would like any advice or assistance, please ring us on 0845 434 9202 and we will be pleased to answer any queries.

It is not recommended to keep your dolls' house in a conservatory - due to the extremes of temperature.

THE CORNER SHOP KIT PARTS (not to scale)

When requesting a missing or damaged part please prefix part number with 6260

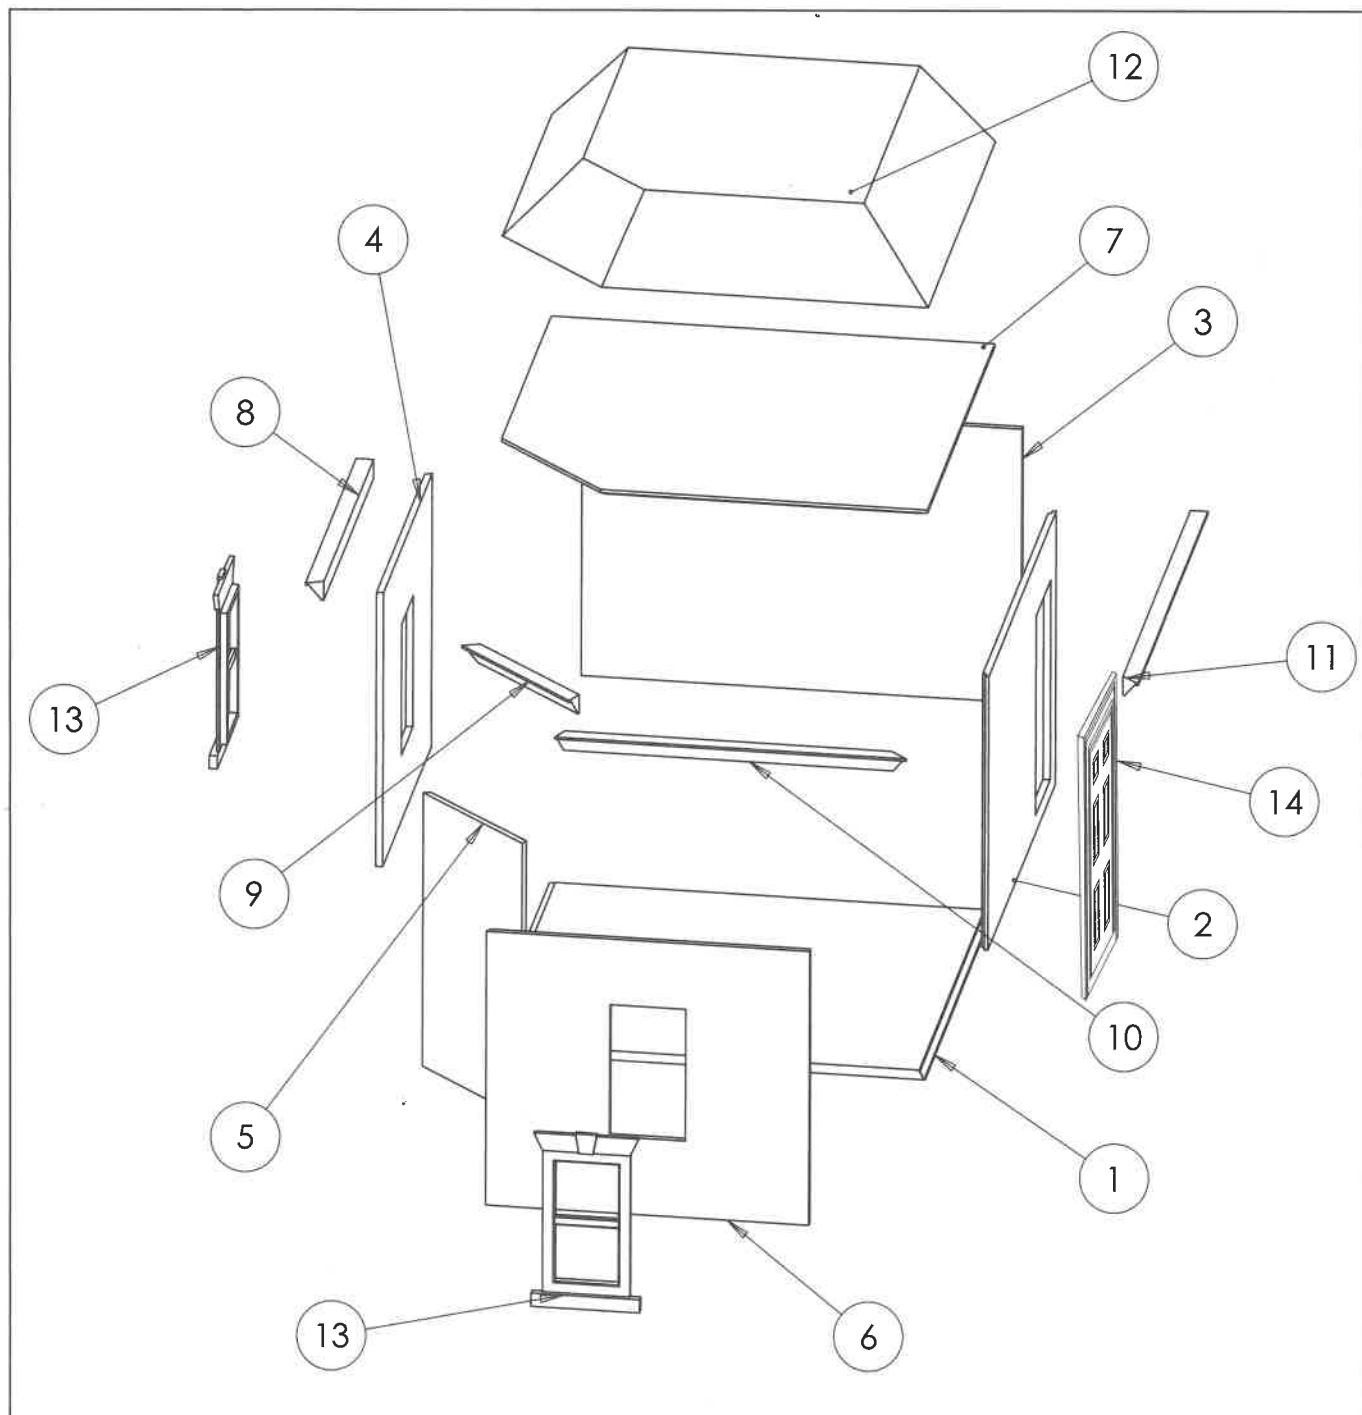

PART NUMBER		QTY	ITEM
B1	Baseboard	1	1
B2	Side Panel	1	2
B3	Back Panel	1	3
B4	Left Panel	1	4
B5	Middle Panel	1	5
B6	Right Panel	1	6
B7	Top Panel	1	7
B8	Trim 1	1	8
B9	Trim 2	1	9
B10	Trim 3	1	10
B11	Trim 4	1	11
B12	Roof	1	12
B13	Window	2	13
B14	Door	1	14


CONSTRUCTION



1


Dry build your kit now using masking tape.

NB: Whilst you dry build the kit, it is an ideal time to mark the panels and parts (lightly with pencil) that you wish to paint or treat before construction (e.g. ceiling, windows, doors etc). This is also a good time to decide how you would like to access the house. The construction method shown here allows the roof to lift off completely, but you may wish to add hinges to the roof, or keep a side panel loose for side access. Simply use your imagination! Also we suggest that you work out the best time to decorate the various other parts in the kit. We recommend you do this during a dry build; a good idea is to create a list of what to do and when for tasks such as papering rooms before putting the floors/ceilings in, fitting doors, installing lights, carpeting floors etc. When you have done this, run through the steps during another dry build to check your order will work. This will give you more chance to become accustomed to the kit and can save a great deal of time and mistakes in the long run. Happy building!

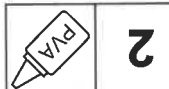



2

Apply glue to B1 Base and locate B2 Side and B3 Back as shown.

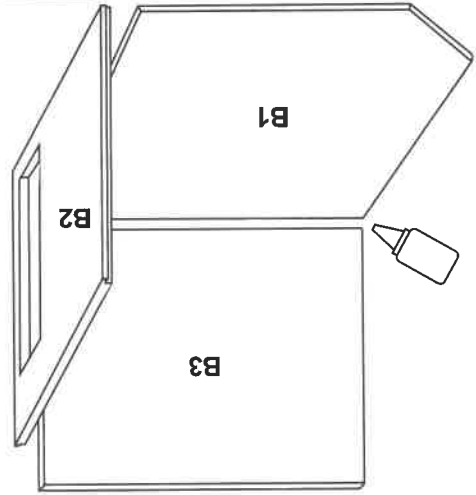


3

Apply glue to B1 Base and locate B6 right as shown.

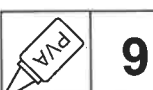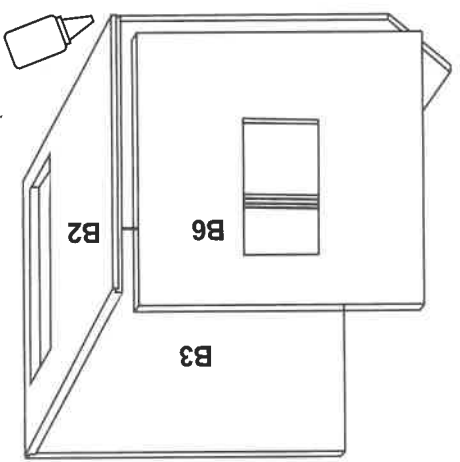



4

Apply glue to top of sides and locate B7 Top panel as shown.

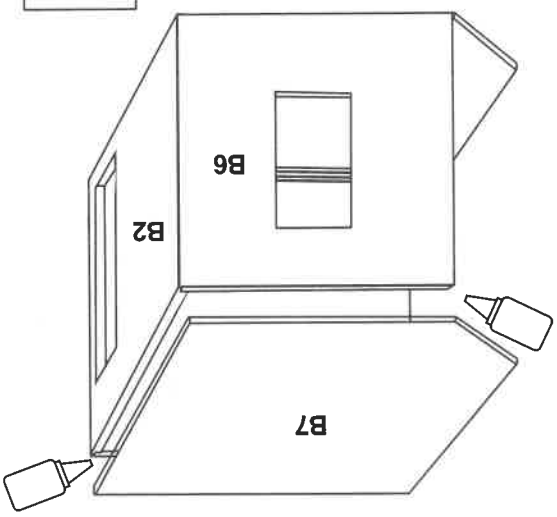


5

Apply glue to B4 left panel and locate B5 middle panel. Tip: Hold in place with masking tape until glue sets.

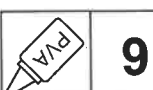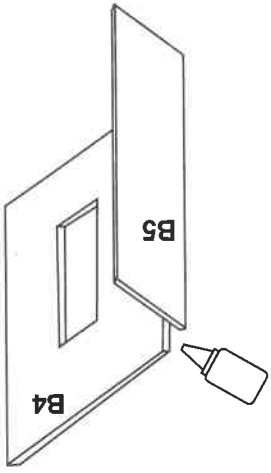

6


Apply glue to B12 Roof panels and fix to B7 Top panel as shown. Tip: Hold in place with masking tape until glue sets.

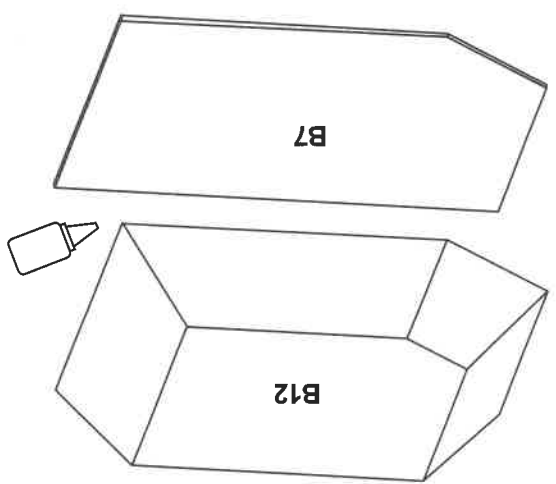

7




Tip: decorate your panels before adding the painted windows, doors and mouldings for a professional finish. Apply glue to **B4** and **B6** panels and insert **B13** windows and sills.

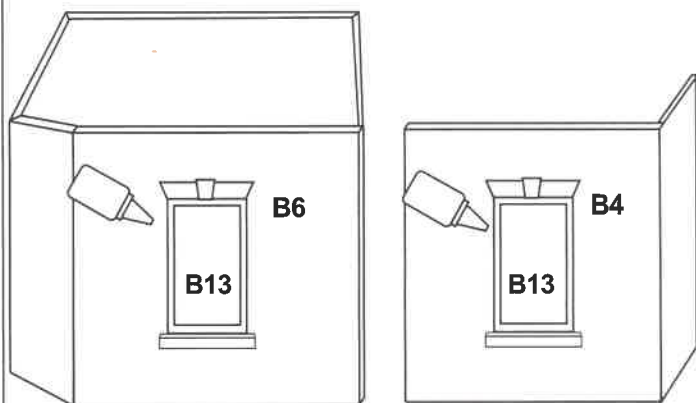

10


The assembled **B4** and **B5** panels are not glued to the building to allow access..

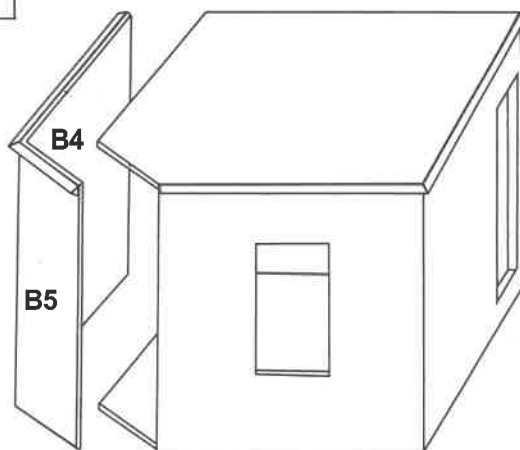


8



Apply glue to the wooden mouldings (**B8**, **B9**, **B10**, **B11** trims) and fix as shown.

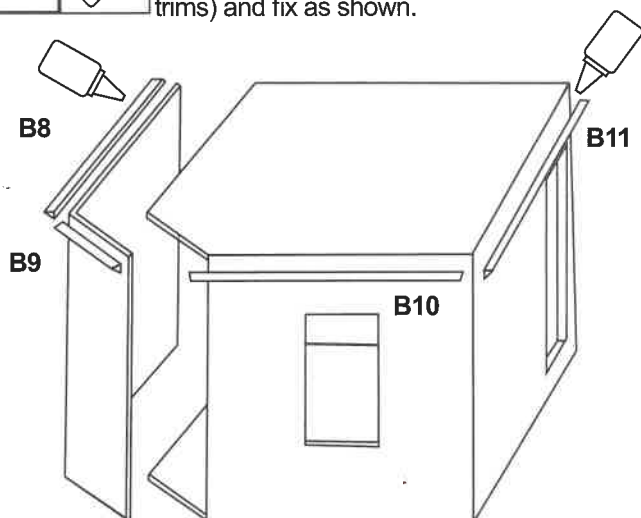

11

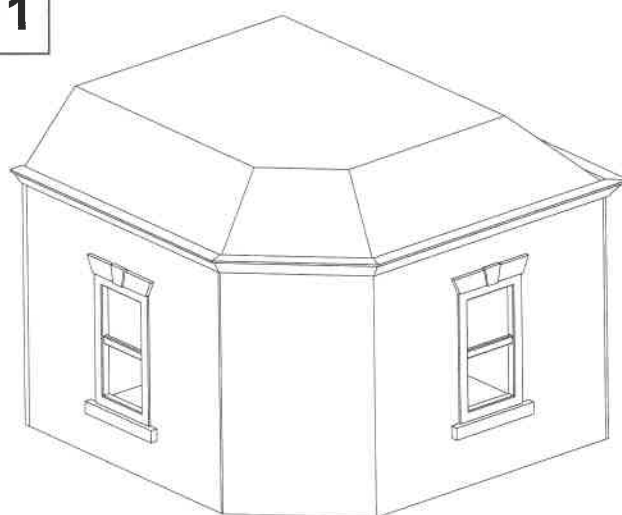


CONGRATULATIONS! YOU HAVE NOW COMPLETED YOUR CORNER SHOP

9



Apply glue to **B14** door frame and insert on **B2** side panel.

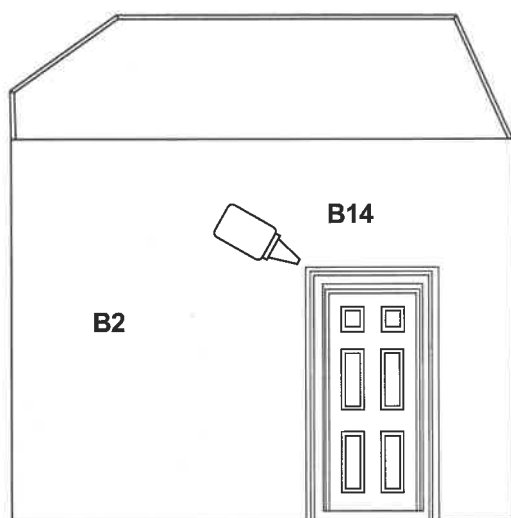

WE HOPE YOU ARE PLEASED WITH THE RESULT.

Have you seen the Corner Shop Part 1 (6255)?

It is designed to sit under this building so if you feel like extending at a later date you can! The side steps in Part 1 will lead right up to the side door perfectly.
Enjoy!