







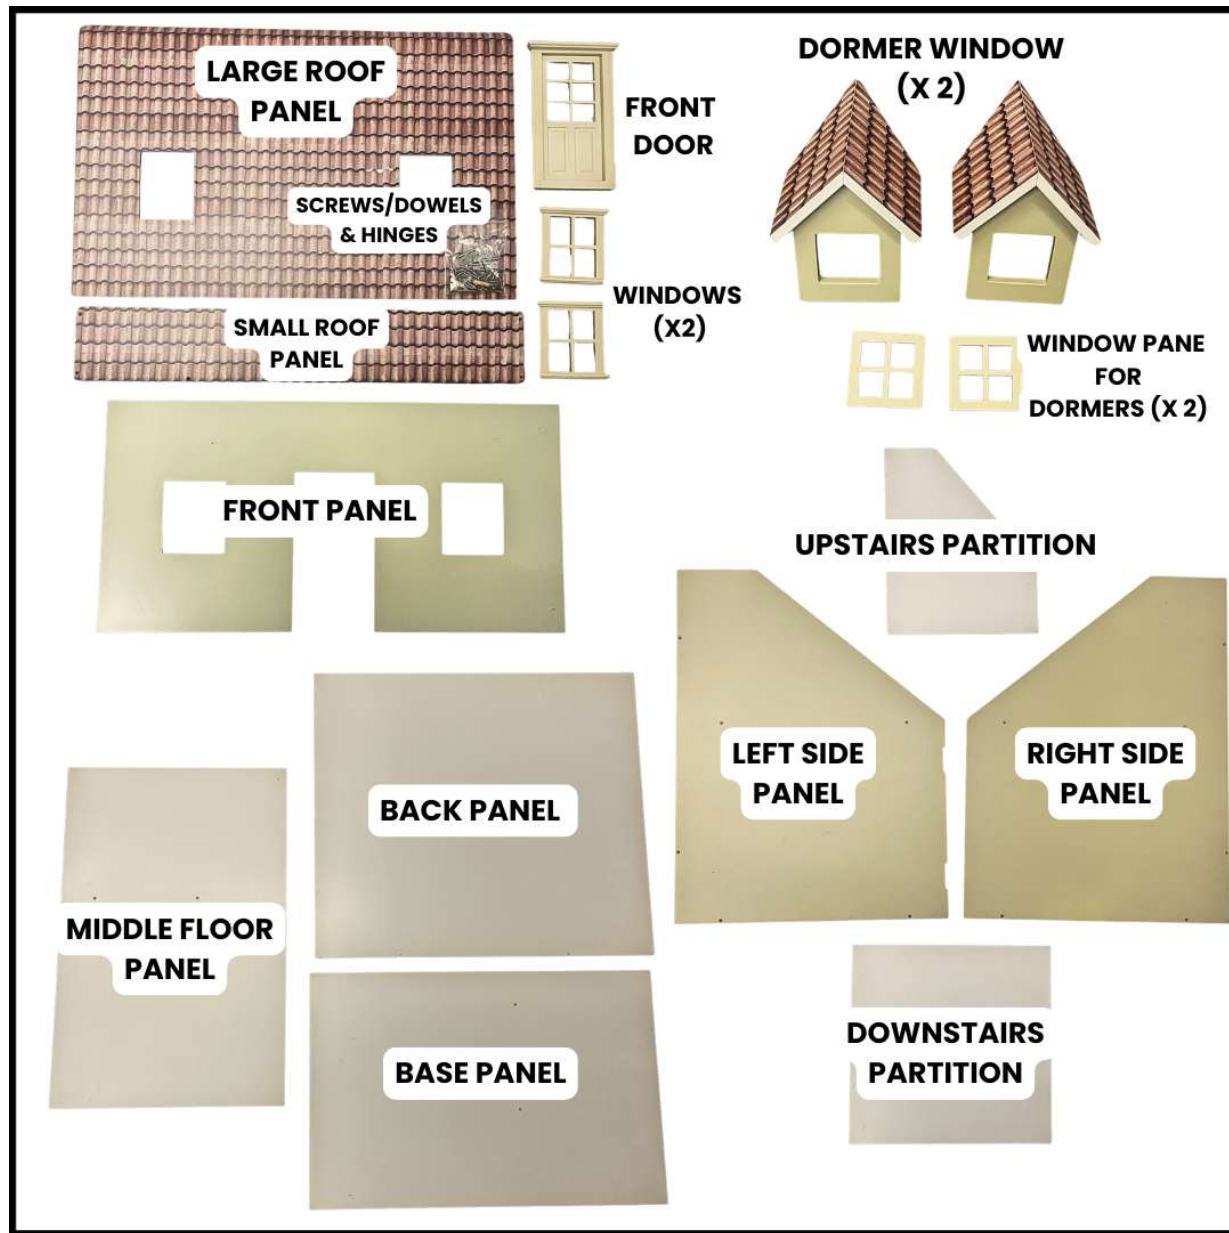








PARTS LIST:







- 1 X LEFT SIDE PANEL (WITH HINGE CUTOUT)**
- 1 X RIGHT SIDE PANEL (WITH INTEGRATED MAGNET)**
- 1 X BASE PANEL (BIG HOLES FOR DOWELS)**
- 1 X BACK PANEL**
- 1 X MIDDLE FLOOR**
- 1 X FRONT PANEL**
- 1 X DOWNSTAIRS PARTITION (SQUARE)**
- 1 X UPSTAIRS PARTITION (SLANTED)**
- 1 X LARGE ROOF PANEL**
- 1 X SMALL ROOF PANEL**
- 2 X DORMER WINDOWS**
- 1 X FRONT DOOR**
- 2 X DOWNSTAIRS WINDOWS**
- 2 X UPSTAIRS WINDOWS (FOR DORMER)**
- 4 X HINGES**
- 2 X WOODEN DOWELS (FOR SQUARE PARTITION)**
- 4 X SMALL SCREWS (FOR HINGES - FRONT PANEL ONLY)**
- 12 X MEDIUM SCREWS (FOR HINGES)**
- 28 X LONG SCREWS (FOR EXTERIOR BUILD & DORMER WINDOWS)**

(not included that you will need; a small cross head screw driver and PVA or wood glue to secure the window panes and door in place)



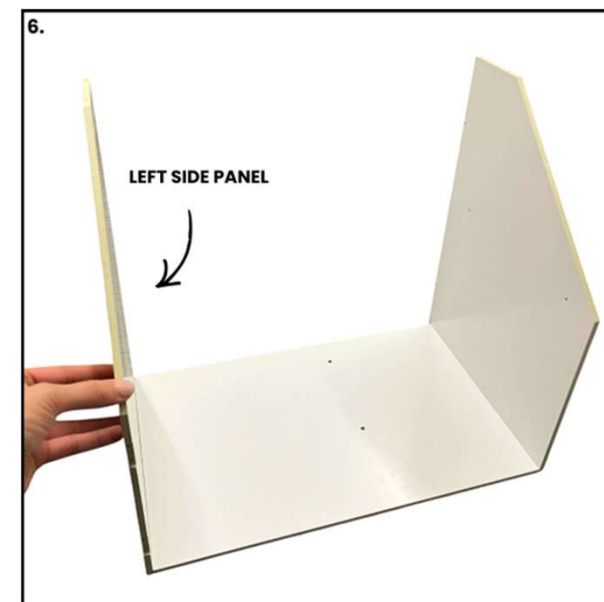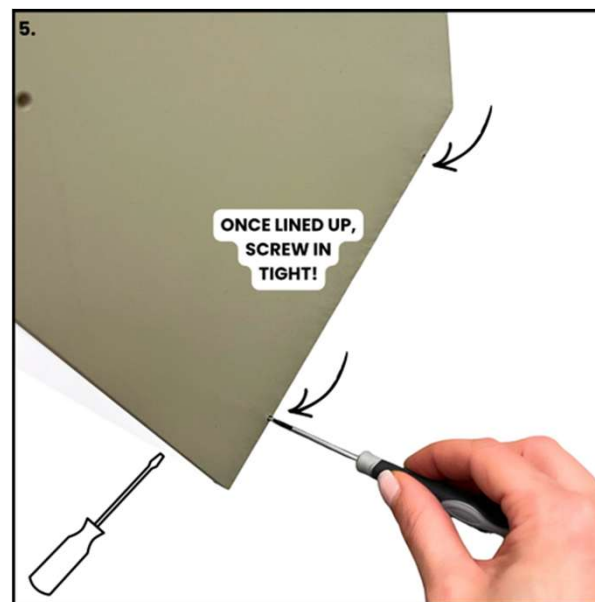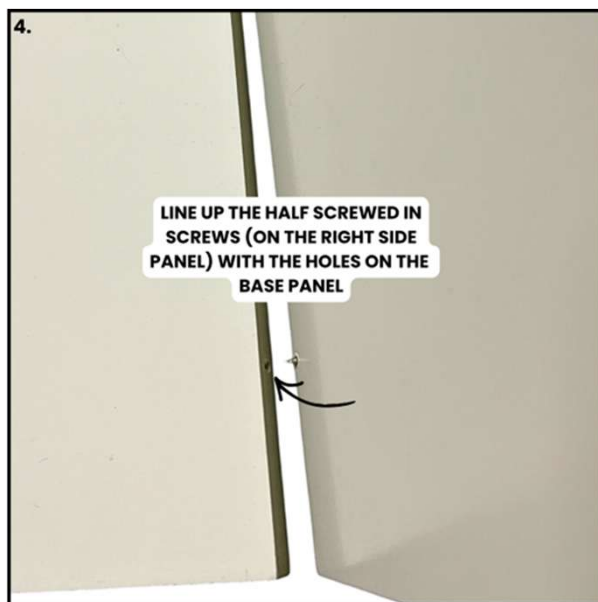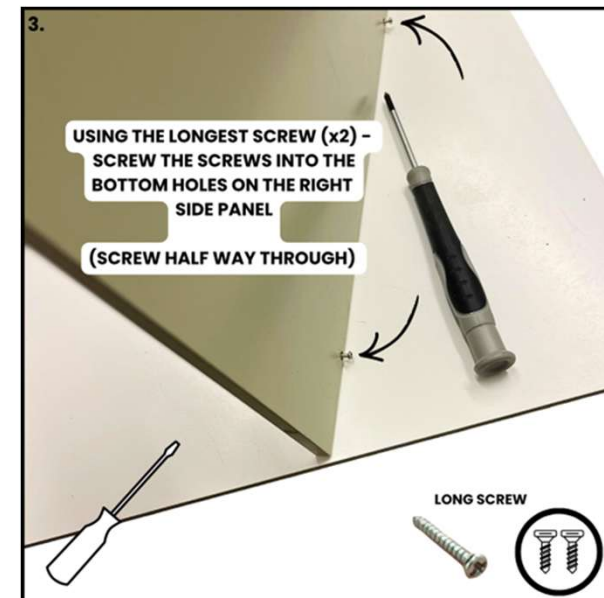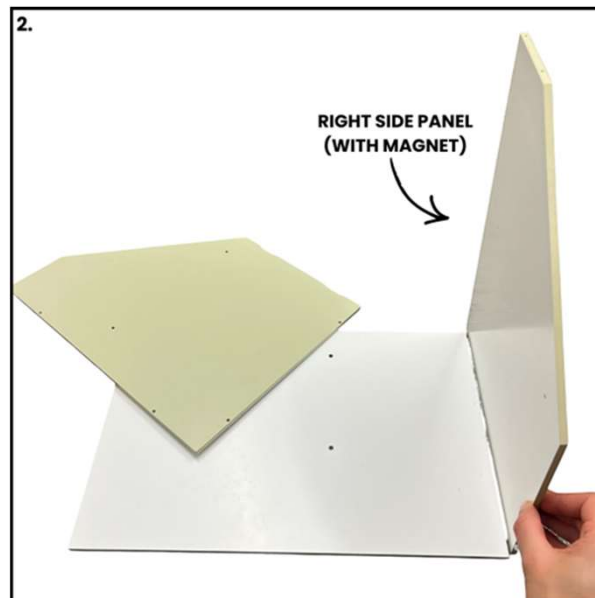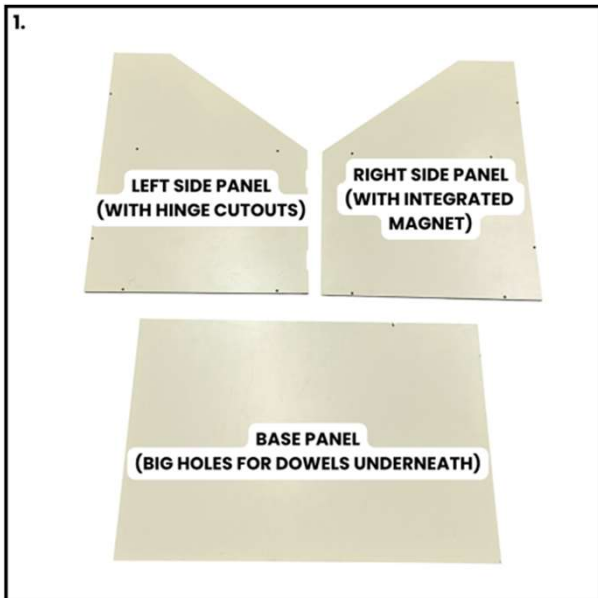

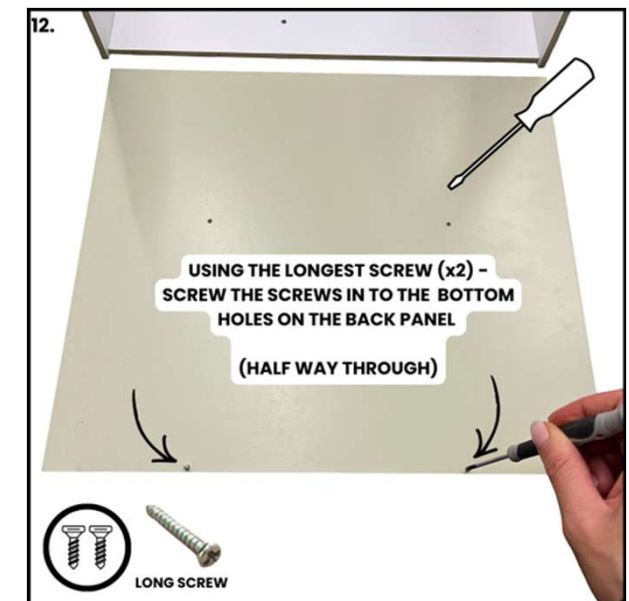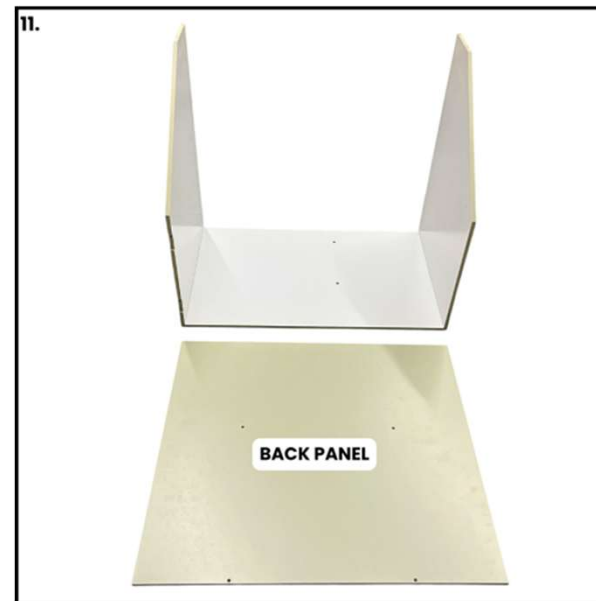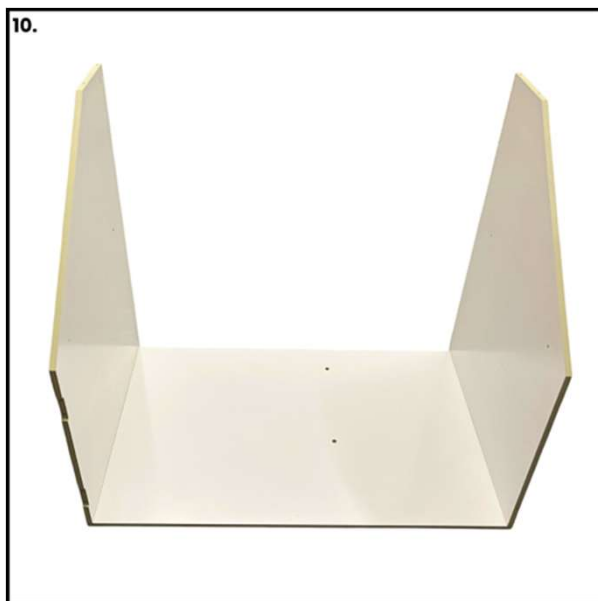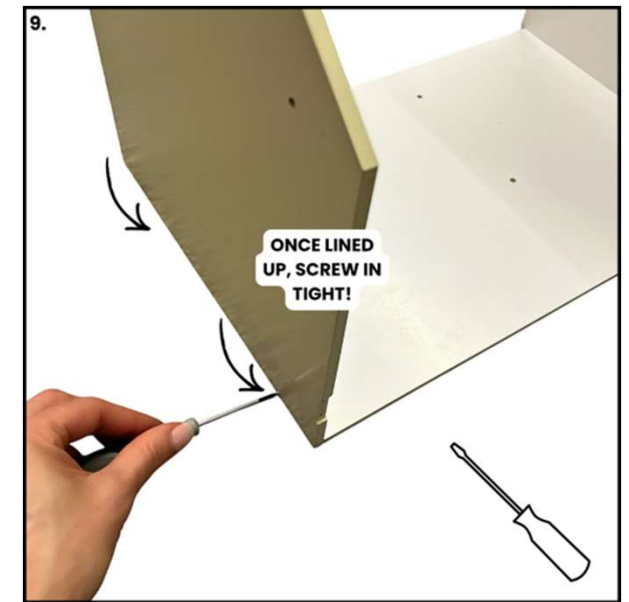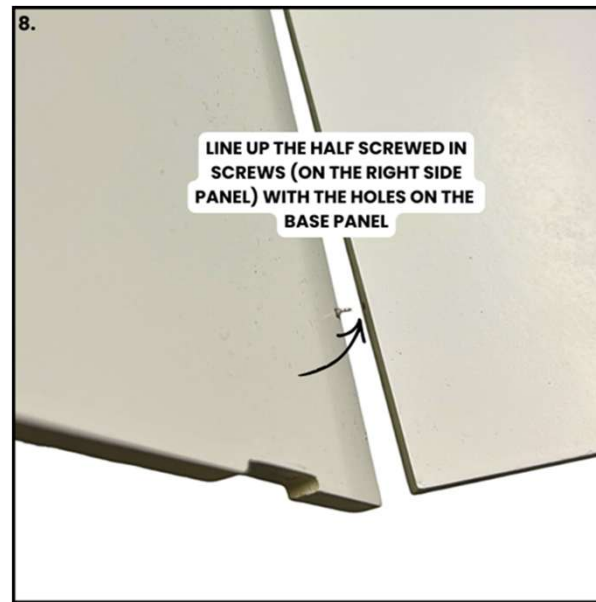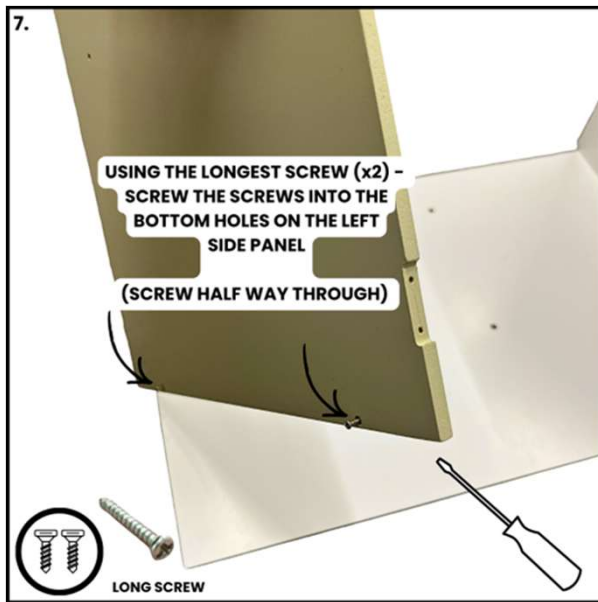

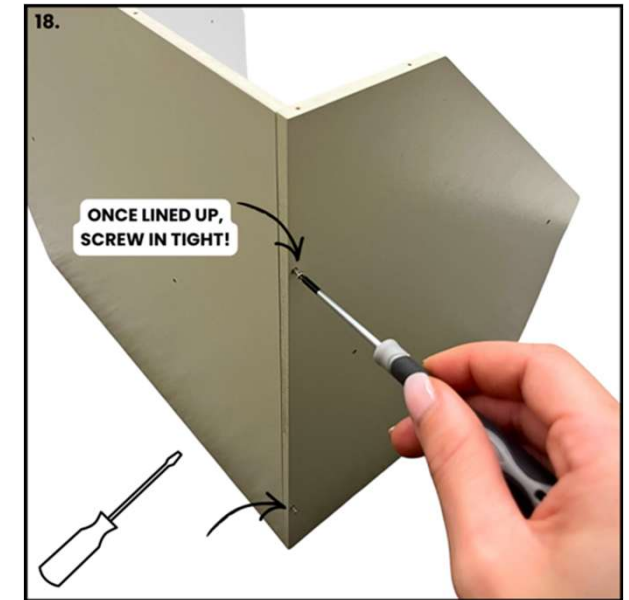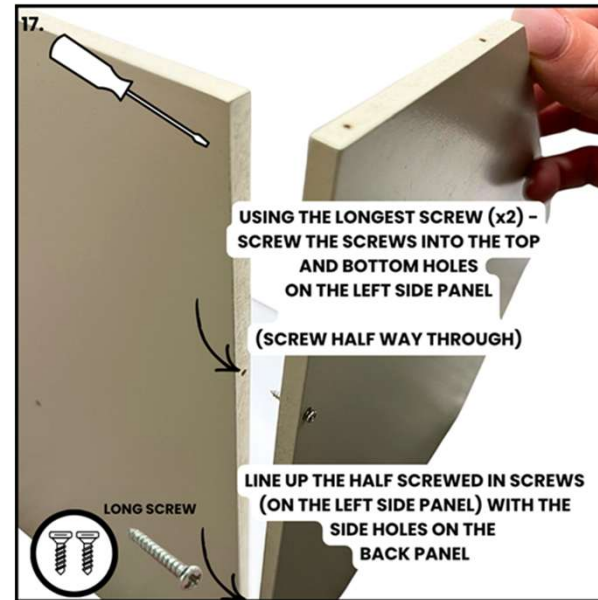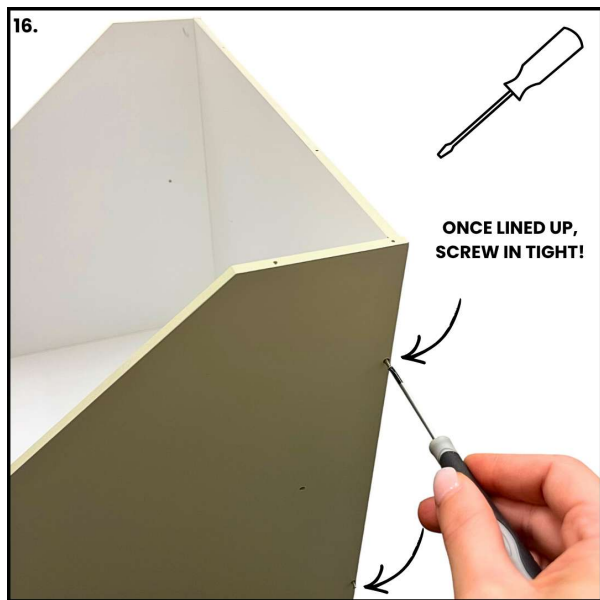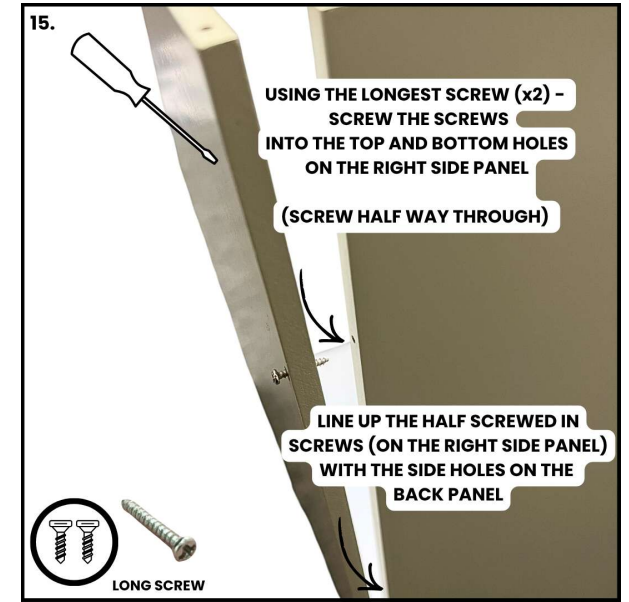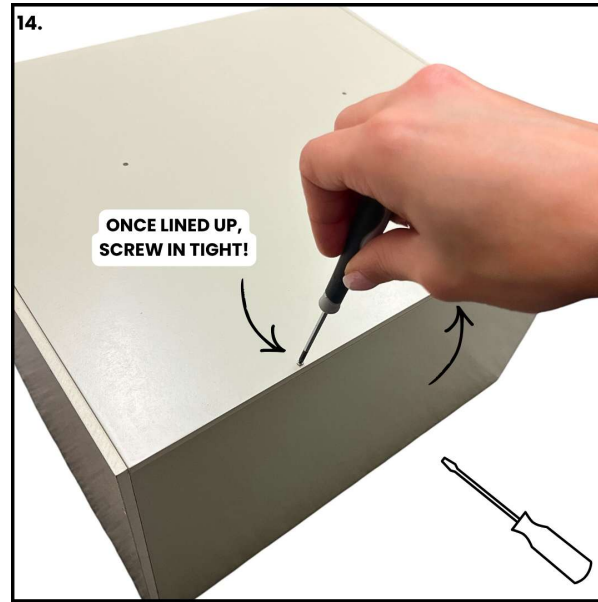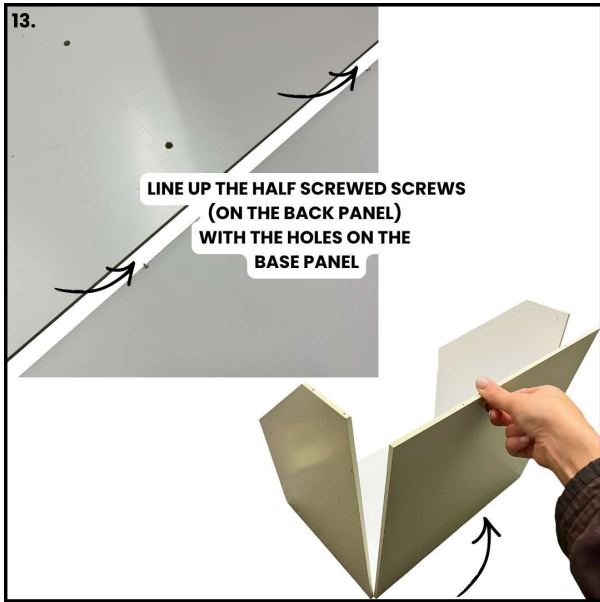

19.




20.




21.



22.






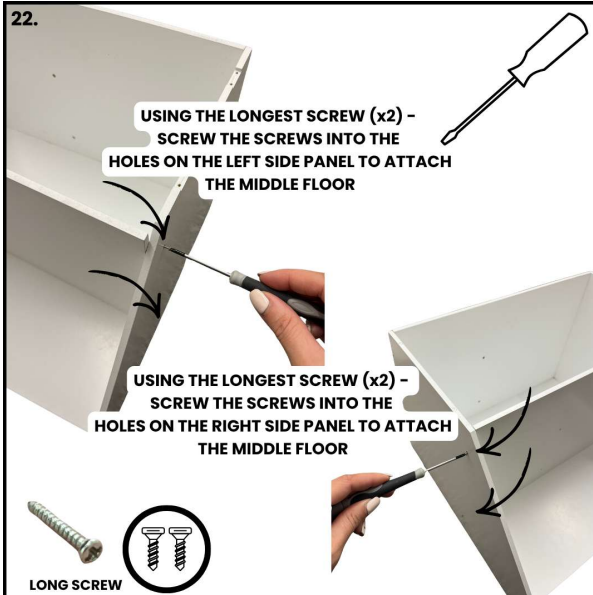


23.

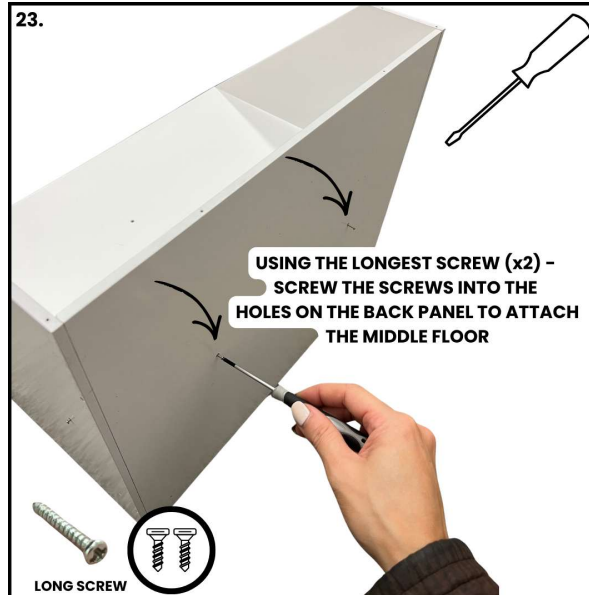

24.



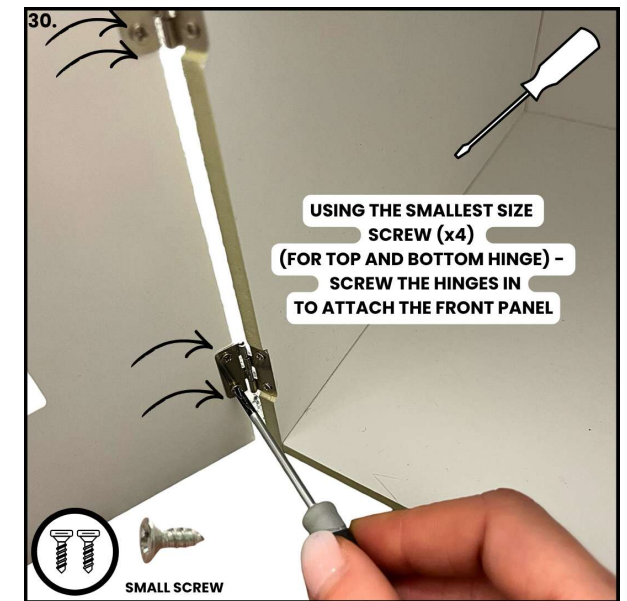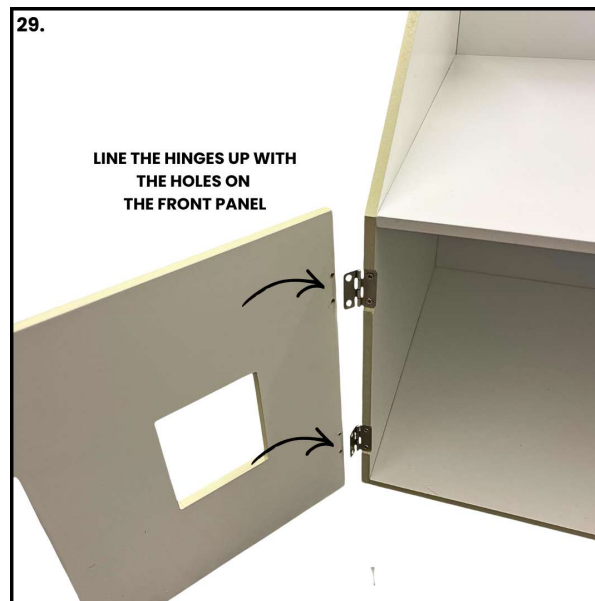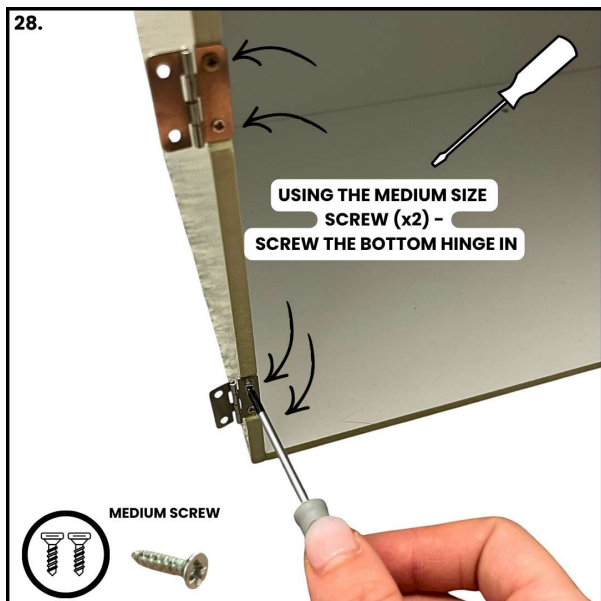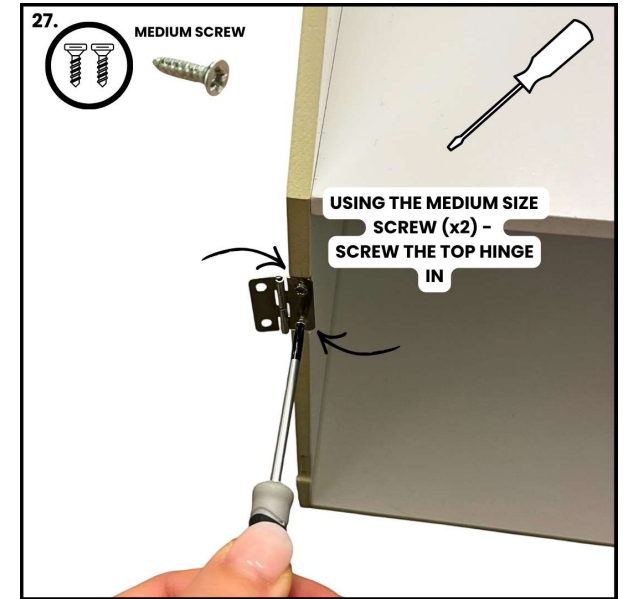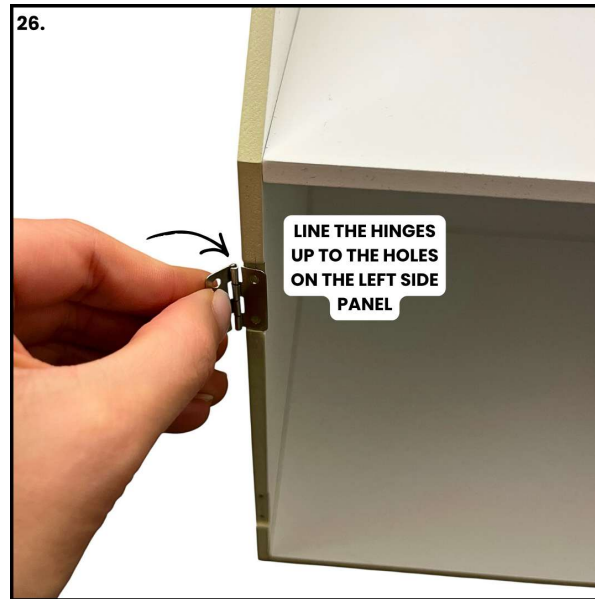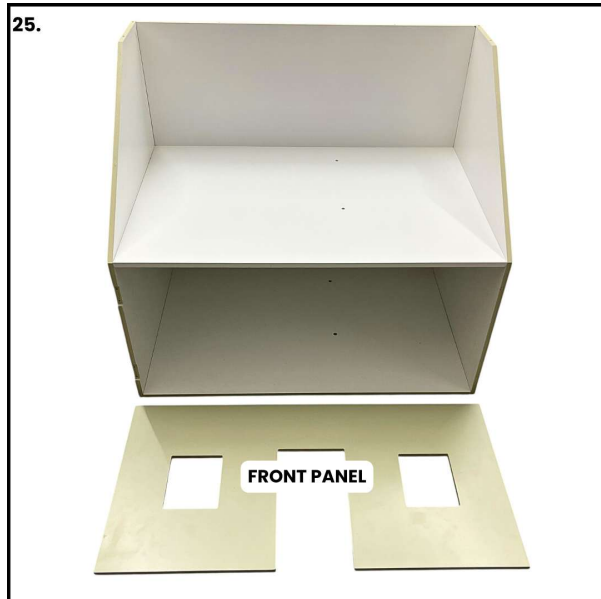

31.



32.




SMALL ROOF PANEL

33.




LONG SCREW

USING THE LONGEST SIZE
SCREW (x6) -
SCREW THE SCREWS IN TO THE SMALL ROOF PANEL
(SCREW HALF WAY THROUGH)

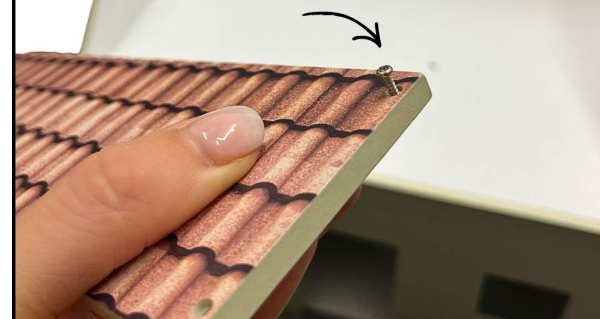


34.

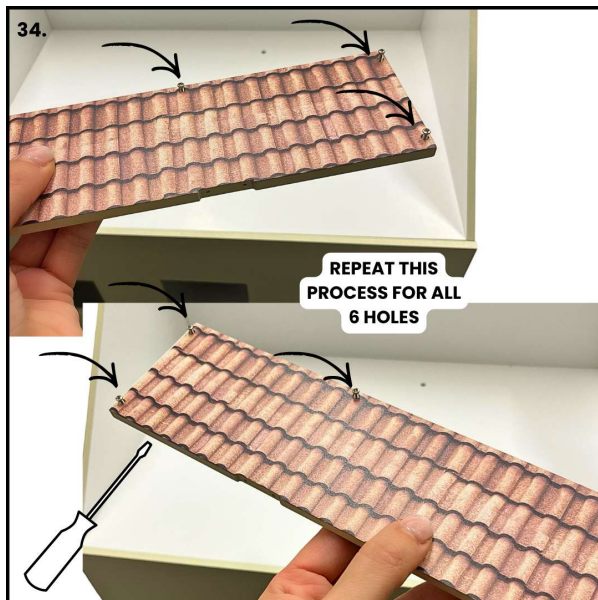


REPEAT THIS
PROCESS FOR ALL
6 HOLES

35.






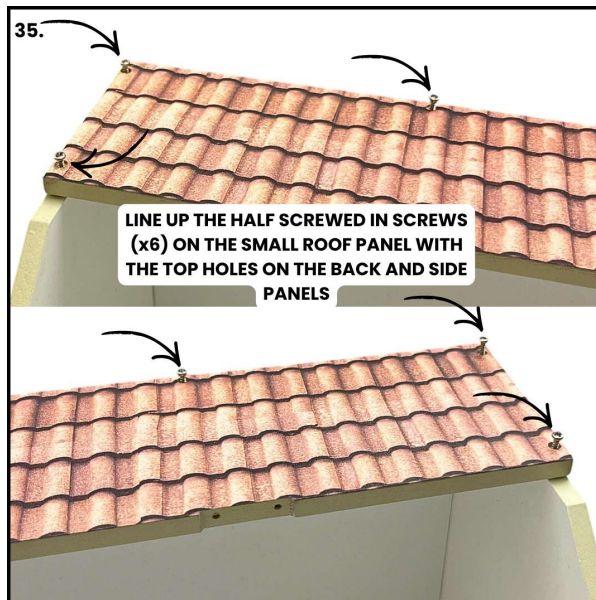








LINE UP THE HALF SCREWED IN SCREWS
(x6) ON THE SMALL ROOF PANEL WITH
THE TOP HOLES ON THE BACK AND SIDE
PANELS

36.

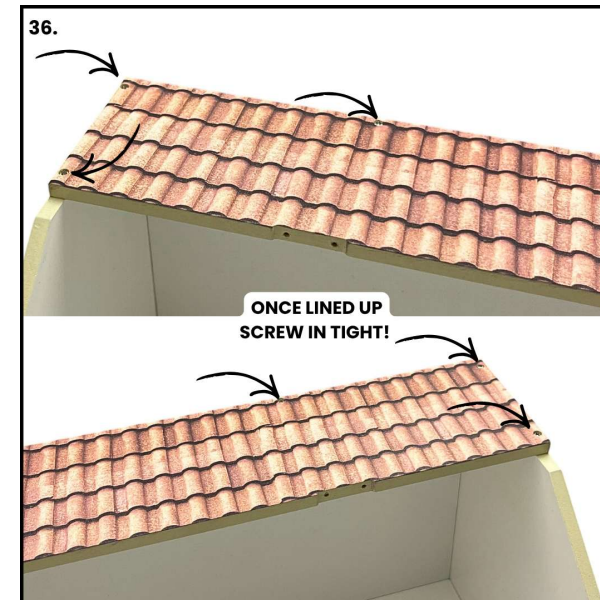


ONCE LINED UP
SCREW IN TIGHT!

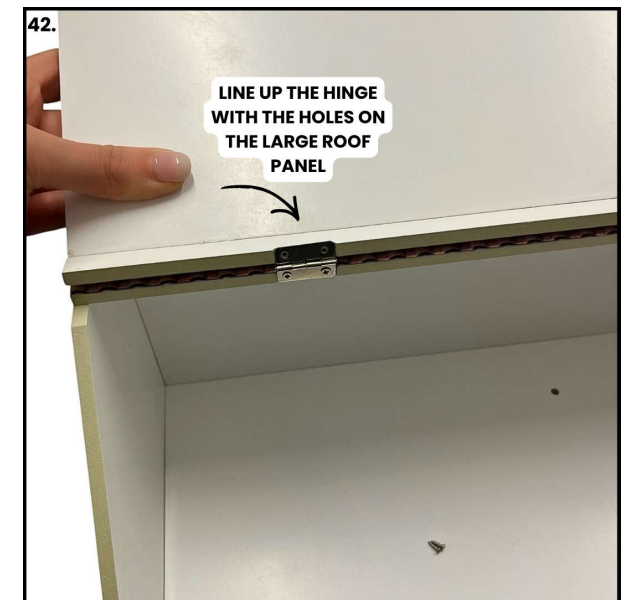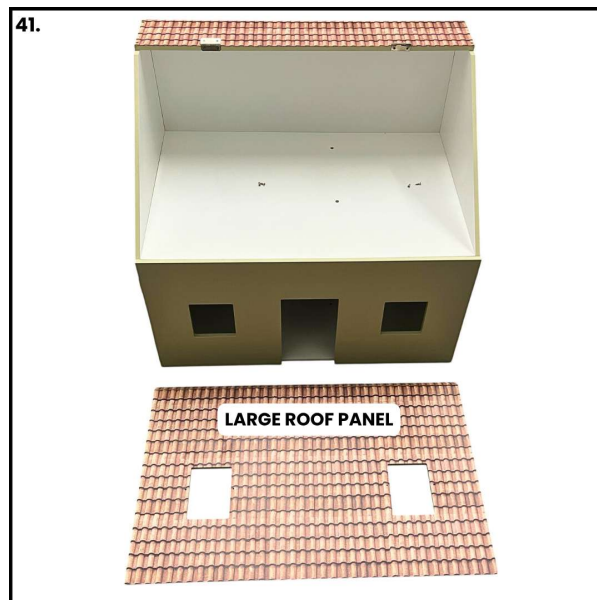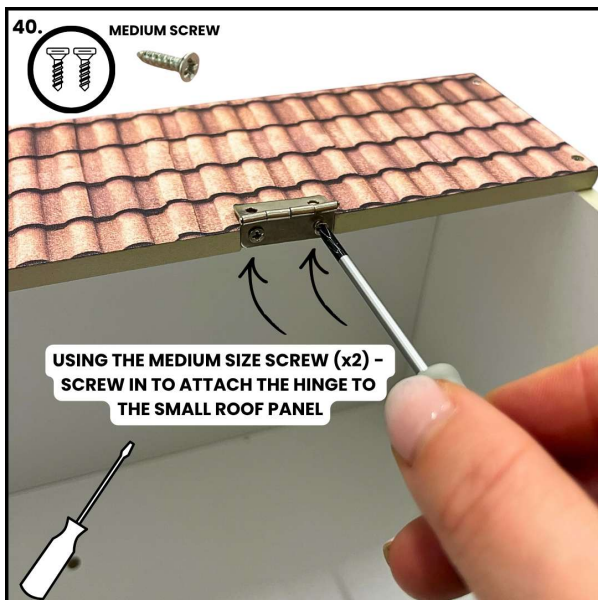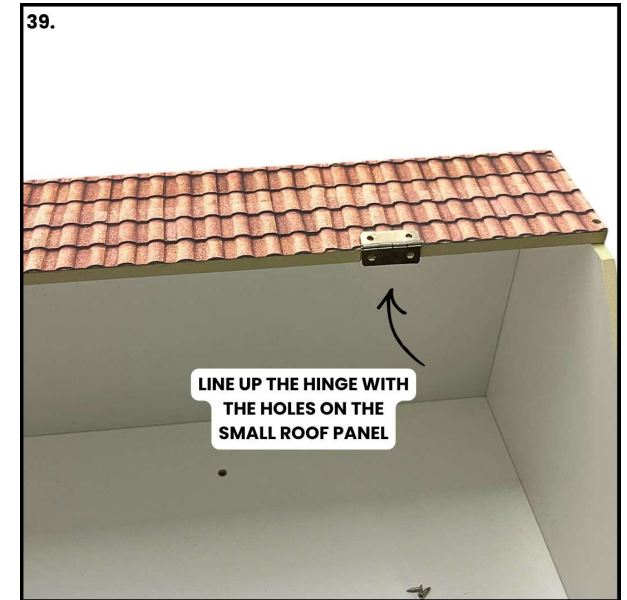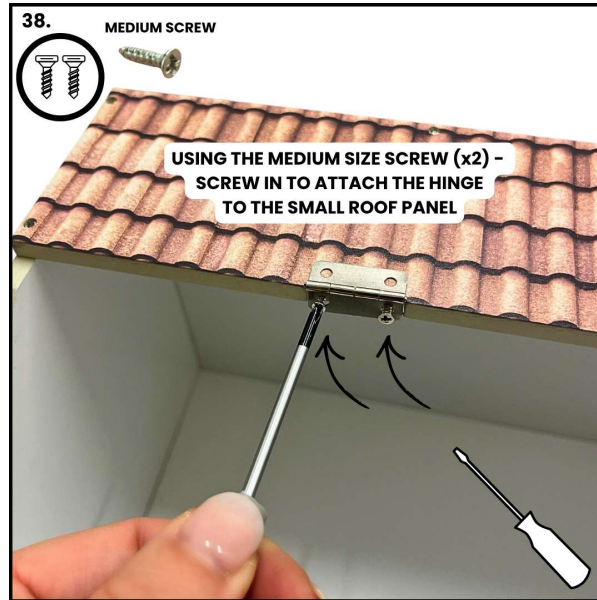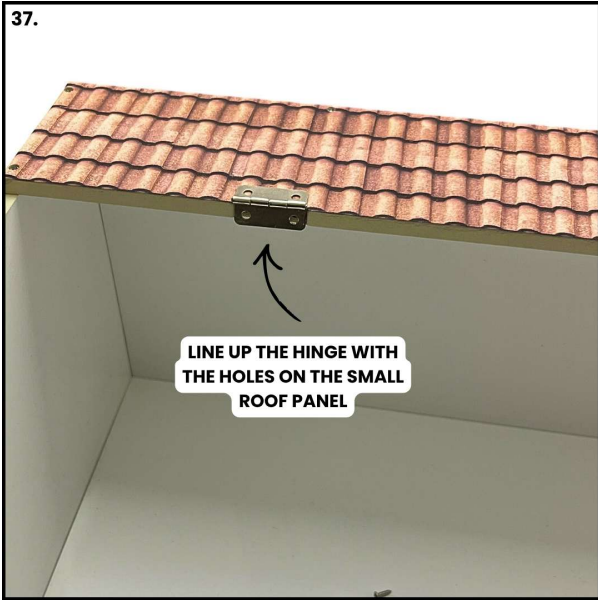

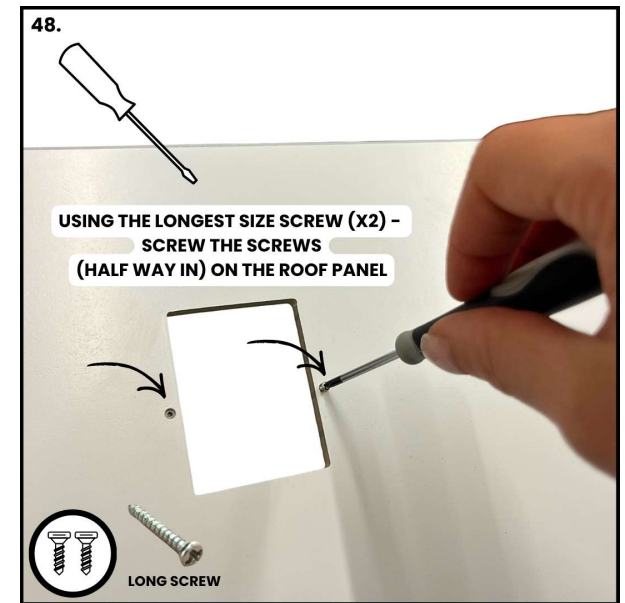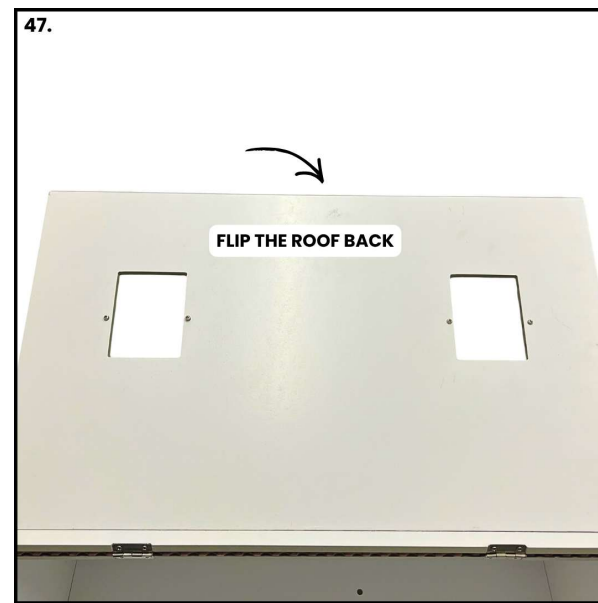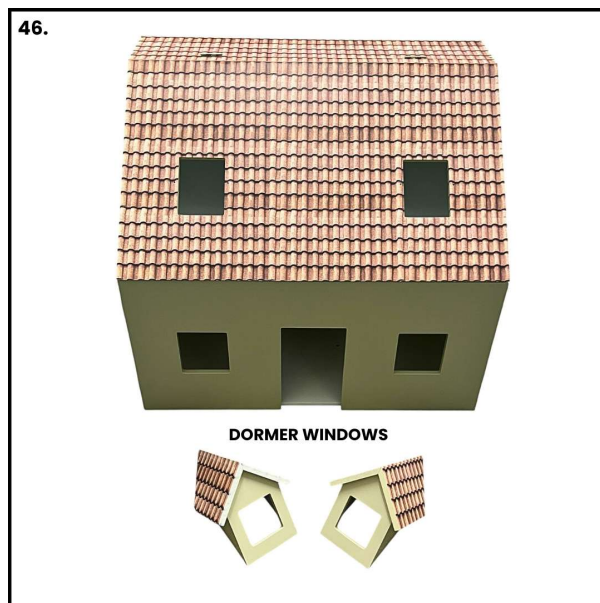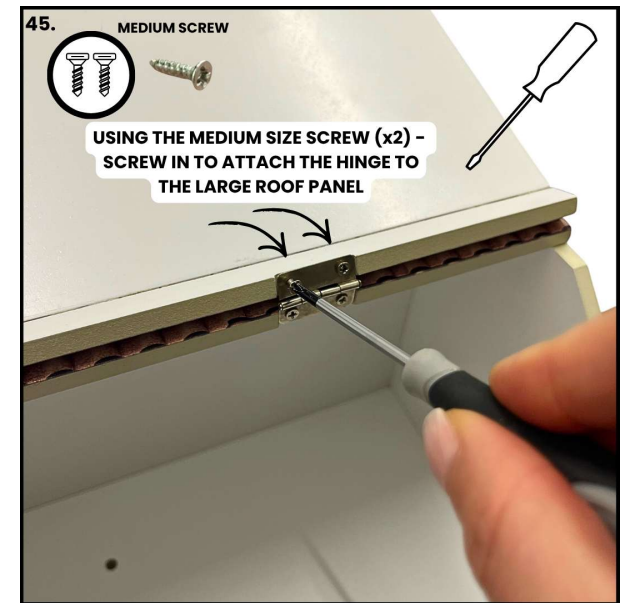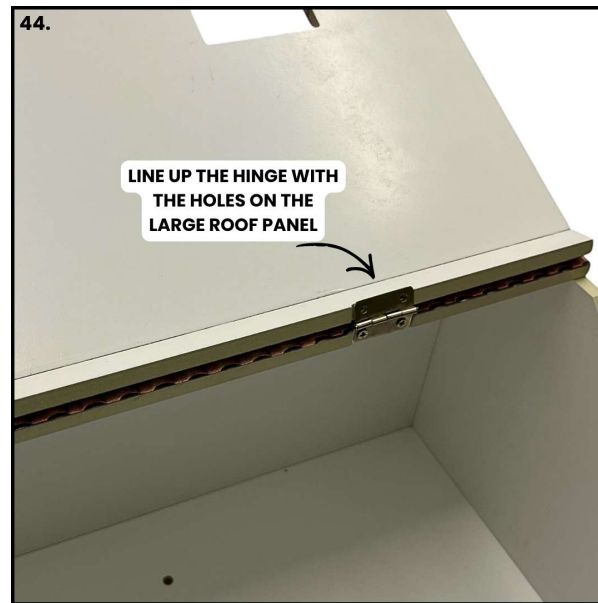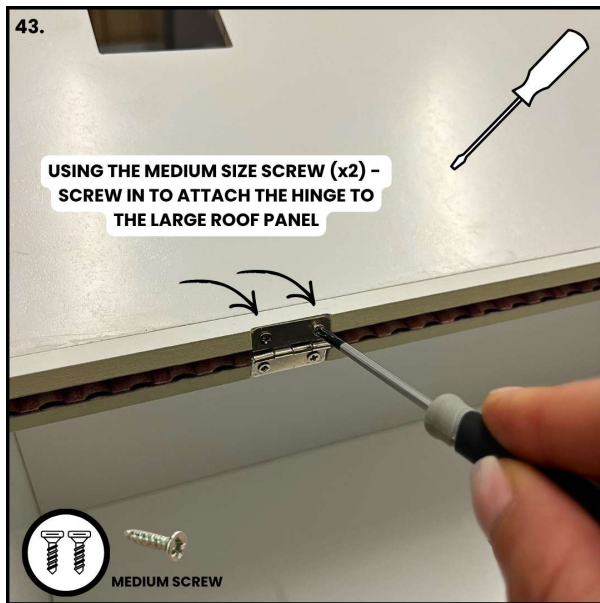


49.

FLIP YOUR ROOF BACK
AND LINE UP THE DORMER WINDOW
HOLES TO THE HALF SCREWED IN SCREWS (ON
THE LARGE ROOF PANEL)

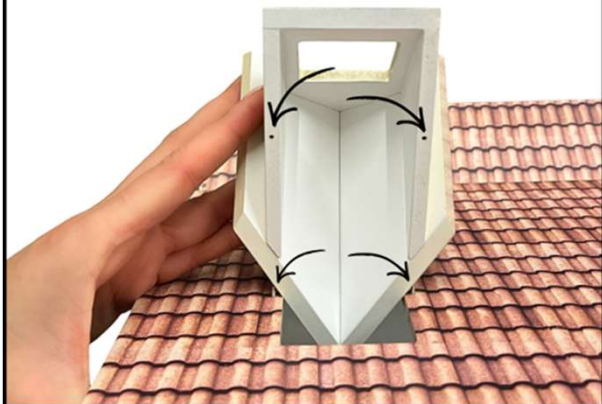

50.

LINE UP YOUR DORMER WINDOW

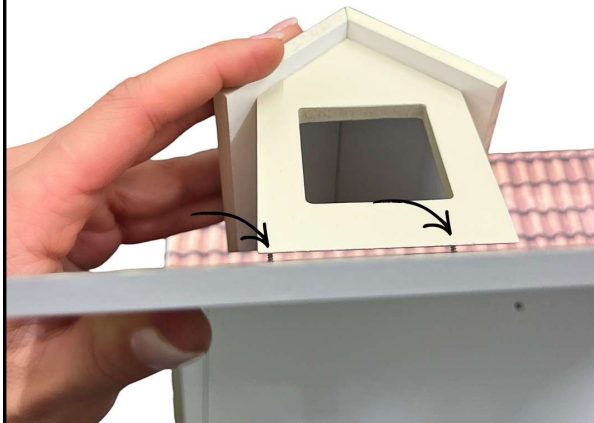

51.

ONCE LINED UP,
SCREW IN
TIGHTLY!




52.

LONG SCREW




USING THE LONGEST SIZE SCREW (X2) -
SCREW THE SCREWS IN
(HALF WAY IN) ON THE ROOF PANEL

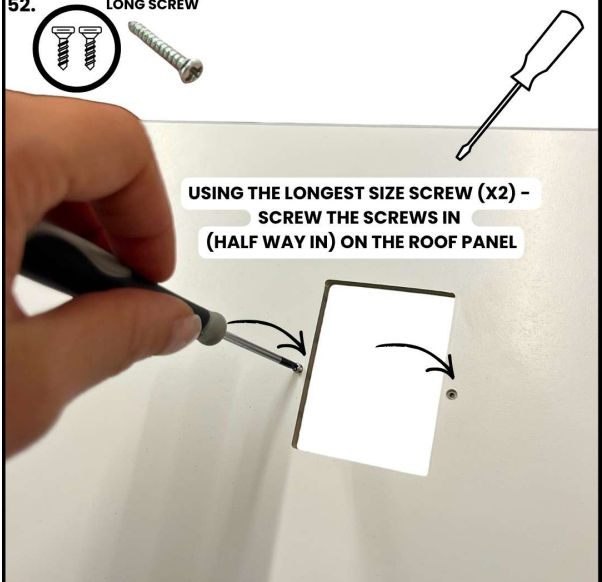


53.

FLIP YOUR ROOF BACK
AND LINE UP THE DORMER WINDOW
HOLES TO THE HALF SCREWED IN SCREWS (ON
THE LARGE ROOF PANEL)

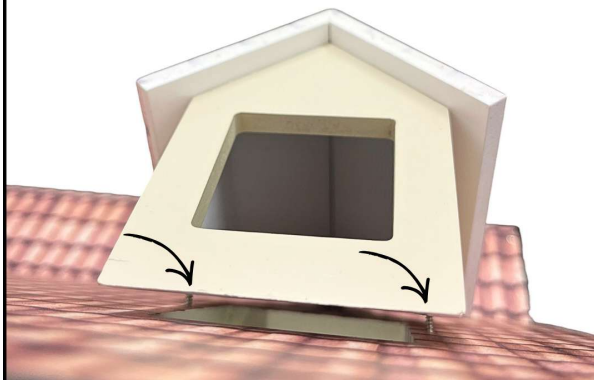

54.


ONCE LINED UP,
SCREW IN
TIGHTLY!

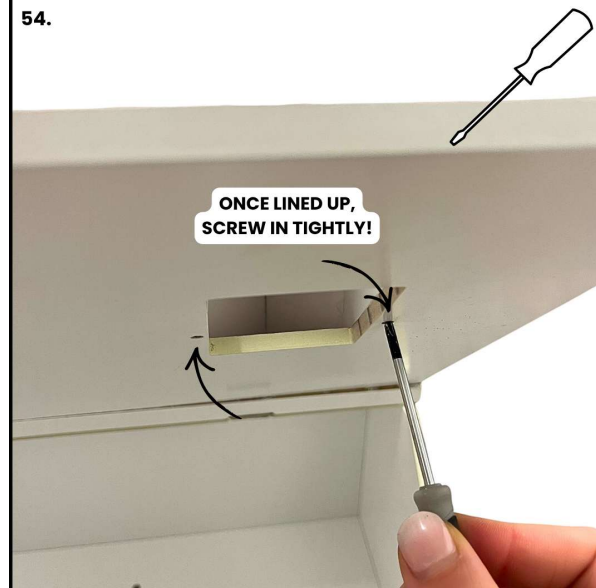


55.




56.

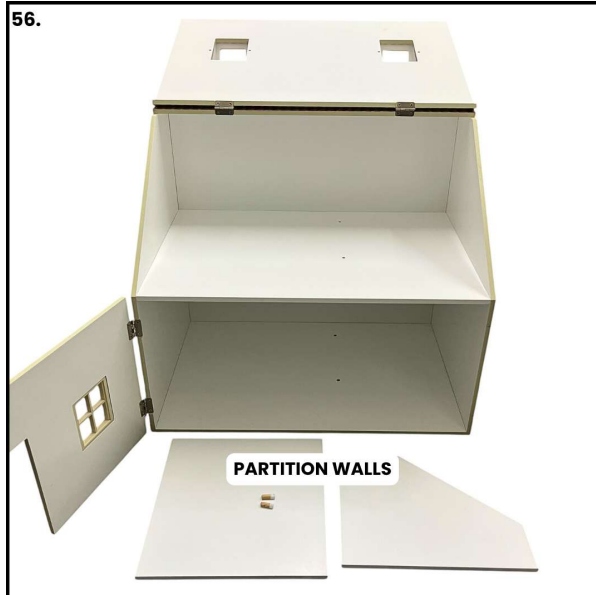


57.

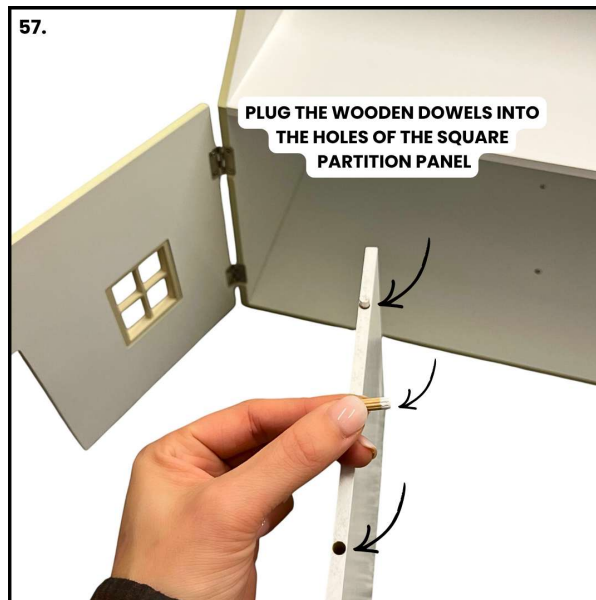


58.



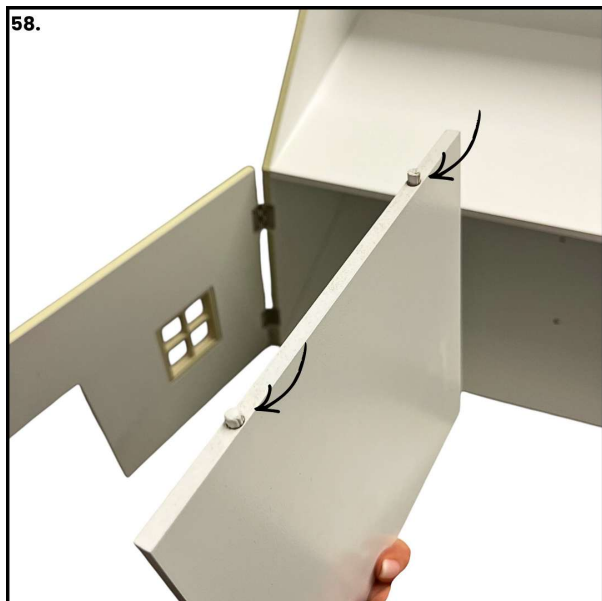


59.

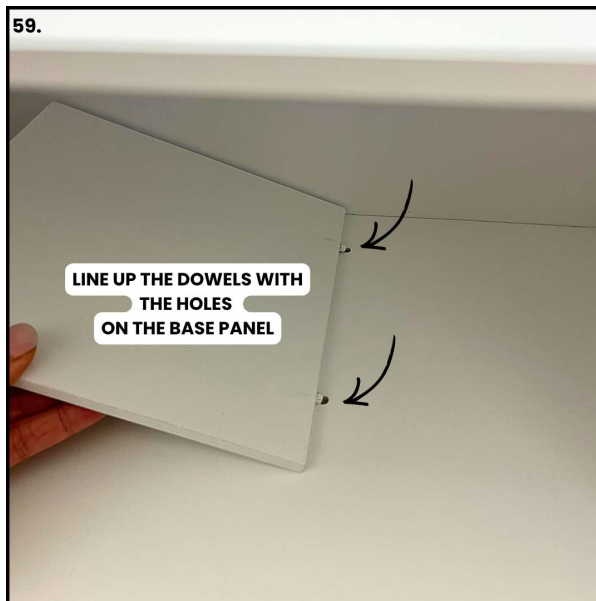

60.

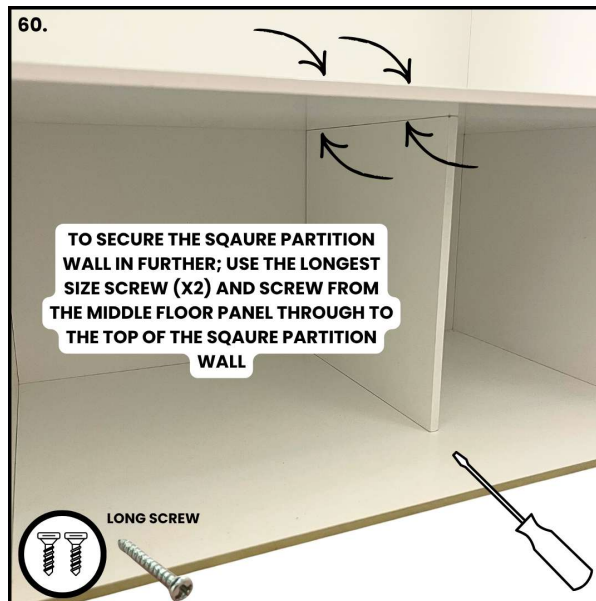

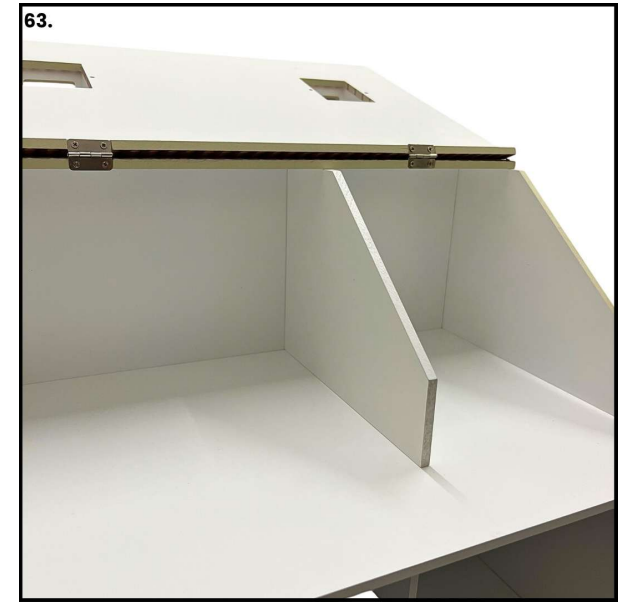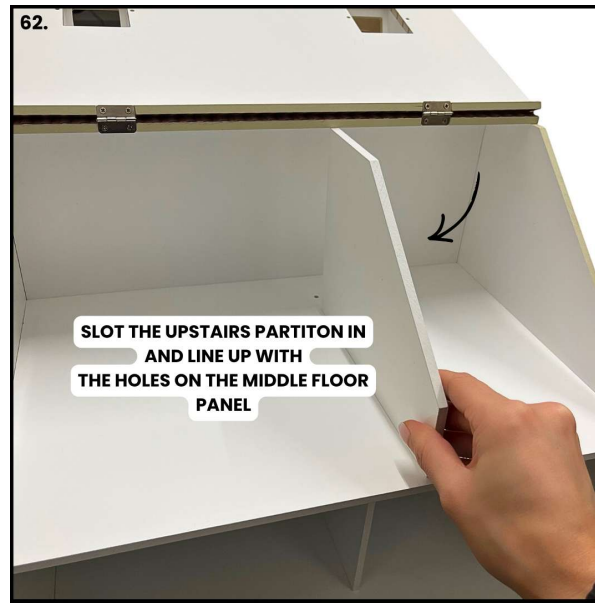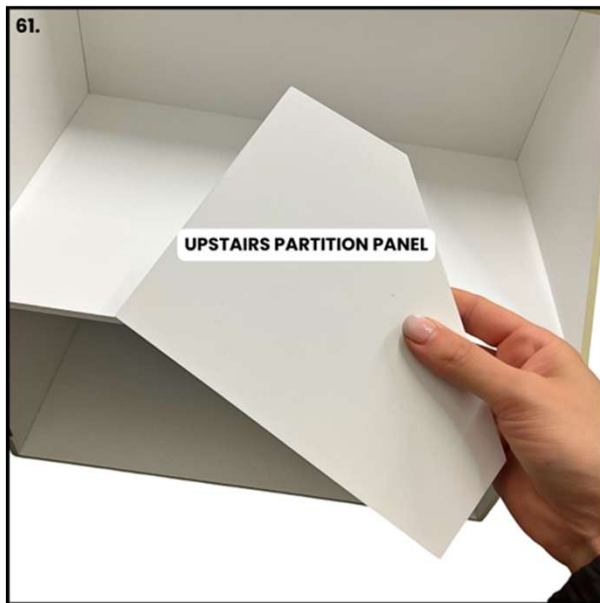



Thank you for supporting
our family business

We have a thriving worldwide
online community, so please join us!



Our miniatures are designed for collectors
and are not suitable for children under 14

Scan the QR code to watch our build tutorial on YouTube:



Safety Notice – Age Restricted Products

Warning: Choking Hazard – Small Parts

Please read: The products we sell are NOT toys. They are for adult collectors ONLY and are NOT suitable for children under 14 years of age.

Our miniature models are hobby products designed for adult miniaturists and collectors. NONE of the products available to purchase on our website are suitable for children under the age of 14. Most contain very small parts which constitute a choking hazard and should be always kept well out of reach of young children.



How to contact us:

Please send any queries or comments by email to info@minimumworld.com, by completing a Contact Us form, or by writing to us at the address below:

**Minimum World Limited, Unit B, Norfolk House
Sterling Close
Loddon Industrial Estate
Loddon, Norfolk
NR14 6UG**